


Setting for SMS Notification

Before Setting: Disable SIM PIN verification in mobile phone

1. [Hardware Setup] → [Network Setup] → [Event Notification Setup] → [SMS Setup] → [Network Setup] → [Event Notification Setup] → [SMS Setup]
 - Activate Notification Service
 - Input Mobile Phone Number

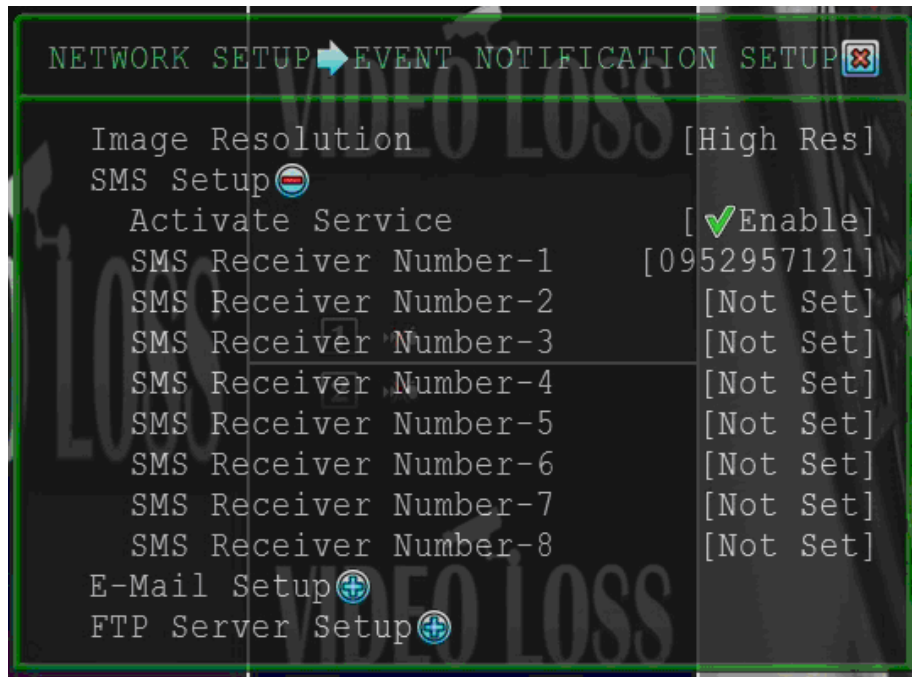

2. [Utility/Tools] → [Notification Filter Setup]
 - Select the events that need SMS notification

