


1. How to upgrade the Firmware by LAN.

1. Setup the DVR.
Menu -> 6. SYSTEM -> 6.2 Network
Enter DHCP On.
Enter "Return" button double.
2. Reboot automatically.
3. Menu-> 6. Setup-> 6.6. System Information
You can see the IP Address.
4. Please the DVR reboot.
and you check the IP address again.
5. Turn off the DVR.
6. Press the "ENTER+MENU"(Until the message "Firmware Upgrade by the network mode" appear, you should press "ENTER + MENU" continuously.)
7. Remove the adaptor
8. Connect the adaptor again.
9. You can see the " Firmware Upgrade By the network mode" and IP address" after beep two times.
10. Please install the "ethDownloader_V3.5.exe" and run.
11. Enter the IP Address and check "download only application image" at the "select download type"(Refer to pic1.jpg)

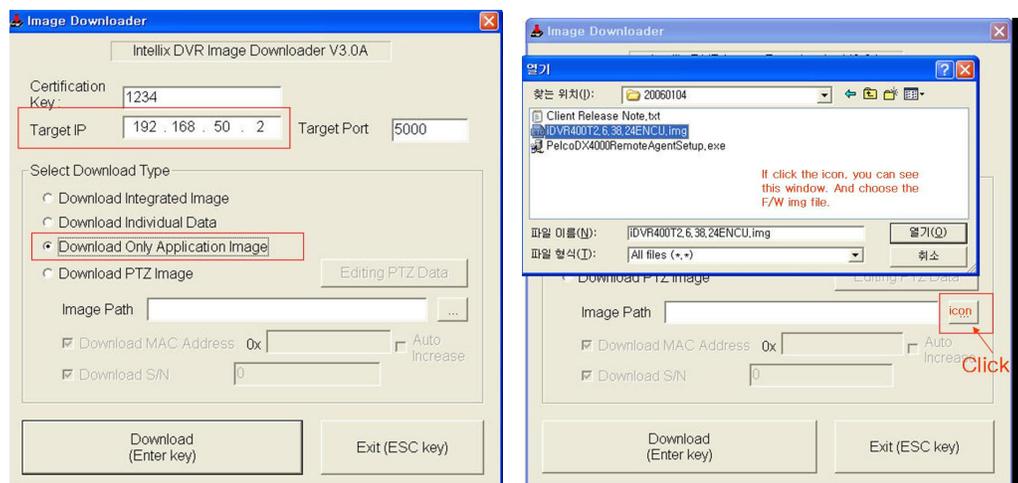


12. Select Image(iDVR400T3.X.X.X.img) at the "Image Path" (Refer to pic2.jpg)
(Other things leave as it is).
13. Enter the "Download."
14. You can see the firmware is downloaded at the DVR
15. If it finished, you remove the adaptor and connect again.
16. If it is like that, All finish.

2. How to upgrade by cross cable.

1. Turn off the DVR.
2. Pull out the adaptor.
3. Press "**SCR mode**" + "**Return**" button simultaneously. (Until the message "Firmware Upgrade by the network mode" appear, you should press "SCR mode + Return" continuously.)
4. While press two buttons simultaneously, connect the adaptor again.
5. You can see the " Firmware Upgrade By the network mode" and IP address"**192.168.0.2**" after beep two times.
6. Please install the "ethDownloader_V3.5.exe" and run.

7. Enter the IP Address and check "download only application image" at the "select download type" (Refer to pic1.jpg)

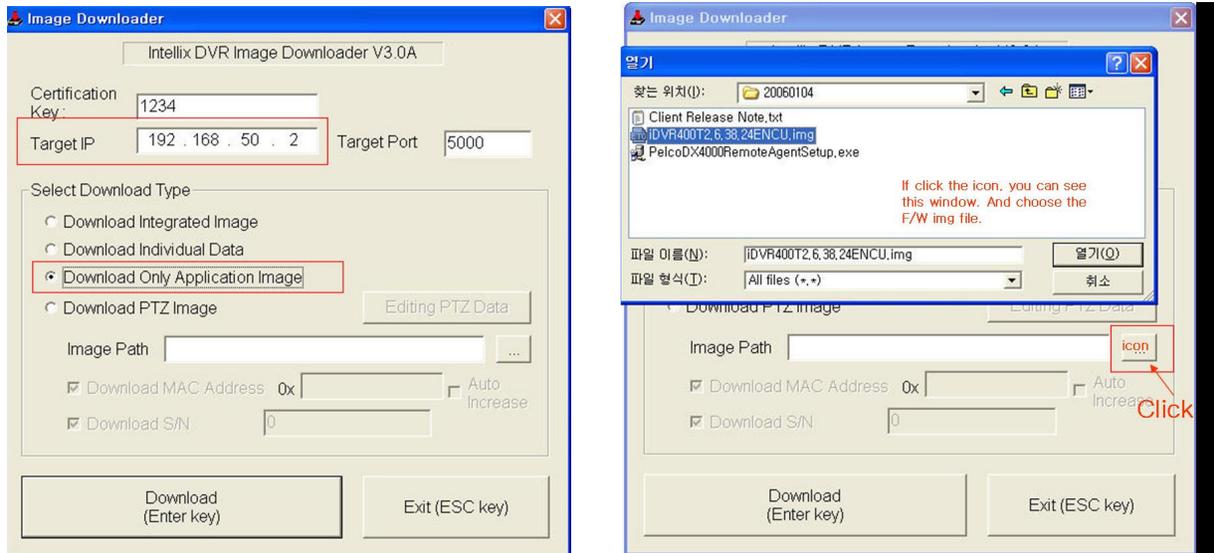

8. Select Image(iDVR400T3.X.X.X.img) at the "Image Path" (Refer to pic2.jpg)
(Other things leave as it is).

9. Enter the "Download."

10. You can see the firmware is downloaded at the DVR

11. If it finished, you remove the adaptor and connect again.

12. If it is like that, All finish.