

Dear Customer!

By selecting this VC product you have chosen a professional device, which guarantees highest possible quality and reliability.

Please read the following instructions carefully before commissioning the product in order to be able to take full advantage of all quality features regarding this product line.

Digital Video Recorder

Art. Nr. 12116

Art. Nr. 12216

Art. Nr. 12416

Table of Contents

Menu System Overview	11
< Key Usage >	11
□ Key Usage in OSD Menu	11
□ Key Usage in Virtual Keyboard	12
System Setup	14
< Version >	14
□ Model Name	14
□ Hardware Version	14
□ Software Version	15
□ Software Upgrade via Local Device	15
□ Software Upgrade via Internet	15
< Language >	16
< Date / Time >	16
□ Date / Time Setting	16
□ Time Zone	16
□ Date / Time Display	17
□ Date Display Mode	17
□ Time Display Mode	17
□ Date/Time Order	17
□ Daylight Saving Time	17
□ Network Time Protocol Setup	18

< Unit Name >	18
< Password >	19
☐ Setup Admin / User Password	19
☐ Enable Password	19
☐ Load Factory Password	19
< Network Setup >	20
☐ LAN Select	20
☐ LAN Setup	21
- DHCP	21
- IP	21
- Netmask	22
- Gateway	22
- DNS	22
- PPPoE Account	22
- PPPoE Password	23
- PPPoE Max Idle	23
- Connect At Booting	24
- Network Restart	24
☐ Wireless Network Setup	24
- Operating Mode	24
- Choose A Wireless Network	25
- Network Name (ESSID)	26
- Network Authentication	27
- Data Encryption	27
- Data Encryption Level	27
- Key Index	28
- Enter Network Key	28
- Network Setting	28
- Connect	29
☐ Dial-in Setup	29
- Dial-in Service	30
- Dial-in Account	30
- Dial-in Password	31

- Server IP	31
- Client IP	31
- Dial-in Idle Time	31
- Dial-in Max Time	32
☐ <i>Dial-out Setup</i>	32
- Dial-out DHCP	32
- Dial-out IP	33
- Dial-out Netmask	33
- Dial-out Gateway	33
- Dial-out DNS	33
- Phone Number	33
- Dial-out Account	34
- Dial-out Password	34
- Dial-out Idle Time	35
- Dial-out Max Time	35
- Connect	35
☐ <i>Dial Port Selection</i>	35
☐ <i>Trigger Port</i>	35
☐ <i>Email Address</i>	36
☐ <i>SMTP Setup</i>	36
- Email via SMTP	36
- SMTP Server	36
- SMTP Port	37
- SMTP Account	37
- SMTP Password	38
☐ <i>DDNS Setup</i>	38
- Enable DDNS	38
- Host Name	38
- DDNS Port	39
- Submit/ Update	39
- ezDDNS	39
< RS485 Setup >	40
☐ <i>Unit ID</i>	40

☐ Baud Rate	40
☐ Bits	40
☐ Stop	40
☐ Parity	40
< Audio Output/ Key Beep >	41
< IP Camera Support >	42
Monitor Setup.....	43
< Show Camera Title >	43
< Title Position>	43
< Monitor Brightness >	44
< Monitor Contrast >	44
< Monitor Chrominance >	44
< Screen Center Adjust >	44
< Show Color Bar >	45
< VGA Resolution >	45
Camera Setup.....	46
< Analog Camera >	47
☐ Analog Camera Select	47
☐ Dome Protocol.....	47
☐ Dome ID	47
☐ Camera Title	47
☐ Covert.....	48
☐ Termination.....	48
☐ Brightness	49
☐ Contrast.....	49
☐ Saturation	49
☐ Hue.....	49

□ <i>Audio Association</i>	49
< IP Camera >	50
□ <i>IP Camera Select</i>	50
□ <i>IP Camera Title</i>	50
□ <i>Hostname/IP</i>	51
□ <i>Model</i>	51
□ <i>Connection Setup</i>	51
- Account	51
- Password	51
- Management Port	51
- Streaming Port	51
- Streaming Format	52
- Streaming Protocol	52
□ <i>Device Setup</i>	52
- Product ID	53
- Image Resolution/ FPS/ Compression/ Quality	53
- Sharpness/ Brightness/ Contrast/ Saturation/Hue	53
- Apply	53
□ <i>Activated</i>	54
□ <i>Status</i>	54
Record Setup	55
< Record Mode >	55
< Schedule Setup >	58
□ <i>Day / Night Time Start/ End</i>	58
□ <i>Weekend Schedule</i>	58
□ <i>Weekend Start / End</i>	59
< Preset Record Configuration >	59
< Per Camera Configuration >	61

□ Camera Select.....	61
□ Normal PPS.....	61
□ Normal Qlty	61
□ Event Max PPS	61
□ Event Qlty.....	62
□ Event Active	62
< ezRecord Setup >	62
< Data Lifetime >	63
< Pre-Alarm Recording >	63
< Circular Recording >	64
< Audio Recording >	64
< Purge Data >	64
□ Purge All Data	64
□ Purge All Event Data	64
□ Purge Event Before	64
□ Start to Purge	65
Sequence Setup	66
< Main / Call Monitor Dwell >	66
< Main / Call Monitor Schedule >	66
Event Setup	68
< Internal Buzzer >	68
< Event Icon >	68
< Email Notice >	68
< Email Attachment >	69
< SMS Setup >	69
□ SMS Notice	70
□ PIN Authentication	70
□ PIN Code Setup	70

□ Receiver Number	70
□ Send Test Message	70
□ Port Selection	70
< Alert Notification Setup >	71
- Alert Configuration Set	71
- Alert Notification	71
- Alert IP	71
- Alert Port	71
- Alive Interval	71
< Event Full Screen >	72
< Event Duration >	72
< Per Channel Config >	72
□ Channel Select	72
□ Video Loss Detect	72
□ Motion Detect	72
□ Detection Config	73
- Detected Area Setup	73
- Sensitivity	73
- Area Threshold	74
- Detected Area Percentage	74
□ Alarm In	74
□ Alarm Out	74
Database Setup	75
< Total / Free Size of HDD >	75
< Avail. REC Time >	75
< Internal / External Disks >	75
Configuration	77
< Load Factory Default >	77
< Import Configuration >	77
< Export Configuration >	78
□ Copy Destination	78

□ Configuration Name	78
□ Begin Export.....	78
Video Export.....	79
< Select Device >	80
< Select Channel >	80
< From / To Time >	80
< Select Events >	81
< Data Type >	81
< Export Format >	81
< Digital Signature >	81
< Erase Disc >	82
< Begin Export >	82
Text Setup.....	83
< Text Function >	83
< Text Overlay >	83
< Exception Text Setup >	83
□ Exception No.	84
□ Trigger	84
□ Exception String	84
□ By Numerals.....	84
< Input Setup >	85
□ Port Selection	85
□ Input source.....	86
□ Camera Selection	86
□ Text Filter.....	86
□ Manual Filter Setup	86
□ Input Process	87
□ Text Baud Rate.....	87

☐ <i>Text Bit</i>	87
☐ <i>Text Stop</i>	87
☐ <i>Text Parity</i>	87
Shutdown	88
Appendix A: Technical Specifications	89
Appendix B: Record Duration	91
Appendix C: Dial-up Connections via Modem	93
Establishing Dial-in Connection	93
Establishing Dial-out Connection	97
Appendix D: Verifying Digital Signature	103
Appendix E: Recommended HDDs	107
Appendix F: Remote Control	108
Appendix G: ezRecord Diagram Sample	110
Appendix H: Search Recorded Data by Text	113
Appendix I: Operating USB Mouse on Your DVR	115
Appendix J: HDD COPY TOOL (EXT2IFS)	116
Installing EXT2IFS to Your Computer	116
Start Playing the *.drv file.....	119
To Remove the HDD from Your Computer	120

Menu System Overview

The detailed functions and settings of **MPEG-4 DVR** series can be set using the hierarchical OSD menu. This chapter particularizes the items and options in the OSD menu.

To enter the Main Menu, press MENU and then enter Administrator or User password. The default passwords are shown in the following table. The same default passwords are used for entering the remote viewing software **DVRRemote**.

Administrator Password	User Password
1 2 3 4	4 3 2 1□

It is strongly suggested to change the passwords to prevent unauthorized access to the unit. After entering the correct password, the Main Menu is displayed.

Main Menu
1. System Setup
2. Monitor Setup
3. Camera Setup
4. Record Setup
5. Sequence Setup
6. Event Setup
7. Database Setup
8. Configuration
9. Video Export
10. Text Setup
11. Shutdown

< Key Usage >

The key usage differs under the OSD Setup Menu and in the Virtual keyboard, which can be seen while setting some items, such as Unit Name and IP Address, in the OSD Setup Menu.

■ *Key Usage in OSD Menu*

Below introduce some keys used frequently to set up the unit via the OSD Setup Menu.

<Direction Key>

In the OSD menu, Direction keys are used to move the cursor to previous or next fields. UP / DOWN are used to change the value in the selected field.

<ENTER>


In OSD menu or selection interface, press the key to make selection or save settings.

<ESC>

Press to cancel or exit from certain OSD menu without saving any changes.

■ **Key Usage in Virtual Keyboard**

A virtual keyboard shows when edit the settings, such as camera title, e-mail address, etc. The virtual keyboard displays as follows.

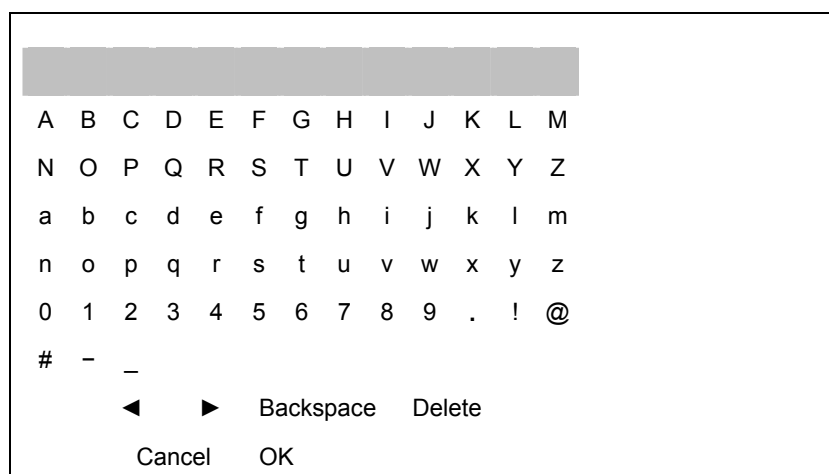**<To input characters>**

Move the cursor by pressing Direction keys and press ENTER to select characters.

<To move the cursor in title entry>

Press MODE and LEFT / RIGHT simultaneously to move the cursor to left / right in the title entry.

<To delete previous character>

Select <Backspace> and press ENTER, or press MODE and UP simultaneously.

<To delete current character>

Select <Delete> and press ENTER, or press MODE and DOWN simultaneously.

<To exit the virtual keyboard>

Select <OK> and press ENTER to save the settings and exit, or press ESC to exit without saving changes

System Setup

Select <System Setup> from the Main Menu and press ENTER to enter the System Setup menu.

Main Menu	
1. System Setup	
2. Monitor Setup	
3. Camera Setup	
4. Record Setup	
5. Sequence Setup	
6. Event Setup	
7. Database Setup	
8. Configuration	
9. Video Export	
10. Text Setup	
11. Shutdown	

System Setup	
1. Version	
2. Language	English
3. Date/Time	
4. Unit Name	DVR
5. Password	
6. Network Setup	
7. RS485 Setup	
8. Audio Output/Key Beep	
9. IP Camera Support	0

The items in the System Setup menu are described in the following sections.

< Version >

The Version menu allows user to view system information such as hardware and software version. From the System Setup menu, select <Version> and press ENTER. The following menu is displayed. The first three items, including <Model Name>, <Hardware> and <Software>, are for read only, which CANNOT be changed.

Version	
Model Name	****
Hardware	C3-A1-A8
Software	XXXX-XXXX-XXXX-XXXX
Software Upgrade via Local Device	
Software Upgrade via Internet	

The items in this menu are described in the following subsections.

■ **Model Name**

This item shows the model name of the unit.

■ **Hardware Version**

The item identifies the hardware version for this unit.

■ **Software Version**

The item identifies the software version installed on this unit.

■ **Software Upgrade via Local Device**

This item is used for updating the **MPEG-4 DVR** series software by local device. The menu is displayed as follows.

Software Upgrade via Local Device	
Upgrade Version xxxx-xxxx-xxxx-xxxx	Select NO

Connect an USB drive contains upgrade software to the unit; the available upgrade files will be listed in the menu. To update the system, select a file and use UP / DOWN keys to choose <YES>. Press ENTER to confirm the selection and start the upgrade process. The **MPEG-4 DVR** series unit uploads the software, updates the system files, and reboots automatically.

The upgrade may take several minutes to save the changes in the memory of the system. After reboot the unit, please check the software version again.



NOTE: No power interruption is allowed during the software update. Ensure that no power interruption can occur until the unit is completely rebooted.



NOTE: Do not remove the external USB ThumbDrive® / CD-ROM before the unit has completely shut down (hard drive and fan are off). Removing the external USB ThumbDrive® / CD-ROM before shut down can cause the system to update improperly.

■ **Software Upgrade via Internet**

The item is used to upgrade the unit's software via the internet. Select one of the listed software versions and choose <YES>. The **MPEG-4 DVR** series uploads the software, updates the system files, and reboots automatically.

< Language >

The Language item allows user to select the language for the OSD menu and screen messages. Language selection takes effect immediately when the selection is done. Press UP / DOWN to select from listed languages and press ENTER to confirm.

< Date / Time >

Users can set the current date, time and other OSD parameters in this menu. The Administrator's privileges are required for entering the submenu. In System Setup menu, select <Date/Time> and press ENTER; the Date/Time menu displays as follows.

Date/Time	
1. Date	2005/02/21
2. Time	PM10:39:26
3. Time Zone	OFF
4. Date/Time Display	1 Row
5. Date Display Mode	Y/M/D
6. Time Display Mode	24 HR
7. Date/Time Order	Date First
8. Daylight Saving Time Setup	
9. Network Time Protocol Setup	



NOTE: The reset date / time setting applies to record new video, the date and time of previously recorded video will not be changed.



NOTE: To avoid record database corruption, after changing Date/Time setting, clear the database is recommended.

■ **Date / Time Setting**

Select <Date> or <Time> and press ENTER for adjusting the settings. LEFT / RIGHT keys are used to move the cursor to previous or next field, ENTER is for selecting, and UP / DOWN are used to change the value in the selected field.

■ **Time Zone**

Select <Time Zone> to enter the time zone. To find out your local time zone, please visit www.greenwichmeantime.com



NOTE: The <Time Zone> must be set to your local time zone or the <Network Time Protocol Setup> will not be accessible.

■ ***Date / Time Display***

Users are allowed to choose to set the date / time OSD displays in 1 or 2 rows. Use the UP / DOWN keys to change the setting. The default is to display the date / time OSD in one row.

■ ***Date Display Mode***

This function allows user to set the OSD display type of the date / time. There are three options to select from: <Y/M/D>, <M/D/Y> or <D/M/Y>. "Y" represents "Year", "M" represents "Month" and "D" represents "Day".

Use UP / DOWN keys to change the setting. The default setting is <Y/M/D> in both NTSC / PAL formats.

■ ***Time Display Mode***

User can choose to set the time format to <12 hour> or <24 hour>. Use the UP / DOWN keys to change the format. The default setting is <24 hour>.

■ ***Date/Time Order***

The item is used to set the order of Date/Time display to <Date First> or <Time First>. Select this item and press ENTER, then use UP / DOWN keys to change the setting.

■ ***Daylight Saving Time***

The item is for people who live in certain regions to observe Daylight Saving Time. Select <ON> to enable, or <OFF> to disable the function.

If the function is disabled, the DST Start / End time and DST Bias will be grayed out and cannot be accessed. If this function is enabled, the date/time information will be shown on the screen with a DST icon when playing back recorded video or searching video in the event list. "S" indicates summer time and "W" indicates wintertime.

■ **Network Time Protocol Setup**

After entering the time zone, the **<Network Time Protocol Setup>** option will appear. Select the **<Network Time Protocol Setup>** to set the time server. The default time server is time.nist.gov, but the user can change it to other time servers when desired. A list of IP addresses of the time servers is listed below.

129.6.15.28	129.6.15.29	132.163.4.101
132.163.4.102	132.163.4.103	128.138.140.44
192.43.244.18	131.107.1.10	69.25.96.13
206.246.118.250	208.184.49.9	64.125.78.85
207.200.81.113	64.236.96.53	68.216.79.113

After the time server is set, select **<Manually Time Sync>** to sync the time. The time sync can also be updated periodically. Select **<Automatically Time Sync>**, and choose a desired time gap to sync the time.

< Unit Name >

Users are allowed to assign a name, up to 11 characters, to the **MPEG-4 DVR** series unit.

Follow the steps to edit the unit name.

- Select **<Unit Name>** from System Setup menu and press ENTER. A virtual keyboard displays.

Unit Name

A	B	C	D	E	F	G	H	I	J	K	L	M
N	O	P	Q	R	S	T	U	V	W	X	Y	Z
a	b	c	d	e	f	g	h	i	j	k	l	m
n	o	p	q	r	s	t	u	v	w	x	y	z
0	1	2	3	4	5	6	7	8	9	.	!	@
#	-	_										

◀
▶
Backspace
Delete

Cancel
OK

- Use Direction keys to move the cursor to the wanted character.
- Press ENTER to add the character to the entry field (up to 11 characters).
- When done, move the cursor to **<OK>** and press ENTER to save the settings and exit.

< Password >

The Password menu allows administrator to change the password settings for accessing the unit. Select <Password> in System Setup menu and press ENTER; the menu displays as follows.

Password	
1. Admin1 Password	
2. User1 Password	
3. Admin2 Password	
4. User2 Password	
5. Admin3 Password	
6. User3 Password	
7. Enable Password	Yes
9. Load Factory Password	None

■ **Setup Admin / User Password**

Only the administrator is allowed to change the user and administrator passwords to any 4~8 digit number. Use the UP / DOWN Direction keys to select the desired account and press ENTER, the following menu is displayed.

Admin Password

Press Channel Keys To Enter Password (4-8 Digits)
Press ◀ To Delete

Use CHANNEL keys to input the new password and confirm the new password. After setting the new password, press ENTER to save the settings and exit.

■ **Enable Password**

The item is used to determine if the password is required for accessing the OSD menu. Select <YES> to demand entering password when accessing the OSD menu; if not, select <NO>.

■ **Load Factory Password**

This item allows the administrator to reload the factory password in case that the administrator cannot remember the password. There are four options to select from: <Admin> (reload the Admin password only), <User> (reload the User password only), <Both> (reload the Admin and User passwords) and <None>. The factory password is 1234 for administrator and 4321 for user.

< Network Setup >

The Network Setup menu allows the administrator to configure the network by specifying the network related settings, such as IP address and Netmask, etc.

See your network administrator and/or network service provider for more specific information.

From the System Setup menu, select <Network Setup> and press ENTER. The following menu displays.

Network Setup	
1. LAN Select	LAN
2. LAN Setup	
3. Wireless Network Setup	
4. Dial-in Setup	
5. Dial-out Setup	
6. Dial Port Selection	None
7. Trigger Port	80
8. Email Address	
9. SMTP Setup	
10. DDNS Setup	

Items in this menu are described in the following sections.

■ **LAN Select**

PPPoE stands for Point-to-Point Protocol over Ethernet, which is a specification for connecting the users on an Ethernet to the Internet through a common broadband medium.

This item allows you to select your service type between <LAN>, <PPPoE> or <None>; if you are using an intranet for communication, please select <LAN>, if you are using a broadband medium, such as DSL Line or cable modem, please select <PPPoE>.

If <None> is selected, then there is no need to set further LAN/PPPoE setting, therefore, the second item <LAN Setup> will not be accessible.

■ LAN Setup

The network related settings in the LAN Setup menu should be associated with the network service type. If you select <LAN> for <LAN Select>, then 6th to 8th item will not be available.

Select <LAN Setup> in Network Setup menu and press ENTER for setting the parameters; the menu displays as follows.

LAN Setup		
1. DHCP		OFF
2. IP	192.168.1.150	
3. Netmask	255.255.255.0	
4. Gateway	192.168.1.1	
5. DNS	0.0.0.0	
6. PPPoE Account		
7. PPPoE Password		
8. PPPoE Max Idle	35min	
9. Connect At Booting	YES	
10. Network Restart	NO	

- DHCP

This item allows user to obtain a dynamic IP address from DHCP (Dynamic Host Configuration Protocol) server during the unit boots up. When using DHCP, the settings are dynamic and they will change every time you power up and power off the unit, depending on your network's setup.

If the item is enabled (ON), a dynamic IP will be assigned to **MPEG-4 DVR** series unit. In this case, user does not need to configure a static IP and the Ethernet settings including IP address, Netmask, Gateway, and DNS settings will be read only. The default setting is <ON>.

If you are using permanent addressing, set DHCP to <OFF> for setting the IP Address, Netmask, Gateway, and DNS. See your network system administrators or IT personnel for appropriate values for these settings.

- IP

The item is used to configure the IP (Internet Protocol) address of the unit. The IP address is the identifier for your computer or device on a TCP/IP LAN or WAN. Please note that to set a static IP address, DHCP must be set to <OFF>.

- **Netmask**

A netmask is a 32-bit mask used to divide an IP address into subnets and specify the networks available hosts. Its value is defined by your network administrator. It takes the form as `***.***.***.***`, for example, `255.255.255.255`.

This item allows user to enter the value of the Netmask for the unit. Please note that to configure the item, DHCP must be set to `<OFF>`.

- **Gateway**

Gateway is a node on a network that serves as an entrance to another network.

Users are allowed to specify the IP address of the gateway or router associated with this unit. To configure this item, DHCP must be set to `<OFF>`.

- **DNS**

DNS is the abbreviation for "Domain Name System", which is an Internet service that translates domain names into IP addresses. Because domain names are easier to remember.

The item allows user to specify the IP address of the Domain Name System associated with the unit. To configure this item, DHCP must be set to `<OFF>`.

If the network server is unavailable when using DHCP, the unit searches for the network server and boots up more slowly. This network search continues until it times out.

- **PPPoE Account**

The item allows user to setup the PPPoE login username.



NOTE: For accessing the PPPoE settings, select `<PPPoE>` as the Network Type in Network Setup menu.

To setup the login username, follow the steps:

- Select <PPPoE Account> from LAN Setup menu and press ENTER. A virtual keyboard displays.

PPPoE Account

A	B	C	D	E	F	G	H	I	J	K	L	M
N	O	P	Q	R	S	T	U	V	W	X	Y	Z
a	b	c	d	e	f	g	h	i	j	k	l	m
n	o	p	q	r	s	t	u	v	w	x	y	z
0	1	2	3	4	5	6	7	8	9	.	!	@
#	-	_										

◀
▶
Backspace
Delete

Cancel
OK

- Use Direction keys to move the cursor to the wanted character.
- Press ENTER to add the character to the username entry field.
- When done, move the cursor to <OK> and press ENTER to save the settings and exit.

- **PPPoE Password**

The item allows user to setup the PPPoE password. Follow these steps to setup the login password.

- Select <PPPoE Password> from LAN Setup menu and press ENTER. A virtual keyboard displays.
- Use Direction keys to select character.
- Press ENTER to add the selected character to the password entry field.
- When done, move the cursor to <OK> and press ENTER to save the settings and exit.

- **PPPoE Max Idle**

The item indicates the time that the modem connection remains active if there is no acknowledgement from the remote PC. You can select the idle time from 0 to 600 minutes. The default is 35 minutes.

- **Connect At Booting**

The unit is allowed to connect to the internet automatically when powered up. Select <YES> to connect at booting, otherwise select <NO>.

- **Network Restart**

Network restart is required after changing network settings. Select <YES> to restart the network connection.

■ **Wireless Network Setup**

A wireless network consists of a number of computers, which are equipped with wireless networking interface card, respectively. Each of these computers can communicate directly with all of the other wireless enabled computers.



Select <Wireless Network Setup>, which is under <Network Setup> Menu, and press ENTER, the menu displays as below.

Wireless Network Setup	
1. Operating Mode	Infrastructure
2. Choose A Wireless Network	
3. Network Name (ESSID)	DynaCo...
4. Network Authentication	Shared
5. Data Encryption	Disable
6. Data Encryption Level	64bits
7. Key Index	1
8. Enter Network Key	xxxxxxxxxx
9. Network Setting	
10. Connect	No

- **Operating Mode**

Devices in a wireless network are set up to either communicate indirectly through a central place -- an Access Point (AP); or directly, one to the other. The first is called "Infrastructure Mode" and the other is called "Ad Hoc Mode" (it's also called peer-to-peer).

Ad Hoc Mode does not require an Access Point, it's easier to set up, especially in a small or temporary network.

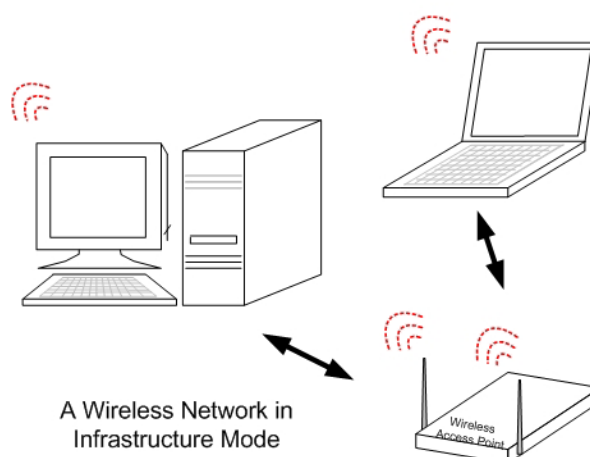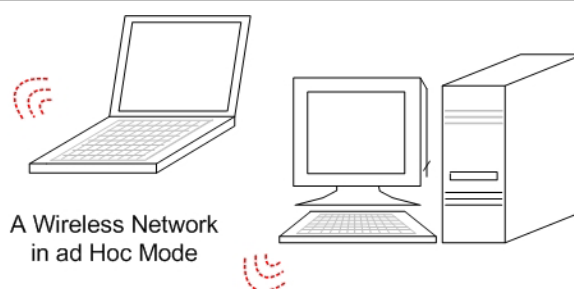

NOTE: You may select either mode for your wireless network, however, all devices communicating directly with each other must use the same mode.

- Choose A Wireless Network

This function enables the unit to scan for any wireless network in the surrounding area and list them on the table, shown as below figure:

Choose A Wireless Network		
Mode	ESSID	ENCRYPT
Infrastructure	Wireless-ap	OFF
Infrastructure	zeroneoffice	OFF

Each wireless network is listed by operating mode, network name (ESSID) and the encrypt status. “Mode” tells the operating mode; “ESSID” tells the name of those finding wireless network; and “Encrypt” tells whether the transferring data has been encrypted.

Move the cursor over the wanted wireless network and press ENTER to select it. Once you select the wanted wireless network, some related items, such as <Operating Mode>, <Network Name> and <Data Encryption>, are already made for you.



NOTE: A Wireless USB Adapter must be connected to the DVR before choosing a wireless network under this submenu.

- Network Name (ESSID)

This item is used for setting the name of a wireless network. The set name will be shared by every member of the wireless network. Note that the Network Name will be the continuous string excluding blank.

Follow these steps to set the name of a wireless network.

- In the <Wireless Network Setup> Menu, move the cursor to <Network Name (ESSID)> and press ENTER. A virtual keyboard with alphanumeric characters is displayed.

Network Name (ESSID)

A	B	C	D	E	F	G	H	I	J	K	L	M
N	O	P	Q	R	S	T	U	V	W	X	Y	Z
a	b	c	d	e	f	g	h	i	j	k	l	m
n	o	p	q	r	s	t	u	v	w	x	y	z
0	1	2	3	4	5	6	7	8	9	.	!	@
#	-	_										

◀
▶
Backspace
Delete

Cancel
OK

- Use Direction keys the <◀>, <▶>, <Backspace> or <Delete> to move the cursor in the title entry field.
- Use Direction keys to move the cursor through the virtual keyboard and press ENTER to add the selected character to the title entry field. Repeat the procedure till the Network Name has been established.
- When finished, move the cursor to <OK> and press ENTER to complete the setting; or, abort the setting by either ways: press ESC, or move the cursor to <Cancel> and press ENTER.

- Network Authentication

For added security on the wireless network, when enabling Encryption, the Authentication type can also be selected.

If <Shared> Key is chosen, your Access Point will not be available on the wireless network except to those wireless clients that share the same WEP (short for Wired Equivalent Privacy) key.

If <Open> System is chosen, only those wireless clients with the same WEP key will be able to communicate on the wireless network, but the Access Point will be visible to all devices on the network.



NOTE: Wired Equivalent Privacy is a security protocol for WLANs defined in the 802.11b standard. WEP aims to provide security by encrypting data over radio waves so that it is protected as the data is transmitted from one end point to another.

- Data Encryption

This function is used to translate the data into a secret code. Data encryption is the most effective way to achieve data security. To read an encrypted file, you must have access to a secret key or password that enables you to decrypt it.

Once you enable this function, you have to specify the secret key level (64 bits or 128 bits) and key index.

- Data Encryption Level

This item allows you to select the data privacy algorithm you want, including 64 or 128 bits WEP type. If you select 64 or 128 bits WEP type, a set of WEP key will be generated. 128 bits WEP type provides higher secure level than 64 bits WEP type.

If <64bits> is chosen, then 10 hexadecimal digits can be entered for <Enter Network Key>; and 26 hexadecimal digits for <128bits>.



NOTE: A hexadecimal digit values in the range of 0~9, A~F and a~f. e.g. abcde12345.

- Key Index

Key index tells the location where the secret key is stored. You can select from 1 to 4. The option you select here should be corresponding to that of Wireless USB Adapter's.

- Enter Network Key

Entering for specifying a secret key for encryption. Select <Enter Network Key> and press ENTER, below virtual keyboard appears.

Enter Network Key

A	B	C	D	E	F	G	H	I	J	K	L	M
N	O	P	Q	R	S	T	U	V	W	X	Y	Z
a	b	c	d	e	f	g	h	i	j	k	l	m
n	o	p	q	r	s	t	u	v	w	x	y	z
0	1	2	3	4	5	6	7	8	9	.	!	@
#	-	_										

◀ ▶ Backspace Delete

Cancel OK

Following the setup procedures described in <Network Name (ESSID)>.



NOTE: If <64bits> is chosen as option for <Data Encryption Level>, then 10 hexadecimal digits can be entered; and 26 hexadecimal digits for <128bits>.

- Network Setting

Entering for setting the WLAN Network related settings, including <WLAN DHCP>, <WLAN IP>, <WLAN Netmask>, <WLAN Gateway> and <WLAN DNS>. Select this item and press ENTER, the sub-menu displays as below:

Network Setting	
1. WLAN DHCP	OFF
2. WLAN IP	192.168.70.100
3. WLAN Netmask	255.255.255.0
4. WLAN Gateway	0. 0. 0. 0
5. WLAN DNS	0. 0. 0. 0

<WLAN DHCP> allows you to obtain a dynamic IP address from DHCP server. If you select <ON>, then the rest items will be assigned automatically; and if <OFF> is selected, you have to enter the rest items manually.



NOTE: The item <LAN Select>, which is under <Network Setup> menu, should be set to <WLAN>, otherwise, this submenu <Wireless Network Setup> cannot be accessed.

- Connect

When settings above are done, move cursor to this item and select <YES> to activate a wireless network (if any has been detected), and <NO> to abort.

■ *Dial-in Setup*

The Dial-in function enables user to establish dial-up modem communication to and from **MPEG-4 DVR** series unit for the remote software use. User is allowed to connect only one modem to a **MPEG-4 DVR** series unit.

For more information on dial-up setting on PC, see [Appendix C: Dial-up Connections via Modem](#).



NOTE: The Dial-in Service is not available if no modem connects to the unit.

In Network Setup menu, select <Dial-in Setup> and press ENTER to enter the Dial-in menu. The menu displays as follows.

Dial-in Setup		
1. Dial-in Service		OFF
2. Dial-in Account		user
3. Dial-in Password		user
4. Server IP	192.168.0.1	
5. Client IP	192.168.0.2	
6. Dial-in Idle Time	0 Min	
7. Dial-in Max Time	0 Min	

- Dial-in Service

If the **MPEG-4 DVR** series unit does not connect to the Internet, user can communicate to the unit from remote PC through a modem as well. Select <ON> to enable the Dial-in function, or <OFF> to disable.

If you select <OFF> for this item, then the rest items will be inaccessible.

- Dial-in Account

This item enables user to protect the unit by establishing or changing a dial-in user name for modem connection.

To setup the Dial-in Account, follow the steps.

- Select <Dial-in Account> from Dial-in Setup menu and press ENTER. A virtual keyboard displays.

Dial-in Account

A	B	C	D	E	F	G	H	I	J	K	L	M
N	O	P	Q	R	S	T	U	V	W	X	Y	Z
a	b	c	d	e	f	g	h	i	j	k	l	m
n	o	p	q	r	s	t	u	v	w	x	y	z
0	1	2	3	4	5	6	7	8	9	.	!	@
#	-	-										

◀
▶
Backspace
Delete

Cancel
OK

- Use Direction keys to move the cursor to the wanted character.
- Press ENTER to add the selected character to the username entry field.
- When done, move the cursor to <OK> and press ENTER to save the settings and exit.



NOTE: The Sever IP and the Client IP must not be set the same one; but they have to set in the same domain.

For example: Server IP: 192.168.0.1

Client IP: 192.168.0.2

- Dial-in Password

The item allows user to setup the Dial-in password. Follow these steps to setup the login password.

- Select <Dial-in password> from Dial-in Setup menu and press ENTER. A virtual keyboard displays.
- Use Direction keys to select character.
- Press ENTER to add the selected character to the password entry field.
- When done, move the cursor to <OK> and press ENTER to save the settings and exit.

- Server IP

The item is for setting the IP address that identifies the **MPEG-4 DVR** series unit over modem connection. To set the server IP, follow these steps:

- Select <Server IP>.
- Using LEFT/ RIGHT to move the cursor over the IP, and stop on where you want it to be changed.
- Press ENTER, and then use UP/ DOWN to change the value.
- When done, press ENTER again to exit.
- Repeat the procedure till the IP is set completely.

- Client IP

The item determines the remote PC's IP address for connecting with the **MPEG-4 DVR** series unit. To set the Client IP, follow these steps:

- Select <Client IP>.
- Using LEFT/ RIGHT to move the cursor over the IP, and stop on where you want it to be changed.
- Press ENTER, and then use UP/ DOWN to change the value.
- When done, press ENTER again to exit.
- Repeat the procedure till the IP is set completely.

- Dial-in Idle Time

This item indicates the longest amount of time that the modem connection remains active if there is no acknowledgement from the remote pc. The value can be set in the range of 0 min to 600 min.

- Dial-in Max Time

The item indicates the longest amount of time that the connection via modem remains active. The value can be set in the range of 0 min to 600 min.

■ Dial-out Setup

The Dial-out function enables user to establish dial-up modem communication to and from **MPEG-4 DVR** series unit for remote notification use. User can connect one modem to **MPEG-4 DVR** series unit. For more information on dial-up setting on PC, see [Appendix C: Dial-up Connections via Modem](#).



NOTE: The Dial-out Service is not available if there is no modem connected to the unit.

In Network Setup menu, select <Dial-out Setup> and press ENTER to enter the Dial-out menu. The menu displays as follows.

Dial-out Setup		
1. Dial-out DHCP		OFF
2. Dial-out IP	192.168.254.1	
3. Dial-out Netmask	255.255.255.0	
4. Dial-out Gateway	192.168.254.254	
5. Dial-out DNS	192.168.254.254	
6. Phone Number	1234	
7. Dial-out Account	user	
8. Dial-out Password	user	
9. Dial-out Idle Time	0 Min	
10. Dial-out Max Time	0 Min	
11. Connect	NO	

- Dial-out DHCP

This item allows user to obtain a dynamic IP address from DHCP (Dynamic Host Configuration Protocol) server over modem connection. If the item is enabled (ON), a dynamic IP will be assigned to **MPEG-4 DVR** series unit. In this case, user does not need to configure a static IP and the following settings will be read only.

Select <ON> to enable the DHCP function, or <OFF> to set the dial-out IP address, Netmask, Gateway and DNS manually. The default setting is <ON>.

- Dial-out IP

The item is for setting a static IP address that identifies the **MPEG-4 DVR** series unit over modem connection. Set the <Dial-out DHCP> to <OFF> for accessing this item.

Move the cursor over <Dial-out IP> and press ENTER, and then press UP / DOWN keys to change the values in the selected field.

- Dial-out Netmask

The item is for setting the Netmask that identifies the **MPEG-4 DVR** series unit over modem connection. To configure the item, DHCP must be set to <OFF>.

Move the cursor over <Dial-out Netmask> and press ENTER, and then press UP / DOWN keys to change the values in the selected field.

- Dial-out Gateway

Users are allowed to specify the IP address of the gateway or router associated with this unit. To configure this item, DHCP must be set to <OFF>.

Move the cursor over <Dial-out Gateway> and press ENTER, and then press UP / DOWN keys to change the values in the selected field.

- Dial-out DNS

The item allows user to specify the IP address of the Domain Name System (DNS) associated with the unit. To configure this item, DHCP must be set to <OFF>. Enter this item and press UP / DOWN keys to change the values in the selected field.

- Phone Number

The item is used to set the dial-out phone number. Follow these steps to setup the phone number.

- Select <Phone Number> from Dial-out Setup menu and press ENTER. A virtual keyboard displays.
- Use Direction keys to move the cursor for selecting number.
- Press ENTER to add the selected number to the phone number entry field.
- When done, press ENTER to save the settings and exit.

- Dial-out Account

This item enables user to set the Dial-out user name, which is used for dialing out to Internet Service Provider server. Contact your network service provider for more specific information.

To setup the Dial-out Account, follow the steps.

- Select <Dial-out Account> from Dial-out Setup menu and press ENTER. A virtual keyboard displays.

The screenshot shows a window titled "Dial-out Account". At the top, there is a grey rectangular input field for the username. Below it is a virtual keyboard with the following layout:

A	B	C	D	E	F	G	H	I	J	K	L	M
N	O	P	Q	R	S	T	U	V	W	X	Y	Z
a	b	c	d	e	f	g	h	i	j	k	l	m
n	o	p	q	r	s	t	u	v	w	x	y	z
0	1	2	3	4	5	6	7	8	9	.	!	@
#	-	_										

Below the keyboard, there are navigation controls: a left arrow, a right arrow, the text "Backspace", the text "Delete", and at the bottom, "Cancel" and "OK".

- Use Direction keys to move the cursor to the wanted character.
- Press ENTER to add the selected character to the username entry field.
- When done, move the cursor to <OK> and press ENTER to save the settings and exit.

- Dial-out Password

The item allows user to setup the Dial-out password. Follow these steps to setup the login password.

- Select <Dial-out password> from Dial-out Setup menu and press ENTER. A virtual keyboard displays.
- Use Direction keys to move the cursor for selecting character.
- Press ENTER to add the selected character to the password entry field.
- When done, move the cursor to <OK> and press ENTER to save the settings and exit.

- Dial-out Idle Time

This item indicates the longest amount of time that the modem connection remains active if there is no acknowledgement from the remote pc. The value can be set in the range of 1 min to 600 min. If selecting <0>, the modem connection keeps active continuously.

- Dial-out Max Time

The item indicates the longest amount of time that the connection via modem remains active. The value can be set in the range of 1 min to 600 min, or <0> to keep the connection indefinitely.

- Connect


When the Dial-out related settings are configured, set this item to <YES> to starting dial-out or select <NO> to disconnect.

■ Dial Port Selection

The Dial Port Selection enables the user to assign the Dial-In/Out, SMS, Text to the designated port of the DVR. For instance, when the cable of a POS system is inserted to the Serial Port of the DVR, enter the Dial Port Selection menu and assign Text to the Serial Port, the DVR will now be able to obtain the data from the POS system.

Dial Port Selection	
1. Serial Port	Text
2. USB Port-Front	NONE
3. USB Port-Rear Top	NONE
4. USB Port-Rear Bottom	NONE

The locations of the ports are illustrated below.

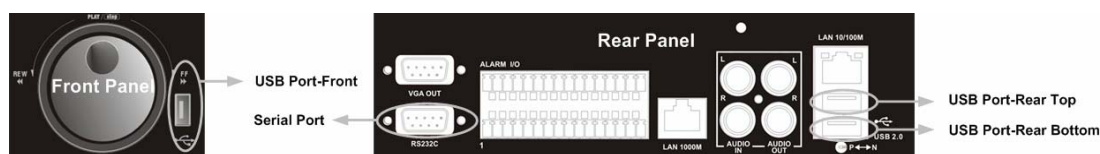

■ Trigger Port

To avoid the default service port (port 100) to be blocked, the item enables user to change port 100 into another port.

To change the trigger port, move the cursor over <Trigger Port> and press ENTER, then adjust the setting by UP / DOWN keys.

■ **Email Address**

This item is used to edit the e-mail address where alarm event information will be sent. Follow these steps to setup the e-mail address.

- Select <Email Address> from Network Setup menu and press ENTER. A virtual keyboard displays.
- Use Direction keys to move the cursor for selecting character.
- Press ENTER to add the selected character to the password entry field.
- When done, move the cursor to <OK> and press ENTER to save the settings and exit.

■ **SMTP Setup**

Simple Mail Transfer Protocol (SMTP), a protocol for sending e-mail messages between servers. SMTP is a relatively simple, text-based protocol, where one or more recipients of a message are specified and the message text is transferred.

Select < SMTP Setup> from Network Setup menu and press ENTER; the menu displays as follows.

SMTP Setup	
1. Email via SMTP	NO
2. SMTP Server	
3. SMTP Port	25
4. SMTP Account	
5. SMTP Password	

- **Email via SMTP**

The item enables user to determine if the unit sends e-mail via SMTP. Select <YES> to send e-mail via SMTP using direction keys; if not, select <NO>.

- **SMTP Server**

This item enables user to set the SMTP server. Contact your network service provider for more specific information.

Follow the steps to setup the SMTP Server.

- Select <SMTP Server> from SMTP Setup menu and press ENTER. A virtual keyboard displays.

SMTP Server

A	B	C	D	E	F	G	H	I	J	K	L	M
N	O	P	Q	R	S	T	U	V	W	X	Y	Z
a	b	c	d	e	f	g	h	i	j	k	l	m
n	o	p	q	r	s	t	u	v	w	x	y	z
0	1	2	3	4	5	6	7	8	9	.	!	@
#	-	_										

◀ ▶
Backspace
Delete

Cancel
OK

- Use Direction keys to move the cursor to the wanted character.
- Press ENTER to add the selected character to the username entry field.
- When done, move the cursor to <OK> and press ENTER to save the settings and exit.

- SMTP Port

The item is used to change SMTP port to another port, if necessary. SMTP usually is implemented to operate over Internet port 25.

To change the SMTP port, move the cursor to <SMTP Port> in SMTP Setup menu and press ENTER. Use UP / DOWN keys to change the values in the selected field.

- SMTP Account

The item allows user to setup the SMTP username. Follow these steps to setup the login password.

- Select <SMTP Account> from SMTP Setup menu and press ENTER. A virtual keyboard displays.
- Use Direction keys to move the cursor for selecting character.
- Press ENTER to add the selected character to the password entry field.
- When done, move the cursor to <OK> and press ENTER to save the settings and exit.

- SMTP Password

The item allows user to setup the SMTP password. Follow these steps to setup the password.

- Select <SMTP password> from SMTP Setup menu and press ENTER. A virtual keyboard displays.
- Use Direction keys to move the cursor for selecting character.
- Press ENTER to add the selected character to the password entry field.
- When done, move the cursor to <OK> and press ENTER to save the settings and exit.

■ DDNS Setup

Dynamic Domain Name System (DDNS) allows a DNS name to be constantly synchronized with a dynamic IP address. In other words, it allows those using a dynamic IP address to be associated to a static domain name so others can connect to it by name.

Once the setting is completed, the DDNS address will be:

<http://yourhostname.ddns.iview-ddns.com>

Fore example, if the chosen Host name is "*****", then the address will be:

http://*****.ddns.iview-ddns.com

Select <DDNS Setup> from Network Setup and press ENTER. The menu displays as below figure.

DDNS Setup		
1. Enable DDNS		ON
2. Host Name	XXXX_XXXXXX	
3. DDNS Port		80
4. Submit/Update		No
5. ezDDNS		No

- Enable DDNS

The item is used to enable or disable the Dynamic Domain Name Service.

Select <YES> to enable the service, or <NO> to disable.

- Host Name

The item allows user to setup a domain name, which is used when entering the **MPEG-4 DVR** series unit through the net on your remote PC.

To setup the Host Name of the unit, follow the steps.

- Select <Host Name> from DDNS Setup menu and press ENTER. A virtual keyboard displays as the figure below.

Host Name

A	B	C	D	E	F	G	H	I	J	K	L	M
N	O	P	Q	R	S	T	U	V	W	X	Y	Z
a	b	c	d	e	f	g	h	i	j	k	l	m
n	o	p	q	r	s	t	u	v	w	x	y	z
0	1	2	3	4	5	6	7	8	9	.	!	@
#	-	_										

◀
▶
Backspace
Delete

Cancel
OK

- Use Direction keys to select character.
- Press ENTER to add the selected character to the password entry field.
- When done, move the cursor to <OK> and press ENTER to save the settings and exit.



NOTE: No any two **MPEG-4 DVR** series units should be set the same Host Name.

- DDNS Port

The item allows user to setup the port for DDNS. Press UP / DOWN Direction keys to change the port.

- Submit/ Update

When done, move the cursor to this item and press ENTER to submit the settings.



NOTE: If there are two **MPEG-4 DVRs** series units set the same domain name, the later setting will not be submit successfully.

- ezDDNS

ezDDNS enables the users to register for the host name automatically. Press ENTER and select YES. The following screen will be displayed:

ezDDNS Submit/update ok!
Host name is XXXX_XXXXXX
Press any key to return



NOTE: The DVR must be connected to the *Real IP address, or be assigned a specific port using **Port Forwarding technique.
*A "Real IP" is the IP address that is assigned to you by your ISP.
A "Virtual IP" is the IP address assigned either manually or through DHCP. When the user is assigned a Virtual IP, the user must use **Port Forwarding technique to assign a specific port to the DVR.

< RS485 Setup >

This menu allows setting up the parameters of the unit's RS-485 communications port. From the Main menu, select <RS485 Setup> and press ENTER. The following menu is displayed.

RS485 Setup	
1. Unit ID	224
2. Baud Rate	9600
3. Bits	8
4. Stop	1
5. Parity	None

■ **Unit ID**

This item is used to change the RS-485 ID address of the unit. The ID is in the range of <1> to <255>. The default is <224>.

■ **Baud Rate**

The Baud rate options for associated with the protocol are <2400>, <4800>, <9600>, <19200> and <38400>. The default is <9600> baud.

■ **Bits**

User can specify the bits in a word that are associated with this protocol. The available options are <6>, <7> and <8> bits. The default is <8> bits.

■ **Stop**

User can specify the stop bit associated with this protocol. Options are <1> and <2> stop bits. The default is <1> stop bit.

■ **Parity**

This item is used to specify the parity associated with this protocol. Options are <ODD>, <EVEN>, and <NONE>. The default is <NONE>.

< Audio Output/ Key Beep >

Enter this item to setup the audio output or key beep.

Audio Output

The item is used to set the audio output mode. The available options are as follows.

- **Live/PB**
Select the item to play the recording sounds of live image in live mode, and sounds of recorded video in playback mode respectively.
- **Always Live**
Select the item to play live sounds in both live mode and playback mode.
- **OFF**
Select the item to disable the audio output function.

Key Beep

The item is used to enable or disable the key tone. Select <YES> to enable the key tone, or <NO> to disable.

< IP Camera Support >

Enter this item to add IP cameras to the DVR. There are 3 options to choose from, <0>, <1>, and <2>. Set this item to <0> will make DVR act as a traditional analog DVR. <1> or <2> indicates that the user will add 1 or 2 IP cameras to the DVR.

After the <IP Camera Support> is set to <1> or <2>, the following message will be displayed. Press ENTER to apply the changes, or ESC to exit.

Notice!!

DVR must reboot to apply the change

ENTER: Yes ESC: No



Note: If the <IP Camera Support> option does not appear in the <System Setup> menu, you may be using an older hardware version. To check the hardware version, go to <Main Menu> → <System Setup> → <Version> → <Hardware>.

The hardware version is listed as the form as XX-YY-ZZ. To be IP camera supported, the “XX” MUST be greater than or equal to C3, and “ZZ” MUST be greater than or equal to A8 (e.g. C3-YY-A8).



Note:

1. The existing database will NOT be re-formatted after switching to this function.
2. The maximum acceptable resolution of the IP camera is D1.
3. Alarm I/O, Motion detection function, and audio of the IP camera are NOT currently supported.
4. This function is only available for Standard and Turbo models.

Monitor Setup

The Monitor Setup menu allows user to tune the quality of the displayed image. Select <Monitor Setup> from the Main menu and press ENTER. The following menu is displayed.

Main Menu

1. System Setup

2. Monitor Setup

3. Camera Setup

4. Record Setup

5. Sequence Setup

6. Event Setup

7. Database Setup

8. Configuration

9. Video Export

10. Text Setup

11. Shutdown

Monitor Setup

1. Show Camera Title

2. Title Position

3. Monitor Brightness

4. Monitor Contrast

5. Monitor Chrominance

6. Screen Center Adjust

7. Show Color Bar

8. VGA Resolution

YES

Fit BNC

0

0

0

Execute

800x600


The following sections describe the items found in the Monitor Setup menu.

< Show Camera Title >

This item allows user to choose whether to display the camera title on the screen or not. The default is <YES>, which displays the camera titles with the video.

< Title Position >

This item sets the DVR to display the proper screen size either on a PC Monitor (VGA) or a CRT CCTV Monitor (BNC). For instance, if you are using a CRT CCTV monitor, set this item to <Fit BNC>; or set this item to <Fit VGA> for PC monitor.

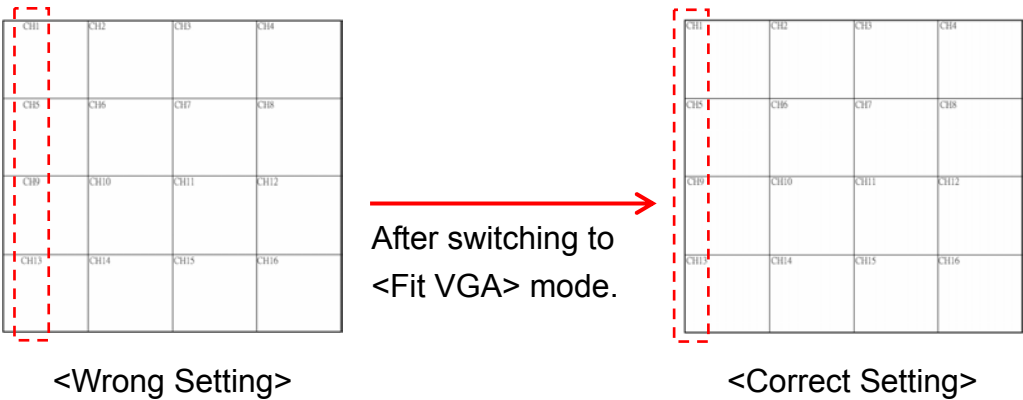

PC Monitor was used in the example above. In the <Wrong Setting>, the Title Position was set to <Fit BNC>, which was supposed to be set to <Fit VGA>. Since it was not the right setting, the titles of CH1, CH5, CH9, and CH13 were shifted slightly toward the middle of each channel. After switching to <Fit VGA>, the titles have been shifted back to the proper position as shown in the <Correct Setting>.

< Monitor Brightness >

The function allows user to adjust the brightness of image displayed on the monitor. Move the cursor to the item then press ENTER, and use UP / DOWN keys to adjust the numeric value. The range of brightness values is <-128> to <127>. The default setting is <0>.

< Monitor Contrast >

The item is used to adjust the color contrast of image. The range of contrast values is <-128> to <127>; the default setting is <0>.


< Monitor Chrominance >

Move the cursor over the item and press ENTER for adjusting the chrominance of image displayed on the monitor. Use UP / DOWN keys to adjust the numeric value. The range of chrominance values is <-128> to <127>; the default setting is <0>.

< Screen Center Adjust >

The item is used to adjust the screen center of the main monitor display area. Follow the steps to set the center point.

- Select <Screen Center Adjust> from the Monitor Setup menu and press ENTER. The adjusting screen is as follows.

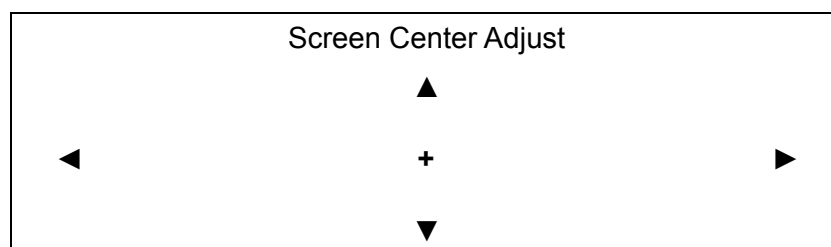

- Position the screen center position using the Direction keys.
- Press ENTER to exit when finished.

< Show Color Bar >

Choose this item to display a color bar pattern on the screen. The color bar helps to adjust the monitor hue, saturation, text color, and display options. Press ESC to exit the color bar pattern and return to the OSD menu.

< VGA Resolution >


The item allows user to select appropriate VGA resolution for the VGA monitor connected to the unit. The options are <800×600> (default), <1024×768> and <1280× 1024>.



NOTE: If the selected VGA resolution is too high for the monitor, the message “No Signal” will be shown on screen. Then press ESC on the front panel to restore the original setting.

Camera Setup

The items in the Camera Setup menu enable user to set camera parameters, including camera title, dome protocol and ID for each connected camera. The menu is shown as below. Note that there will be separated menus for analog camera and IP camera. Please refer to <Analog Camera> section if you are using an analog camera, or refer to <IP Camera> when you are using an IP camera.

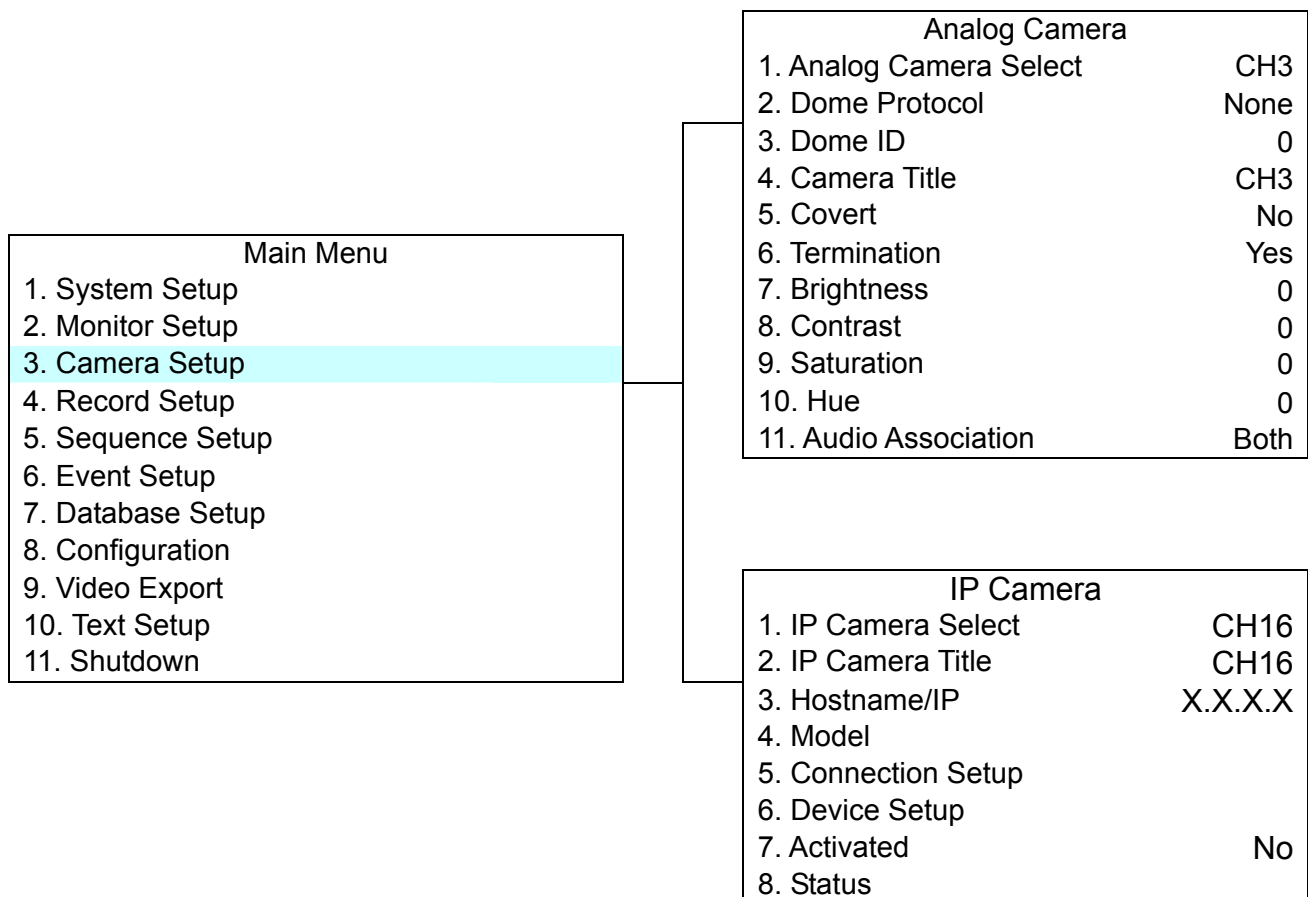

< Analog Camera >

If you are using an analog camera, please continue with this section. Items in this menu are described in the following subsections.

Analog Camera	
1. Analog Camera Select	CH3
2. Dome Protocol	None
3. Dome ID	0
4. Camera Title	CH3
5. Covert	No
6. Termination	Yes
7. Brightness	0
8. Contrast	0
9. Saturation	0
10. Hue	0
11. Audio Association	Both

■ **Analog Camera Select**

The item is used to select a camera for setting the parameters. The related settings will follow the selected camera, such as dome protocol and camera title.

Move the cursor to <Analog Camera Select> and press ENTER, then select a channel using UP / DOWN keys.

■ **Dome Protocol**

Select the communications protocol associated with your dome camera using the ENTER and Direction keys. The available protocol includes <DynaColor>, <Pelco D>, <Pelco P>, <AD422>, <Fastrax 2>, <Panasonic_C>, <Panasonic_N>, and <None> (default).

■ **Dome ID**

This item is used to assign an ID number to the selected dome camera. Note that ID number must match the ID address set by the dome.

■ **Camera Title**

This item allows the user to change the title of each camera connected to the unit. By default, the titles of cameras are numbered from 1 through 16 respectively. The title is displayed on screen after the changes of the titles are set.

Follow these steps to enter a new title for a camera.

- In the Camera setup Menu, move the cursor to Camera Title and press ENTER. A virtual keyboard with alphanumeric characters is displayed.

Camera Title													
A	B	C	D	E	F	G	H	I	J	K	L	M	
N	O	P	Q	R	S	T	U	V	W	X	Y	Z	
a	b	c	d	e	f	g	h	i	j	k	l	m	
n	o	p	q	r	s	t	u	v	w	x	y	z	
0	1	2	3	4	5	6	7	8	9	.	!	@	
#	-	_	,	"	+	=	*						
◀	▶												
Backspace						Delete							
Cancel						OK							

- Use Direction keys to position the cursor in the title entry field above the virtual keyboard.
- Use Direction keys to move the cursor through the lists of characters to the one you need. Press ENTER to select a character. Continue until the name is established. Each title can contain up to 11 characters in it
- After title entry is finished, move the cursor to <OK> and press ENTER; otherwise, either press ESC, or move the cursor to <Cancel> and press ENTER to abort.

■ **Covert**

This function allows user to choose certain camera to be covert while the unit is continuing recording video. Choosing <YES> means to cover the selected camera; and <NO> to remain the selected camera non-covert. The default setting is <NO>.

To make a camera be covert, follow these steps:

- Select the channel that you want to be covert from <Channel Select> item.
- After selecting the channel, move the cursor to <Covert> item and select <YES>.

■ **Termination**

This item is used to enable / disable the 75-termination resistor inside the unit to adjust the image quality of each camera. <YES>= termination resistor enabled (default), <NO> = termination resistor disabled.



NOTE: If the camera loop-out connectors have not been used, the termination resistor should be enabled for appropriate signal termination.

■ **Brightness**

Move the cursor to the item and press ENTER for adjusting the brightness of the camera. Use UP / DOWN keys to adjust the numeric value. The range of brightness values is <-128> to <127>. The default setting is <0>.

■ **Contrast**

Move the cursor to the item and press ENTER for adjusting the contrast of the camera. Use UP / DOWN keys to adjust the value.

■ **Saturation**

Move the cursor to the item and press ENTER to adjust the color saturation of the camera using UP / DOWN keys. This value will be ignored on monochrome monitors. The range of saturation values is <-128> to <127>. The default setting is <0>.

■ **Hue**

Move the cursor to the item and press ENTER for adjusting the hue of the camera. Use UP / DOWN keys to adjust the value.

■ **Audio Association**

The item is used to establish the connection between the selected camera and the two audio-in channels. Move the cursor to <Audio Association> in Camera Setup menu and press ENTER, then select <Both>, <Left Only>, <Right Only> or <None> by UP / DOWN keys to set up the connection.

< IP Camera >

If you are using an IP camera, please continue with this section. After the <IP Camera Support> is set to <1> or <2> and the DVR is rebooted, the user will be able to setup the IP camera. Items in this menu are described in the following subsections.

IP Camera	
1. IP Camera Select	CH16
2. IP Camera Title	CH16
3. Hostname/IP	X.X.X.X
4. Model	
5. Connection Setup	
6. Device Setup	
7. Activated	No
8. Status	

■ *IP Camera Select*

To select the corresponding channels. If you chose <1> in <IP Camera Support>, then channel 16 will be the corresponding channel for IP camera. When you choose <2> in <IP Camera Support>, channel 15 and 16 can be used to setup the IP cameras.



NOTE: Only channels 15 and 16 are available for installing with IP cameras.

■ *IP Camera Title*

This item allows the user to change the title of each camera connected to the unit. By default, the titles of cameras are numbered from 1 through 16 respectively. The title is displayed on screen after the changes of the titles are set.

Follow these steps to enter a new title for an IP camera.

- ENTER <IP Camera Title> and a virtual keyboard with alphanumeric characters is displayed.

IP Camera Title															
A	B	C	D	E	F	G	H	I	J	K	L	M			
N	O	P	Q	R	S	T	U	V	W	X	Y	Z			
a	b	c	d	e	f	g	h	i	j	k	l	m			
n	o	p	q	r	s	t	u	v	w	x	y	z			
0	1	2	3	4	5	6	7	8	9	.	!	@			
#	-	_	,	"	+	=	*								
◀	▶					Backspace				Delete					
Cancel				OK											

- Use Direction keys to position the cursor in the title entry field above the virtual keyboard.
- Use Direction keys to move the cursor through the lists of characters to the one you need. Press ENTER to select a character. Continue until the name is established. Each title can contain up to 11 characters in it
- After title entry is finished, move the cursor to <OK> and press ENTER; otherwise, either press ESC, or move the cursor to <Cancel> and press ENTER to abort.

■ **Hostname/IP**

To be entered with the hostname or IP address of the IP camera (e.g. 192.168.1.123).

■ **Model**

Enter this option to choose your IP camera model. The DVR supports the following IP camera models, <Video Server>, <ViVoTek 7000>, <AXIS 200>, <SONY SNC>, and <ACTi Series>.

■ **Connection Setup**

This item is used to setup the connection of the IP camera, enter this item and the following menu will be displayed.

Connection Setup		
1. Account		****
2. Password		****
3. Management Port		80
4. Streaming Port		8090
5. Streaming Format		MPEG4
6. Streaming Protocol		RTP+RTSP

- **Account**

To be entered with the account name of the IP camera.

- **Password**

To be entered with the password of the IP Camera.

- **Management Port**

The management port is the default port of the IP camera. Different IP cameras may have different management ports.

- **Streaming Port**

Streaming port is used for transmitting video and related commands.

- Streaming Format

Enter this option to choose the streaming format of your IP camera model. The DVR supports the following streaming formats, <MPEG4>, and <MJPEG>.

- Streaming Protocol

Enter this option to choose the streaming protocol of your IP camera model. The DVR supports the following streaming protocols, <RTP+RTSP>, <RTP/RTSP>, <RTP/RTSP/HTTP>, and <HTTP>.



NOTE: Please contact the manufacturer of your IP camera for assistance if you cannot find the information of the Management Port/Streaming Port/ Streaming format/ Streaming Protocol for the IP camera.

■ Device Setup

Enter this option to set the basic settings of the IP camera. Upon entering this option, the following message will be displayed.

Collecting data

Please wait!

If the connection cannot be detected, the following message will be displayed. Please check the <Hostname/IP>, <Model>, and <Connection Setup> again to make sure the settings are correct.

Cannot get config from the IP device

When the connection is detected, the following menu will be displayed.



NOTE: The <Device Setup> menu may have fewer or more options than the menu below since the <Device Setup> menu is retrieved from the menu options of the IP camera.

Device Setup		
1. Product ID		****
2. Image Resolution		CIF
3. FPS		15
4. Compression		40
5. Quality		Best
6. Sharpness		0
7. Brightness		20
8. Contrast		50
9. Saturation		30
10. Hue		40
11. Apply		No

- Product ID

This item will display the product name of the IP camera.



NOTE: The contents of the <Device Setup> menu differ from camera model to camera model. For instance, when you connect to IP Camera Brand A, you may have all options available. However, when you connect to IP Camera Brand B, you may only see 7 or 8 options.

<IP Camera Brand A>

Device Setup	
1. Product ID	****
2. Image Resolution	CIF
3. FPS	15
4. Compression	40
5. Quality	Best
6. Sharpness	0
7. Brightness	20
8. Contrast	50
9. Saturation	30
10. Hue	40
11. Apply	No

<IP Camera Brand B>

Device Setup	
1. Product ID	****
2. Image Resolution	CIF
3. FPS	15
4. Quality	Best
5. Sharpness	0
6. Contrast	20
7. Saturation	50
8. Apply	No

- Image Resolution/ FPS/ Compression/ Quality

This can be used to setup the Image Resolution/FPS (Frames Per Second)/Compression/Quality of the IP camera.

- Sharpness/ Brightness/ Contrast/ Saturation/Hue

Move the cursor to the item and press ENTER for adjusting the Sharpness/Brightness/Contrast/Saturation/Hue of the camera. Use UP / DOWN keys to adjust the numeric value.

- Apply

Select <Yes> to apply the settings above, and the following message will be displayed.

Re-collecting data Please wait!

When the settings cannot be applied, the following message will be displayed. You may need to reduce the resolution, or FPS of the IP camera.

Cannot set the IP device

Otherwise, the <Device Setup> setting is completed.



NOTE: After changing any item under <Device Setup> menu, you MUST select <Apply> to apply the changes, or the settings will remain unchanged.

■ **Activated**

Select <Yes> to activate the IP camera, or <No> to deactivate it.



NOTE: After activating the IP camera, Hostname/IP, Model, Connection Setup options under < IP Camera> menu will become unchangeable unless the selected IP camera is deactivated.

■ **Status**

After activating the IP camera, the <Status> option will be shown. Enter this option to see the currently status of the IP camera.

Status	
1. Model	****
2. Resolution	720*480
3. PPS	10
4. Bandwidth	20 KB/Sec
5. Pkg. lost rate	0.1%

Under the <Status> menu, the user will be able to see the model, resolution, PPS, bandwidth, and package lost rate of the IP camera.


Record Setup

The following three factors will effect the total record time of **MPEG-4 DVR** series unit:

- HDD capacity
- Recording rate (Picture per Second)
- Image quality settings

The greater the recording rate and the higher the quality setting, the shorter the recording time. Most of the related factors can be set here in this submenu.

The Record Setup menu allows user to set recording quality, recording schedules, and other recording parameters. Administrator's password is required to access Record Setup menu. In the Main menu, move the cursor to <Record Setup> and press ENTER. The following menu is displayed.

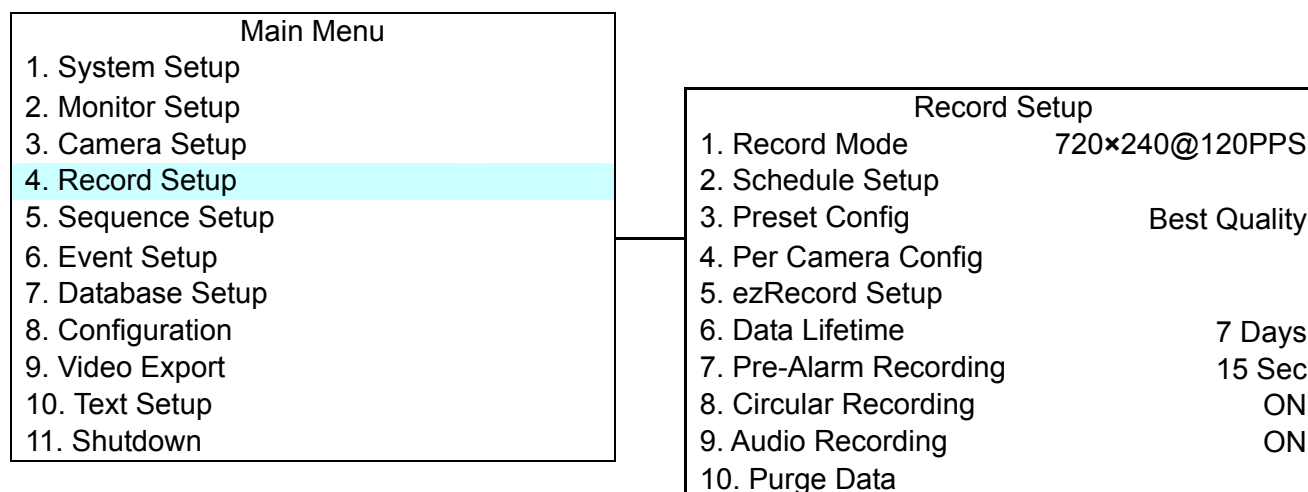

< Record Mode >

The Record Mode is for selecting resolution and recording rate. The relative record settings, such as preset configuration, will follow the record mode setting.

The primary (RAW) image size of the recorded video can be large and is not very effective in terms of transmitting or storing data. Thus, various compression techniques are used to reduce the image size. For instance, if the RAW image size is 10MB, after compressing the image, the size of the image will be greatly reduced depending on the complexity of the image and the compression method used. MPEG-4 and M-JPEG Compressions are two of the most commonly used video compression methods, and are used in our DVR. The differences between the two are listed on the next page.

Comparison Table	MPEG-4	M-JPEG
Bandwidth Consumption	Low	High
Compression	High	Low
Image Quality	Low	High
Latency	High	Low
Storage Requirement	Low	High

Bandwidth Consumption: The MPEG-4 requires lower bandwidth than M-JPEG. So, if your internet speed is relatively slow, MPEG-4 Compression is recommended.

Compression: The size of the image can be compressed into smaller size when MPEG-4 Compression is used. Since the size of the image is reduced, the storage requirement for MPEG-4 Compression is also lower.

Image Quality:

The quality of the M-JPEG compressed images is higher than MPEG-4 compressed images. Note that M-JPEG does not support synchronized audio capacity.

Latency:

Latency is the time delayed between the actual activity and the live video. Since M-JPEG is a simpler compression technique, the latency for M-JPEG is lower than MPEG-4.

Storage Requirement:

The MPEG-4 uses a higher compression technique to reduce the size the image, and thus the storage requirement is lower than M-JPEG.

As you may have already noticed that there is no compression technique which suits every scenario. It really depends on what you prefer between the two. For instance, if you are monitoring the lobby of the National Security Agency, you will be more likely to choose the M-JPEG Compression because it provides better image quality and allows you to see clearer images. Please continue to the next page to learn about how the MPEG-4 and M-JPEG compressions work in our DVR system.

The tables below list the record modes available in the DVR system.

Record Modes (**NTSC**)

	Turbo Model	Standard Model	Light Model
MPEG-4	720 x 480@ 120 PPS	720 x 480@ 60 PPS	720 x 480@ 30 PPS
	720 x 240@ 240 PPS	720 x 240@ 120 PPS	720 x 240@ 60 PPS
	352 x 240@ 480 PPS	352 x 240@ 240 PPS	352 x 240@ 120 PPS
M-JPEG	720 x 480@ 60+TC	720 x 480@ 60 JPG	720 x 480@ 30 JPG
	720 x 240@ 120+TC	720 x 240@ 120 JPG	720 x 240@ 60 JPG
	352 x 240@ 240+TC	352 x 240@ 240 JPG	352 x 240@ 120 JPG

Record Modes (**PAL**)

	Turbo Model	Standard Model	Light Model
MPEG-4	720 x 576@: 100 PPS	720 x 576@ 50 PPS	720 x 576@ 25 PPS
	720 x 288@: 200 PPS	720 x 288@ 100 PPS	720 x 288@ 50 PPS
	352 x 288@: 400 PPS	352 x 288@ 200 PPS	352 x 288@ 100 PPS
M-JPEG	720 x 576@: 50+TC	720 x 576@ 50 JPG	720 x 576@ 25 JPG
	720 x 288@ 100+TC	720 x 288@ 100 JPG	720 x 288@ 50 JPG
	352 x 288@ 200+TC	352 x 288@ 200 JPG	352 x 288@ 100 JPG

Record Mode for MPEG-4 DVR **Light & Standard Model**

For these two models, the user will be able to choose MPEG-4 Compression or M-JPEG Compression for recording to the DVR and transmitting image through the network. For example, when you choose “720 x 480@60 JPG” for your MPEG-4 DVR Standard Model, everything in local and remote site will be in M-JPEG format. On the contrary, when you choose “720 x 480@60 PPS”, everything will be in MPEG-4 format.

Record Mode for MPEG-4 DVR **Turbo Model**

The record mode for the MPEG-4 DVR Turbo Model is slightly different from the two models above. For the MPEG-4 compression modes, there is no difference. For M-JPEG compression modes, the “TC” in the end of each resolution is an abbreviation for “Transcoding.” Our “Transcoder” function enables both MPEG-4 and M-JPEG compression methods to coexist in your DVR system. For instance, if you choose “720 x 288 @ 100+TC”, the DVR will behave this way:

Recorded Video (Local site)	Recorded Video (Remote site)	Live Video (Local site)	Live Video (Remote site)
MPEG-4	MPEG-4	MPEG-4	M-JPEG

Note that the picture per second has been divided into 1/2 because the other half of the original PPS has become the resources for the transcoding mode.

To setup the record mode, move the cursor to <Record Mode> and press ENTER, then select a Record mode using UP / DOWN keys.



NOTE: After changing the Record Mode setting, the warning message "This will FORMAT ALL HARDDISKS and LOAD THE FACTORY DEFAULT CONFIG!" will be shown on the screen. Press ENTER to confirm the selection, then the unit starts to format the hard disks and load the factory default settings, or press ESC to abort. We strongly recommend that you back up the configuration before making any change on Record Mode settings.

< Schedule Setup >

This submenu is used to set the day and night time, or weekend recording schedule.

The Night and Day schedules are used to define daytime and nighttime; the Weekend schedule is tailored for weekends and holidays.

Select <Schedule Setup> from the Record Setup menu and press ENTER; the following menu is displayed.

Schedule Setup	
1. Day Time Start	06:00
2. Day Time End	18:00
3. Night Time Start	18:00
4. Night Time End	06:00
5. Weekend Schedule	YES
6. Weekend Start	Fri 18:00
7. Weekend End	Mon 06:00

■ **Day / Night Time Start/ End**

The Day/Night Start Time and End Time determines the during of day/ night recording time. Time is indicated in 1-minute increments. The time display format in this menu is based on the setting of Time Display Mode.

■ **Weekend Schedule**

The Weekend Schedule determines whether a weekend schedule is in effect. Choose <YES> to take effect the related weekend settings.

■ **Weekend Start / End**

The Weekend Start Time indicates the specific day and time that a weekend begins, for example, FRI 18:00. The Weekend End Time indicates the specific time and day that a weekend ends, for example, MON 06:00. Time is indicated in 1-minute increments.

Note that the value you have set indicates when the regular Day and Night scheduling ends, and Weekend recording begins.

< Preset Record Configuration >

The <Preset Config> is used to select the preset recording quality and frame rate. Different default recording quality levels are offered for user to choose: <Best Quality>, <Standard>, <Extended Record>, <Event Only>, <128Kbps DSL>, <256Kbps DSL>, <512Kbps DSL> and <OFF>. According to various Record modes, the preset configuration options for normal and event status are described in terms of relative recording rate (PPS) and recording size for each channel in the table below.

The preset conditions <Best Quality>, <Standard>, <Extended Record>, <Event Only>, <128Kbps DSL>, <256Kbps DSL> and <512Kbps DSL> override any other quality and rate settings. The default Preset Configuration setting is <Standard>.

Lite Model (MPEG-4)

NTSC	720 X 480 @ 30PPS	720 X 240 @ 60PPS	352 X 240 @ 120PPS
PAL	720 X 576 @ 25PPS	720 X 288 @ 50PPS	352 X 288 @ 100PPS
Best	30 KB	25 KB	15 KB
Standard	18 KB	15 KB	9 KB
Extend	6 KB	5 KB	3 KB

Standard Model (MPEG-4)

NTSC	720 X 480 @ 60PPS	720 X 240 @ 120PPS	352 X 240 @ 240PPS
PAL	720 X 576 @ 50PPS	720 X 288 @ 100PPS	352 X 288 @ 200PPS
Best	28 KB	20 KB	10 KB
Standard	16 KB	12 KB	6 KB
Extend	4 KB	4 KB	2 KB

Turbo Model (MPEG-4)

NTSC	720 X 480 @ 120PPS	720 X 240 @ 240PPS	352 X 240 @ 480PPS
PAL	720 X 576 @ 100PPS	720 X 288 @ 200PPS	352 X 288 @ 400PPS
Best	20 KB	10 KB	5 KB
Standard	12 KB	6 KB	3 KB
Extend	4 KB	2 KB	1 KB

Lite Model (M-JPEG)

NTSC	720 X 480 @ 30JPEG	720 X 240 @ 60JPEG	352 X 240 @ 120JPEG
PAL	720 X 576 @ 25JPEG	720 X 288 @ 50JPEG	352 X 288 @ 100JPEG
Best	38 KB	33 KB	23 KB
Standard	24 KB	21 KB	15 KB
Extend	10 KB	9 KB	7 KB

Standard Model (M-JPEG)

NTSC	720 X 480 @ 60JPEG	720 X 240 @ 120JPEG	352 X 240 @ 240JPEG
PAL	720 X 576 @ 50JPEG	720 X 288 @ 100JPEG	352 X 288 @ 200JPEG
Best	38 KB	33 KB	23 KB
Standard	24 KB	21 KB	15 KB
Extend	10 KB	9 KB	7 KB

DSL for All Models

	128KbpsDSL	256KbpsDSL	512KbpsDSL
NTSC	2 KB	3 KB	4 KB
PAL	2 KB	3 KB	4 KB

Note: PPS is limited to 4PPS for Network Usage

< Per Camera Configuration >

This sub-menu is used to set the Day / Night / Weekend PPS (Picture per Second) and recording quality for each channel. The <Preset Configuration> must be set to <OFF> for accessing these schedules. The menu is displayed as below in Record mode: 720×240@60PPS in NTSC / 720×288@50PPS in PAL).

Per Camera Config			
Cameral Select	CH1		
	Day	Night	Weekend
Normal PPS	7.5	7.5	7.5
Normal Qlty	Mid	Mid	Mid
Event Max PPS	30	30	30
Event Qlty	Best	Best	Best
Event Active	Both	Both	Both

■ **Camera Select**

The item is used to select a desired channel for setting the parameters. Move the cursor to <Camera Select> and press ENTER, then select a channel using UP / DOWN keys. Press ENTER again to confirm the setting.

■ **Normal PPS**

Normal PPS (Picture per Second) is used to set the recording rate for normal status.

Please note that the total normal pps for all channels is limited under the maximum PPS for each Record mode. To increase one channel's pps, you may have to reduce other's first. Event pps is not restricted to this rule, since a smart event scheduler will handle to the total pps with a correct weighting.

■ **Normal Qlty**

The item is used to set the picture size for normal status recording. The available options are listed as follow: <Low>, <Fair>, <Mid>, <High> and <Best>.

■ **Event Max PPS**

Event Max PPS is used to set the event recording rate for Event status. Normally, the Event PPS is set to equal or greater than Normal PPS; the setting is depending on your application. If the Event PPS is set to <0>, **MPEG-4 DVR** series unit stops recording event video during alarms.

■ **Event Qlty**

The item is used to set the picture size for event status recording. The available options are <Low>, <Fair>, <Mid>, <High> and <Best>.

■ **Event Active**

Users are allowed to choose which alarm type needs to be recorded. The available options are <Alarm> (alarm events), <Motion> (motion detection events), <Both> (alarm event + motion detection), and <None> (no events active). The default setting is <Both>, which includes Alarm and Motion event recording.

< ezRecord Setup >

This item aims to ease the complicated record settings, and to make the setup much easier. Note that the item can be reached only when you select <ezRecord> as the option for <Preset Config>.

Select <ezRecord Setup> from <Record Setup> and press ENTER, the sub-menu appears as below figure:

ezRecord Setup	
How Many Days To Record	2 Days
Daytime Record	Yes
Night Record	Yes
Weekend Record	Yes
Record Info	
Average Normal PPS	3.75
Average Normal Quality	Best

Follow these steps to Setup ezRecord:

- Select <How Many Days To Record> and press ENTER, then press UP/DOWN to choose an option. The average normal PPS & Quality will be adjusted automatically. The maximum of days depends of the size of your HDD, in the other words, the larger the HDD installed, the more days the unit can record.
- Move to <Daytime Record> and press ENTER. This item is for you to select whether you want the DVR to record during daytime. If so, use UP/DOWN to select <Yes> as an option; or, select <No> for not recording during daytime.
- Repeat the same procedures through the 3rd and 4th item, respectively. Note that <Weekend Record> will be not accessible if you select <NO> for the item <Weekend Schedule> in <Schedule Setup>.

- Select <Average Normal PPS> and press ENTER, then press UP/DOWN to choose an option. The <How Many Days To Record> will be computed automatically.
- Select <Average Normal Quality> and press ENTER, then press UP/DOWN to choose an option. The <How Many Days To Record> will be computed automatically.



NOTE: The current number of connected cameras will affect the recording quality automatically calculated through the <ezRecord Setup>. Therefore, once you disconnect cameras or connect more cameras to the unit, you should reset the <ezRecord Setup>.

< Data Lifetime >

Data Lifetime indicates the time that a recording is saved and remained in the HDD, between the creation and deletion of a record. Only those video recorded during Data Lifetime will be displayed on the screen and can be played back; those video recorded outside the duration time will be hidden.

Press ENTER to select this item in Record Setup menu, and then use UP / DOWN keys to set the data lifetime. The value ranges from <1> to <365> days, or select <0> to disable the function.



NOTE: If you want to play back the video, which is outside the data duration of lifetime, please extend the duration till the recording data/ time of the video is included.

< Pre-Alarm Recording >

This item is used to set the duration of pre-alarm recording video. The pre-alarm recording function aims to make user view a more complete event video; what user can view is not only the video recorded after the alarm is triggered, but also the video recorded ahead the alarm.

When an event is triggered while normal recording is in effect, the unit will start copying the pre-alarm and the post-alarm video to the event video. The pre-alarm duration can be set from 0~30 seconds. The default setting is 15 seconds.

The quality of the pre-alarm video is the same as the quality setting for normal record video; and the quality of the post-alarm video is the same as the quality setting for event record video.

< Circular Recording >

User can choose to record video in circular mode or in linear mode. If you choose to record in circular mode, then the unit begins to overwrite the oldest recorded video; and stores new video over the HDD spaces. If you choose to record in linear mode in stead, the unit stops recording, and the internal buzzer starts beeping when the HDD is full.

From the Record Setup menu, move the cursor to <Circular Recording> and press ENTER, then select <ON> / <OFF> using UP / DOWN keys.

< Audio Recording >

This item allows user to enable / disable Audio recording function of the unit. When set to <ON>, audio input is recorded and saved with the video. When set to <OFF>, audio is ignored. The default setting is <ON>.

< Purge Data >

This item is used to delete the Normal or Event recording video. In Record Setup menu, move the cursor to <Purge Data> and press ENTER; the Purge Data menu is displayed.

Purge Data		
1. Purge All Data		NO
2. Purge All Event Data		NO
3. Purge Event Before	2005/01/01	
4. Start to Purge		NO

■ **Purge All Data**

The item is used to delete all recorded video from database(s). Set this item to <YES> using UP / DOWN keys, and start the deleting by enable (YES) the <Start to Purge> function.

■ **Purge All Event Data**

The item is used to delete all event video from database(s). Using UP / DOWN keys to select <YES> and start the deleting by setting the <Start to Purge> to <YES>.

■ **Purge Event Before**

The item is used to delete event video before a specific date. Use LEFT / RIGHT keys to move the cursor to next or previous field, ENTER to select the item and UP / DOWN to adjust the value.

■ ***Start to Purge***

After selecting the video you want to delete or setting the date for deletion, set this item to <YES> for start the deleting or choose <NO> to cancel.

Sequence Setup

The Sequence Setup menu allows setting the camera sequence schedule and dwell time for main and call monitor. Select <Sequence Setup> in Main menu and press ENTER; the menu displays as follows.

Main Menu		Sequence Setup	
1. System Setup		1. Main Monitor Dwell	5 Sec
2. Monitor Setup		2. Main Monitor Schedule	
3. Camera Setup		3. Call Monitor Dwell	5 Sec
4. Record Setup		4. Call Monitor Schedule	
5. Sequence Setup			
6. Event Setup			
7. Database Setup			
8. Configuration			
9. Video Export			
10. Text Setup			
11. Shutdown			


Items in the Sequence Setup menu are described in the following subsections.

< Main / Call Monitor Dwell >

The Main / Call Monitor can be set to display full screen video of all installed cameras in sequence. This item is used to set the Main / Call Monitor dwell time, which is the amount of time elapsed between switching images. The dwell time is in the range of 1 to 120 seconds. The default value is 5 seconds.

< Main / Call Monitor Schedule >

This item is used to set the Main / Call Monitor camera sequence in full screen format. Move the cursor to <Main Monitor Schedule> and press ENTER; the menu is displayed as follows.

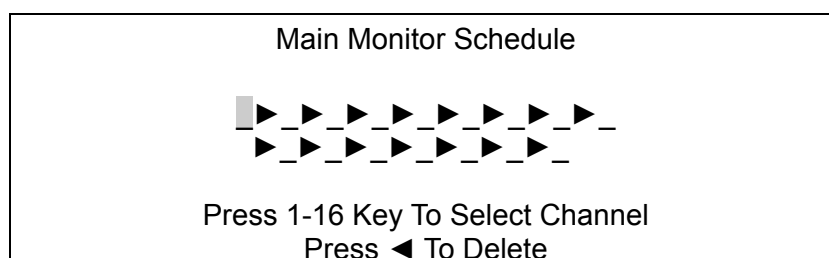

Follow these steps to set a sequence:

- Press LEFT direction key to delete the original setting.
- Press the desired Channel keys to assign a camera to that location in the sequence.
- Continue the steps until the sequence is completed.

A sequence can have up to 16 entries. User can select fewer than 16 entries for camera sequence and leave the remaining entries blank. The sequence can include a specific camera or cameras multiple times.

Event Setup

This menu allows user to determine **MPEG-4 DVR** series behavior in response to an alarm event. In the Main menu, move the cursor to <Event Setup> and press ENTER. The following menu is displayed.

Main Menu		Event Setup	
1. System Setup		1. Internal Buzzer	ON
2. Monitor Setup		2. Event Icon	ON
3. Camera Setup		3. Email Notice	OFF
4. Record Setup		4. Email Attachment	OFF
5. Sequence Setup		5. SMS Setup	
6. Event Setup		6. Alert Notification Setup	
7. Database Setup		7. Event Full Screen	None
8. Configuration		8. Event Duration	5 Sec
9. Video Export		9. Per Channel Config	
10. Text Setup			
11. Shutdown			

Items in the Event Setup menu are described in the following subsections.

< Internal Buzzer >

This item allows user to enable / disable the **MPEG-4 DVR** series internal buzzer. If set to <ON>, the buzzer is activated in response to an alarm. If set to <OFF>, the buzzer is not activated. The default setting is <ON>.

< Event Icon >

The item enables (ON) / disables (OFF) the display of Event Icon on the main monitor when an alarm event occurs. The default setting is <ON> (enable).

The event types are represented by a character respectively; the descriptions are as below table.

Event type	Description
A	Alarm in event
M	Motion detection event
L	Video loss event

< Email Notice >

The item enables (ON) / disables (OFF) the Email notification of an event. When an alarm event is triggered and <Email Notice> is enabled, an e-mail concerning the alarm event will be sent. The default setting is <OFF>.



NOTE: In order to send an event notification e-mail successfully, ensure that the unit connects to the internet.

< Email Attachment >

The function allows the unit to send out brief AVI video regarding the event. The number of the attached AVI video will be equal to the number of cameras you connect to the unit. For example, if the unit has been connected with 8 cameras, then 8 video will be attached with the notice email. The total size of the video will be about 2 Mega,

Select <ON> to enable this function; and <OFF> to disable it. The default is <OFF>.



NOTE: The video clips of the Email Attachment will ONLY be in *.avi format. Please download the Divx Player from www.divx.com to play the *.avi files.

< SMS Setup >

SMS is the acronym for Short Message Service. SMS messages are short text messages that are sent directly to a mobile phone. They are also known as text messages. This function allows you to send an SMS message to any mobile phone on a GSM network.

To perform this function, you need a GSM/ GPRS Modem, the three models listed below are recommended:

TC35i Terminal

MC35i Terminal

TC65 Terminal

Connect the GSM/GPRS Modem and the RS232 connector of the unit, which is positioned on the rear panel. Then enter the OSD setup menu and select <SMS Setup>. The following menu displayed.

SMS Setup		
1. SMS Notice		OFF
2. PIN Authentication		ON
3. PIN Code Setup		
4. Receiver Number		
5. Send Test Message		Execute
6. Port Selection		NONE

■ **SMS Notice**

Select <ON> to send out short message to the assigned mobile phone; and select <OFF> to disable this function. Select <OFF>, the rest items listed in this sub-menu will no longer be accessed.

■ **PIN Authentication**

If you have set PIN code to protect your mobile phone, then you have to select <ON> for this item and enter the set PIN code in the next item.

■ **PIN Code Setup**

Used to set the PIN code which has been set for protecting your mobile phone.

■ **Receiver Number**

Allow you to enter the number of the assigned mobile phone, which the short message will be sent to.

■ **Send Test Message**

Select this item to send a test message to see the setup is successfully done or not.

■ **Port Selection**

The Port Selection enables the user to assign the Dial-In/Out, SMS, Text to the designated port of the DVR. For instance, when the cable of a POS system is inserted to the Serial Port of the DVR, enter the Port Selection menu and assign Text to the Serial Port, the DVR will now be able to obtain the data from the POS system.

Port Selection	
1. Serial Port	Text
2. USB Port-Front	NONE
3. USB Port-Rear Top	NONE
4. USB Port-Rear Bottom	NONE

The locations of the ports are illustrated below.



< Alert Notification Setup >

This function allows the user to send alert notifications to the CMS program which had been installed to your computer. For detailed setup instruction, please refer to the CMS user's manual.

Alert Notification Setup	
1. Alert Configuration Set	1
2. Alert Notification	OFF
3. Alert IP	0.0.0.0
4. Alert Port	9999
5. Alive Interval	120sec

- Alert Configuration Set

<Alert Configuration Set> provides 3 combinations of Alert Notification, IP, and Port.

- Alert Notification

4 options are included in this item; <OFF>, <Event>, <Alive>, and <Both>.

<**OFF**>: The Alert Notification is turned off.

<**Event**>: When the alarm is triggered, the DVR will send an alert message to the CMS.

<**Alive**>: The DVR will send an alive message to the CMS every *N* second just to show you that the connections between the DVR and CMS are in effect. The time interval *N* can be adjusted in <Alive Interval>.

<**Both**>: This enables the DVR to send both Event and Alive alert package to the CMS.

- Alert IP

The Alert IP must match the IP address of the computer.

- Alert Port

The ports for both DVR and the CMS Alert **must be the same**.

- Alive Interval

To define the time interval (1 to 255 seconds) between each alive message.

< Event Full Screen >

This function allows the unit to display the alarm channel in full screen size when an alarm is triggered.

Select <None> to enable this function; select <Main> to display the alarm channel on Main Monitor when an alarm is triggered; select <Call> to display the alarm channel on Call Monitor; and select <Both> to display the alarm channel on both Main Monitor and Call Monitor.

< Event Duration >

This item determines the duration of the buzzer and Alarm Out relay function after an alarm is triggered. The available event duration range is from 1 second to 100 seconds. The default setting is 5 seconds.

< Per Channel Config >

This menu is used to set the Video Loss Detect, Motion Detect and Alarm In / Out function for each channel. The menu is displayed as below.

Per Channel Config	
1. Channel Select	CH1
2. Video Loss Detect	ON
3. Motion Detect	ON
4. Detection Config	
5. Alarm In	OFF
6. Alarm Out	None

■ **Channel Select**

The item is used to select a desired channel for setting the parameters. Move the cursor to <Channel Select> and press ENTER, then select a channel using UP / DOWN keys. Press ENTER again to confirm the setting.

■ **Video Loss Detect**

This item allows user to enable / disable Video Loss as an alarm event. Select <ON> to enable Video Loss alarm events, <OFF> to disable. The default setting is <ON>.

■ **Motion Detect**

Use to enable or disable the motion detection function of the **MPEG-4 DVR** series. By default, the value is <OFF>.

If motion detection function is enabled, it is required to define the motion detection parameters such as detection area and sensitivity settings.

■ **Detection Config**

If motion detection function is enabled, it is required to define the motion detection parameters such as detection area and sensitivity settings. Select a channel for setting the parameters, move the cursor to <Detection Config>, and press ENTER. The Detection Configuration menu displays as follows.

Detection Config

1. Detected Area Setup

2. Sensitivity 88%

3. Area Threshold 6%


----- Detected Area Percentage -----

40%

▲

- **Detected Area Setup**

The Detect Area is displayed as follows after selecting this item. The detection area consists of 273 (21×13) detection grids in NTSC video format or 336 (21×16) grids in PAL format.

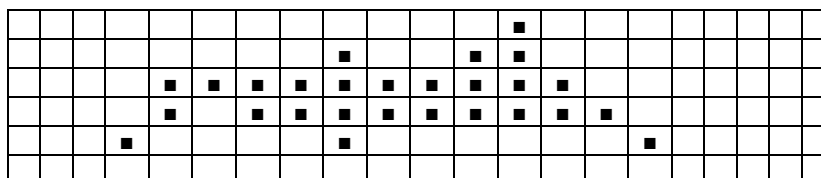

Use the Direction keys to move the cursor and press ENTER to enable or disable a grid. Press MODE to select all of the grids for detection; press MODE again to de-select all of the grids.

- **Sensitivity**

The item is used to set the sensitivity of detection grids for the camera. A greater value indicates more sensitive motion detection. A motion alarm will be triggered, once the amount of motion detected exceeds the Threshold value

Move the cursor to <Sensitivity> and press ENTER, and then use UP / DOWN keys to adjust the value. The value is indicated in 4% increment.

- Area Threshold

<Area Threshold> means the motion alarm triggered level; if the percentage of triggered grids to total detection area is greater than the set value, the motion alarm will be triggered.

For example, if 10 grids are selected and the < Area Threshold > value is 70%, the motion alarm will be triggered when 7 grids are motion detected.

Move the cursor to < Area Threshold > and press ENTER, and then use UP / DOWN keys to adjust the value. The value is indicated in 4% increment.

- Detected Area Percentage

The part shows the percentage and variation of the detected volume.

■ Alarm In

This item allows user to enable / disable alarm input detection. According to your application, select <N/O> (Normal Open) or <N/C> (Normal Close) to enable the alarm input detection or select <OFF> to disable the detection. The default setting is <OFF>.

If you set this item to <N/C> but did not install any device to the unit, the alarm will be triggered and the Event Icon displayed continually until this item is changed to <N/O>, <OFF> or install a device to the unit.

■ Alarm Out

This item allows user to assign an alarm on certain channel to activate the relays. These signals can be used to drive a light or siren to caution an alarm event. The default setting is <None>.

The available options and the corresponding activated alarm outs are listed as below table:

Option	Activating Relay	Option	Activating Relay
<A only>	Alarm Out A	<B+C>	Alarm Out B & Alarm Out C
<B only>	Alarm Out B	<A+C>	Alarm Out A & Alarm Out C
<C only>	Alarm Out C	<All>	All Alarm Out
<A+B>	Alarm Out A & Alarm Out B	<None>	No Alarm Out

Database Setup

The menu displays information of internal and external disks. In the Main menu, move the cursor to <Database Setup> and press ENTER. The following menu is displayed.

Main Menu		Database Setup	
1. System Setup		1. Total Size	xxx GB
2. Monitor Setup		2. Free Size	xxx GB
3. Camera Setup		3. Avail. REC Time	3Days 7Hrs
4. Record Setup		4. Internal Disks	
5. Sequence Setup		5. External Disks	
6. Event Setup		6. NAS Devices	
7. Database Setup			
8. Configuration			
9. Video Export			
10. Text Setup			
11. Shutdown			



NOTE: If the hard disk is failed detected, the message “HDD fail” will display.

< Total / Free Size of HDD >

The Total Size of HDD shows the total capacity of HDD that has been added into database. The Free Size of HDD indicates the free space for recording of the HDD added in database. The information is read-only.

< Avail. REC Time >

The Avail REC Time indicates the available duration for recording. If the unit is set to record in circular mode, the item will show “Circular”. The information is read-only.

< Internal / External Disks >

Select <Internal Disks> or <External Disks> to see information on the storage devices connected to the unit. The submenu is displayed as below.

Internal Disks		
Name	Active	Action
xxx xxxxxxxx-xxxxxx	YES	None

The information of built-in HDD and external storage device will be listed by model name and status. If no storage device connects to the unit, the message “No Available Items!” will show on screen.



NOTE: If the file system of the internal HDD is not compatible for the DVR, the system will format the internal HDD automatically without notice.

Active

The item indicates if the storage device is added into database or not. <YES> means the device has been added into database.

Action

The item allows user to add storage device into database or remove device from database.

The options are <None> (no action), <Add> (add the selected device into database), <Remove> (remove the selected device from database), <Format> (format the selected device).




NOTE: Before removing external devices from the unit, remember to remove the device from database.

Configuration

The Configuration menu can be used to restore the default factory settings, import and export configuration.

Select <Configuration> from the Main menu and press ENTER. The following menu is displayed.

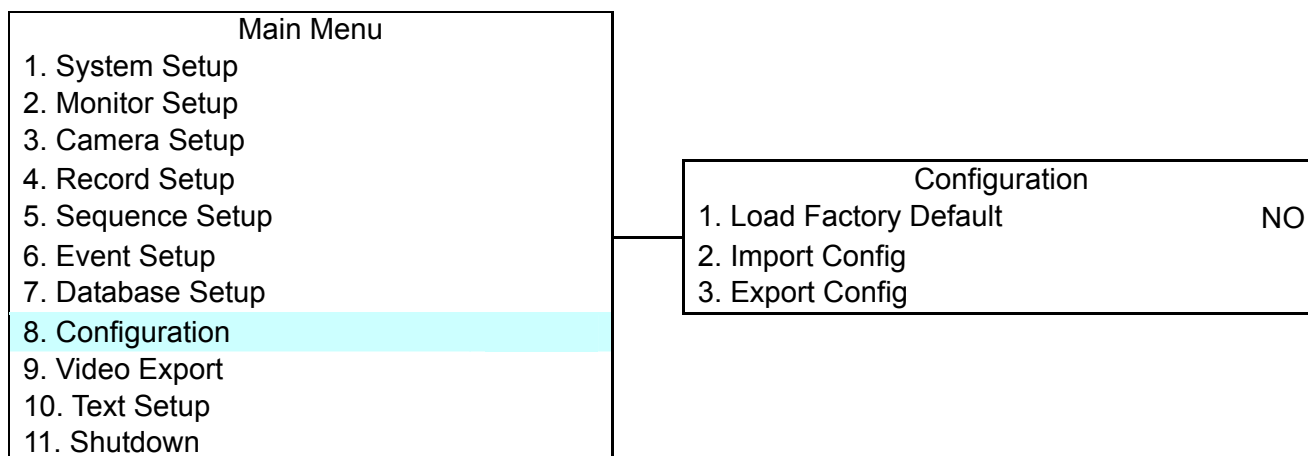

Items in this menu are described in the following subsections.

< Load Factory Default >

This item is used to load the factory setting; select <YES> to recall the factory default setup configuration from the read-only memory, or <NO> to cancel.

< Import Configuration >

This item allows user to load a unit configuration that was saved in an external drive. To import a configuration that was previously exported, make sure the device that saved the configuration is connected to the unit. Select <Import Config> from the Configuration menu and press ENTER. The following menu is displayed.

Import Config		
Config Name		Select
xxxx-xxxx		NO
xxx-xx		NO

Press UP / DOWN to select one of the listed available configuration files, and choose <YES> to start import.



NOTE: If the imported configuration has different record mode from the unit's, the warning message "This config has different record mode. This will FORMAT ALL HARDDISKS." will show.



NOTE: Remove the ThumbDrive® used for importing configuration after the unit restarts, or it will be formatted as well.

< Export Configuration >

The Administrator is allowed to save a unit configuration by exporting it to an external drive, such as a USB Flash Drive. Before exporting the configuration, make sure the device in which the configuration will be saved is attached to the unit appropriately. Select <Export Config> from the Configuration menu and press ENTER. The following menu is displayed.

Export Config	
1. Copy Destination	
2. Config Name	
3. Begin Export	NO

Items in this menu are described in the following sections.

■ **Copy Destination**

Select this item to list available destinations (external memory devices) to which the configuration can be exported. Press UP / DOWN to set a destination. Please note that saving a different configuration to the same copy destination with the same file name will overwrite the previous configuration file without warning.



NOTE: Users are not allowed to select any CD-R/W or DVD+RW as a copy destination, including built-in CD-R/W and DVD+RW.

■ **Configuration Name**

This item allows user to assign the exported configuration file a name. Use the virtual keyboard to enter the configuration file name. Note that the file name can contain up to 15 characters, with no spaces.

■ **Begin Export**

Select <YES> to begin exporting the configuration file, or <NO> to abort the export.



NOTE: We strongly recommend users to export configuration before upgrading your system, and back it up routinely, just in case for unexpected situation.

Video Export

The Video Export menu enables the administrator to export recorded video with digital signature to a USB ThumbDrive®, a CD-RW or to DVD+RW drive. Make sure an external storage device is available and connected to the appropriate port for video export. This menu will not be able to access if you enter the OSD Setup Menu with User's password..

If the <Pre-Alarm Recording> function is enabled, the event video will be exported into two files, including pre-alarm video and video recorded after the alarm is triggered.

Each recorded video will be exported into four files when exporting with digital signature, including *.gpg, *.avi (*.drv), *.sig and readme.txt. To export 1GB file with digital signature may take you about 30 minutes.

From the Main menu, select <Video Export> and press ENTER. The following menu is displayed.



NOTE: The inserted CD will be ejected when its capacity is 99% full.

Main Menu						
1. System Setup						
2. Monitor Setup						
3. Camera Setup						
4. Record Setup						
5. Sequence Setup						
6. Event Setup						
7. Database Setup						
8. Configuration						
9. Video Export						
10. Text Setup						
11. Shutdown						

Video Export					
1. Select Device					
2. Select Ch:	CH1	CH2	CH3	CH4	
3. From	2005/03/19 AM 07:50:05				
4. To	2005/03/28 PM 03:09:18				
5. Select Events					
6. Data Type					Normal
7. Export Format					DRV
8. Digital Signature					NO
9. Erase Disc					NO
10. Begin Export					NO

Items in the menu will be described in the following section.

< Select Device >

The available external devices for exporting video will be listed by name and free size in Select Device menu. The Select Device menu displays as follows.

Select Device			
Device Name		Available	Sel
xxx-xxx-x-x-xx		256 MB	NO
xx-xxx-xx-xxxx		1.5 GB	NO

The **MPEG-4 DVR** series only supports EXT3 file system. Make sure the HDD format is EXT3 before connecting it with the unit. If not, please format this HDD to EXT3 first.

Device Name

The item shows the name of the available device.

Available

The item shows the free space of the available device.

Sel

Set the item to <YES> to set it as an exporting destination; or <NO> to cancel.



NOTE: This last menu item <Erase Disk> will be grayed out when selected device is not a CD/ DVD recorder or not select yet.

< Select Channel >

The item is used to select channels for export. Move the cursor to the wanted channel using LEFT / RIGHT keys, select or de-select a channel by pressing ENTER.

< From / To Time >

The items are used to set the time which data export begins and ends. Move the cursor using Direction keys, and press ENTER to select the date / time items; adjust the selected date and time value by UP / DOWN keys.



NOTE: When the Start / End Time are set, remember to select the exporting Data Type.

< Select Events >

Select the item to display the event list for exporting event video. Move the cursor scroll the event list and press ENTER to select the event you want to export.

< Data Type >

The item is used to select exporting video type. The options are <Normal> (export normal video only), <Event> (export event video only) and <Both> (export both normal and event video).



NOTE: If you want to export selected event video using the item <Select Event>, you have to set <From> and <To> at the same day and time; otherwise, not only the selected event video will be exported to the selected destination, but also other event video recorded during the period between <From> and <To>.



NOTE: You will not be allowed to access the <Select Events> if the Data Type is set to <Normal>.

< Export Format >

The item is for selecting exporting video format. The options are <DRV> and <AVI>.

The *.drv file can only be played back with **DVRRemote** and **DVRPlayer** and multiple camera video can be played from one file. The *.avi file can be played back with Windows Media Player. Note that if multiple channels are exported, each channel is exported to a separate file.

< Digital Signature >

The Digital Signature function enables user to export video clip with the unit's unique signature key. It aims to authenticate a video clip exported from the unit and it has not been modified. User can export video clip with or without a digital signature file (*.sig). Set the item to <YES> to export with the signature file, or <NO> exports without the signature file.

Make sure that you have an external storage device, such as a USB Hard Drive or USB ThumbDrive®, available and connected to the appropriate port for export.

For more information on verifying digital signature, see [Appendix D: Verifying Digital Signature](#).

< Erase Disc >

This function is used to remove information found on a CD-RW or DVD+RW disk prior to exporting new information to the drive. Select <YES> and press ENTER to start deleting data.



NOTE: This menu item will be grayed out when selected device is not a CD/ DVD recorder or not select yet.


< Begin Export >

Select <YES> and press ENTER to start exporting.

Text Setup

The <Text Setup> function provides a connection between a DVR and a Point-of Sale equipment such as cash registers. With this function, the financial transaction data can be linked to specific camera images and recorded to your DVR.

To enable this function, enter OSD Setup menu with correct administrator password, and then select <Text Setup>. Press Enter and the following OSD setup menu will show up.

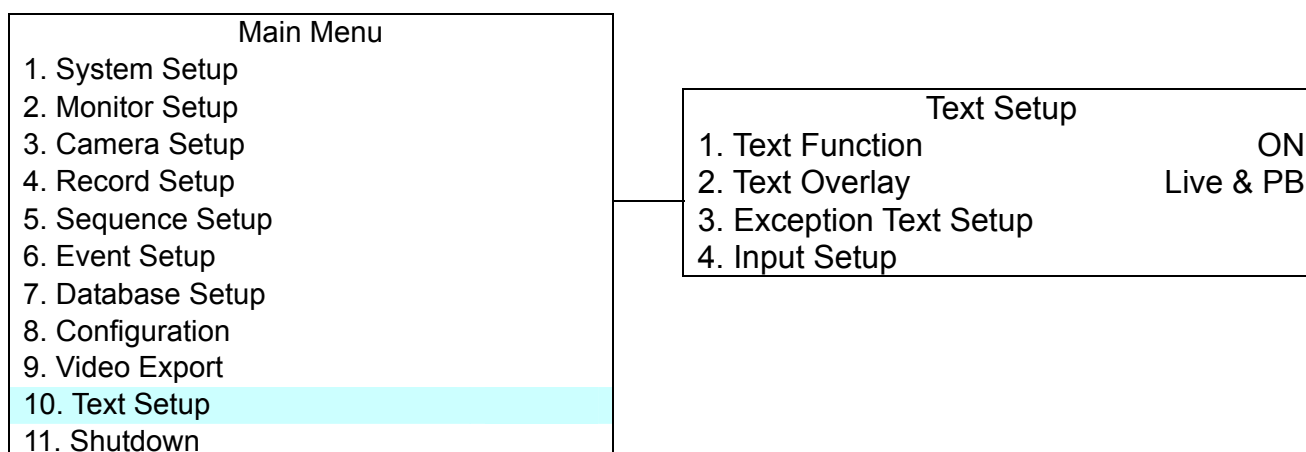

Items in this menu are described in the following subsections.

< Text Function >

This item is used to enable/ disable this function. Select <ON>, the text database will be created on the hard disk.

< Text Overlay >

This item is for you to choose which mode you want to display the test overlay on the monitor. Select <Only Live> to display the text overlay in Live mode; select <Only PB> to display the text overlay in Playback mode; and select <Live/PB> to display in both modes.



NOTE: Text overlay only shown in full screen mode.



NOTE: PB overlay is available only under x1 PB speed.

< Exception Text Setup >

This sub-menu is used to define the conditions that are to be treated as an “Exception” and thus trigger an action (the function will be implemented later).

Exception Text Setup	
Exception No.	1
Trigger	ON
Exception String	NO SALE
By Numerals	OFF
Value	
Value (Upper Limit)	

■ ***Exception No.***

To select an exception for further settings; you can select from <1> to <16>.

■ ***Trigger***

Select <On>, those transactions which contain “Exception Strings” and which meet the “Numerals” conditions will be marked as exceptions in the text database and will trigger preset actions such as alarm output.

■ ***Exception String***

To define Exception String The “exception String” is case-sensitive. Only exactly matched ones will be marked as exceptions.

■ ***By Numerals***

“Exception String” must be defined before By Numerals” takes effect. If “By Numerals” is enabled, only transactions which meet both “Exception String” and “By Numerals” condition will be marked as exceptions and trigger and action.

You can select from below options:

OFF— The function is disabled.

Specific— That the value of transaction meets a specific value will be marked as an exception. That specific value need to be configured through the following sub-setting <Value>,

Greater Equal Than— That the value of transaction is greater then or equal to certain value will be marked as an exception. That specific value need to be configured through the following sub-setting <Value>,

Less Equal Than— That the value of transaction is less than or equal to certain value will be marked as an exception. That specific value need to be configured through the following sub-setting <Value>.

Inside The Range—That the price of transaction is within certain range will be marked as an exception. The range need to be configured through the following sub-settings <Value> and <Value (Upper Limit)>.

Outside the Range—That the price of transaction is outside certain range, will be marked as an exception. The range need to be configured through the following sub-settings <Value> and <Value (Upper Limit)>.



NOTE: Only transactions (1) after “Exception Strings” and “By Numerals” are set and (2) after “Trigger” is <ON> will be marked as exceptions in text database. The data stored before won't be marked as exceptions.

< Input Setup >

This item is used to choose the connection method that is between your Text Device and DVR, and setup some relative settings of the connection method.

Input Setup	
1. Port Selection	Serial Port
2. Input Source	Direct Connected
3. Camera Selection	1
4. Text Filter	ASCII
5. Manual Filter Setup	
6. Input Process	Canonical
7. Text Baud Rate	9600
8. Text Bits	8
9. Text Stop	1
10. Text Parity	None

■ **Port Selection**

It is essential to select a port for either the POS/cash register or modem when the text function is set on. Meanwhile, also check whether the device is connected to the port selected.

Port Selection	
1. Serial Port	Text
2. USB Port-Front	None
3. USB Port-Rear Top	None
4. USB Port-Rear Bottom	None

■ **Input source**

Select whether the input source is direct connected or connected with the Data Converter. If the input source is direct connected, users may need to go to the next item: Camera Selection to select a corresponding camera number.

■ **Camera Selection**

Select a camera to display the text overlay.

■ **Text Filter**

This item is used to choose the text filter. The supported models for pole display and printer are listed below.

Pole Display	Printer
Cache Technology VFD-202T	Citizen CBM-1000 II
Citizen C2202	Citizen CT-S300
Digipos CD5220	Dell T200
Emax Pole Display	Epson TM-T88II/ TM-T88III/ TM-T88IV
Epson DM-D Series	Epson TM-T90
Logic Controls LD9000	Epson TM-930 II
Logic Controls PD3000	Epson RP-U420
Logic Controls PD6000	IBM SureMark TF6
Logic Controls TD3000	IBM SureMark TM6
Magellan	Ithaca iTherm 280
Partnertech CD5220	Ithaca POSJet 1000
Posiflex ICD-2002	POS-X Xr500
Posiflex PD 302	Samsung SRP350
Posiflex PD 303	Sensor TP-288
Posiflex PD-2100	Star TSP100 futurePRNT
Posiflex PD-2200	Star TSP600
POS-X Xp8000	Star TSP700
Scales	Star TSP800
Sibnet	TPG (Axiohm) A794
STAR SCD400-PD	WP-520(ESC/POS)
Soteke VFD2025	
Soteke VFD2029	
TEC	
Toledo 8217	
TYSSO VFD Series	
Ultimate Technology PD1100XL	
Wedderburn DS-770	

■ **Manual Filter Setup**

Once enter the Manual Filter Setup menu, users should key in hexadecimal digits. The menu of the item is shown as follows.

Manual Filter Setup	
1. Header 1	30
2. Header 2	30

■ ***Input Process***

If you will be using a Pole Display from a PC based POS, select <Canonical>. <Non-Canonical> is to be selected when using a Pole Display from a Standalone POS.

■ ***Text Baud Rate***

To setup the baud rate of RS232 via which to connect your Text Device and DVR.

■ ***Text Bit***

To setup the bits of RS232.

■ ***Text Stop***

To setup the stop of RS232.

■ ***Text Parity***

To setup the parity of RS232

Shutdown

The item is used to shut down or reboot the unit. If you must shut down the **MPEG-4 DVR** series for any reason, please use the proper shut down and power up procedures to avoid damage to your unit.

To restart/ shutdown the unit, you have to enter the OSD setup menu with correct Administrator Password, otherwise, the <Shutdown> menu will be unable to access.

Select <Shutdown> in Main menu and press ENTER to access the Shutdown menu, which displays as follows.

Shutdown		
1. Power Off		Execute
2. Reboot		Execute

Power Off

Select this item to shut down the unit. Do not remove the power during shut down until the message "You can safely turn off DVR now!" displays.

Reboot

Select this item to reboot the unit. The color bar and system checking information are displayed on the monitor until the unit is completely restarted.

Appendix A: Technical Specifications

All specifications are subject to change without notice.

Model		Lite	Standard	Turbo
Video				
Operation System		Embedded (Linux)		
Video Standard		NTSC/PAL switch selectable		
Video Operation		Triplex+(Live, Record, Playback , Remote, and Internet access)		
Resolution – Live Video		NTSC: 720 x 480 pixels PAL: 720 x 576 pixels		
Input		BNC x 16,1.0Vp-p/75 ohm		
Outputs	Main Monitor	BNC x 1, S-Video x 1, 1.0Vp-p/75 ohm		
	Call monitor	BNC x 1, 1.0Vp-p/75 ohm		
	Loop	BNC x 16,1.0Vp-p/75 ohm		
VGA Output		800 x 600, 1024 x 768, 1280 x 1024 pixels @ 60Hz		
Picture Refresh Rate		NTSC: 480 PPS(16CH) PAL: 400 PPS(16CH)		
Digital Zoom		2 x 2		
Camera Installation		Plug & Play		
Audio				
Input		RCA x 2, Line-In		
Output		RCA x 2, Line-Out		
Recording Mode		Always Real Time Record, Synchronized w/ Video		
Compression Method		ADPCM, G.726		
File Size		8KB/Sec		
Operation		Remote + VCR mode		
Playback		Only for Video Original Speed		
Recording				
Compression Method		MPEG-4 Advanced Simple Profile		
Recording Mode		Schedule, Alarm, Motion Detection		
Pre-Alarm		0~30 sec		
Resolution & Rate	NTSC 720x480	Max 30 PPS	Max 60 PPS	Max 120 PPS
	720x240	Max 60 PPS	Max 120 PPS	Max 240 PPS
	360x240	Max 120 PPS	Max 240 PPS	Max 480 PPS
	PAL 720x576	Max 25 PPS	Max 50 PPS	Max 100 PPS
	720x288	Max 50 PPS	Max 100 PPS	Max 200 PPS
	360x288	Max 100 PPS	Max 200 PPS	Max 400 PPS
Recording Quality		8 levels presets, adjustable		
Image Size		2K to 20K Byte/picture		
Storage Mode		Linear/Circular		
Playback				
Playback		Play, Stop, Pause, Rewind, Forward, Search		
Playback Speed Adjustment		Yes 1X, 2X...32X		
Retrieve		Date/Time, Event		
Data Life Time		Yes(Programmable)		
Storage				
Build-in Storage		X2 ATA 133 / UDMA 133 IDE, HDD/CD-RW/DVD+RW		
Built-in HDD		NAS		
Export		X3 USB2.0 ports, support ThumbDrive®, CD-RW, or DVD+RW		
Alarm				
Alarm Input		X4, Terminal Block	X8, Terminal Block	X16, Terminal Block
Alarm Detection		N.C./N.O., Programmable		
Auditory Alert		Built-in Buzzer		
Motion Detection		21 X 13(NTSC), 21 X 16(PAL) Grid Array, Sensitivity, Trig Level Adjustable		
Video Loss Detection		Programmable		
Alarm Relay Output		X3, Terminal Block, 1.0A/24V (Programmable)		

Communication	
Network Connectivity	Ethernet RJ-45 connector, 10/100Mbps, supports DHCP/PPPoE/DDNS
Remote Control Software	DVR Remote
Access Control	2 Level Password
Remote Operation	Monitoring, Playback, Recording, System Setup, Dome Camera Control
RS232C	D-sub 9 pin female
RS485	Terminal Block
Dome Control Protocol	DynaColor, Pelco P, Pelco D, AD422, Panasonic_C, Panasonic_N, Fastrax 2

Appendix B: Record Duration

The record duration relates to recording rate, image quality and HDD capacity. Refer to the following table.



NOTE: Record duration times are based on actual tests and represent average file sizes. Performance may vary depending on specific installations and use. Audio recording requires 8 KB per second (or 0.7 GB per day) for data storage.

160 GB Internal Memory @ full D-1 resolution 720×480											
Recording Rate		Recording Picture Quality Level									
Total PPS NTSC	Total PPS PAL	Lowest		Low		Normal		High		Highest	
		NTSC	PAL	NTSC	PAL	NTSC	PAL	NTSC	PAL	NTSC	PAL
		6	6	12	12	18	18	24	24	30	30
120	100	2.70	3.24	1.35	1.62	0.90	1.08	0.67	0.81	0.54	0.65
60	50	5.4	6.5	2.7	3.2	1.8	2.2	1.3	1.6	1.1	1.3
30	25	10.8	12.9	5.4	6.5	3.6	4.3	2.7	3.2	2.2	2.6
15	12.5	21.6	25.9	10.8	12.9	7.2	8.6	5.4	6.5	4.3	5.2
11.3	9.38	28.6	34.5	14.3	17.3	9.5	11.5	7.2	8.6	5.7	6.9
7.5	6.25	43.2	51.8	21.6	25.9	14.4	17.3	10.8	12.9	8.6	10.4
3.75	3.12	86.30	103.73	43.15	51.86	28.77	34.58	21.58	25.93	17.26	20.75
1	1	323.63		161.82		107.88		80.91		64.73	

160 GB Internal Memory @ half D-1 resolution 720×240											
Recording Rate		Recording Picture Quality Level									
Total PPS NTSC	Total PPS PAL	Lowest		Low		Normal		High		Highest	
		NTSC	PAL	NTSC	PAL	NTSC	PAL	NTSC	PAL	NTSC	PAL
		4	4	8	8	12	12	16	16	20	20
120	100	4.05	4.85	2.02	2.43	1.35	1.62	1.01	1.21	0.81	0.97
60	50	8.09	9.71	4.05	4.85	2.70	3.24	2.02	2.43	1.62	1.94
30	25	16.18	19.42	8.09	9.71	5.39	6.47	4.05	4.85	3.24	3.88
15	12.5	32.36	38.84	16.18	19.42	10.79	12.95	8.09	9.71	6.47	7.77
11.3	9.38	42.96	51.75	21.48	25.88	14.32	17.25	10.74	12.94	8.59	10.35
7.5	6.25	64.73	77.67	32.36	38.84	21.58	25.89	16.18	19.42	12.95	15.53
3.75	3.12	129.45	155.59	64.73	77.80	43.15	51.86	32.36	38.90	25.89	31.12
1	1	485.45		242.73		161.82		121.36		97.09	

160 GB Internal Memory @ CIF resolution 352×240											
Recording Rate		Recording Picture Quality Level									
Total PPS NTSC	Total PPS PAL	Lowest		Low		Normal		High		Highest	
		NTSC 2	PAL 2	NTSC 5	PAL 5	NTSC 8	PAL 8	NTSC 11	PAL 11	NTSC 14	PAL 14
120	100	8.09	9.71	3.24	3.88	2.02	2.43	1.47	1.77	1.16	1.39
60	50	16.18	19.42	6.47	7.77	4.05	4.85	2.94	3.53	2.31	2.77
30	25	32.36	38.84	12.95	15.53	8.09	9.71	5.88	7.06	4.62	5.55
15	12.5	64.73	77.67	25.89	31.07	16.18	19.42	11.77	14.12	9.25	11.10
11.3	9.38	85.92	103.51	34.37	41.40	21.48	25.88	15.62	18.82	12.27	14.79
7.5	6.25	129.45	155.34	51.78	62.14	32.36	38.84	23.54	28.24	18.49	22.19
3.75	3.12	258.91	311.19	103.56	124.47	64.73	77.80	47.07	56.58	36.99	44.46
1	1	970.90		388.36		242.73		176.53		138.70	

Appendix C: Dial-up Connections via Modem

A dial-up modem connection allows user to use the remote software and receive alarm notice without an internet connection. Following are the steps for establishing the connection between a **MPEG-4 DVR** series unit and a PC.

Establishing Dial-in Connection

The Dial-in function enables user to establish dial-up modem communication to and from **MPEG-4 DVR** series unit for the remote software use. Follow the description to set up your DVR and PC.

DVR Configuration:


- Connect an USB modem to the USB socket and connect a working phone line to the modem.
- Press MENU and input the Administrator password to access the OSD Main menu. Select <Network Setup> and then <Dial-in Setup> to set up the Dial-In settings, including Dial-in Account and password, etc.
- For more information on dial-in settings, see Section Dial-in Setup.

PC Configuration:


- Click <Start>, <My Network Places>, <View Network Connections> and then select <Create New Connection>. The New Connection Wizard is displayed. Click <Next> to continue.




- Set up the network connection type. Select <Connect to the Internet> and click <Next> to continue.

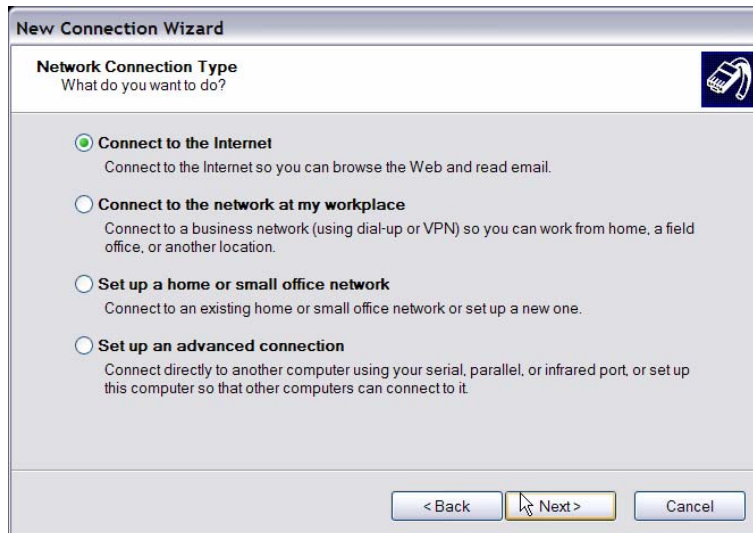


- Select <Set up my connection manually> and click <Next> to continue.

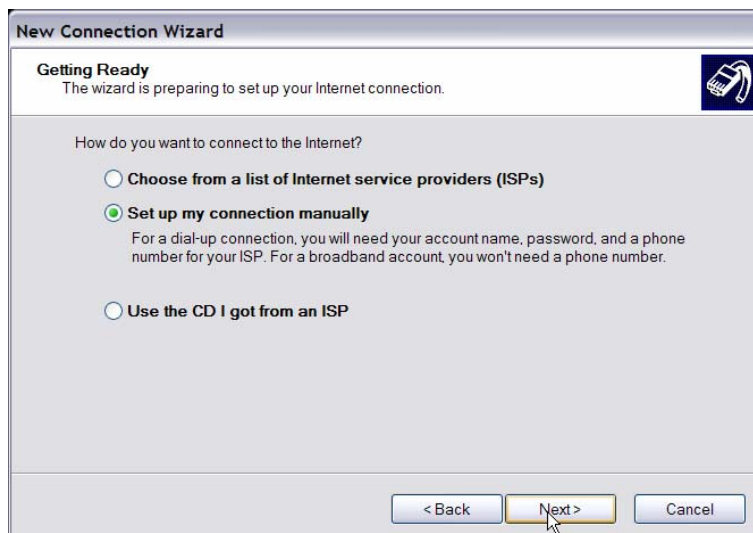

- Select <Connect using a dial-up modem> to connect to the internet through phone line and a modem. Click <Next> to continue.

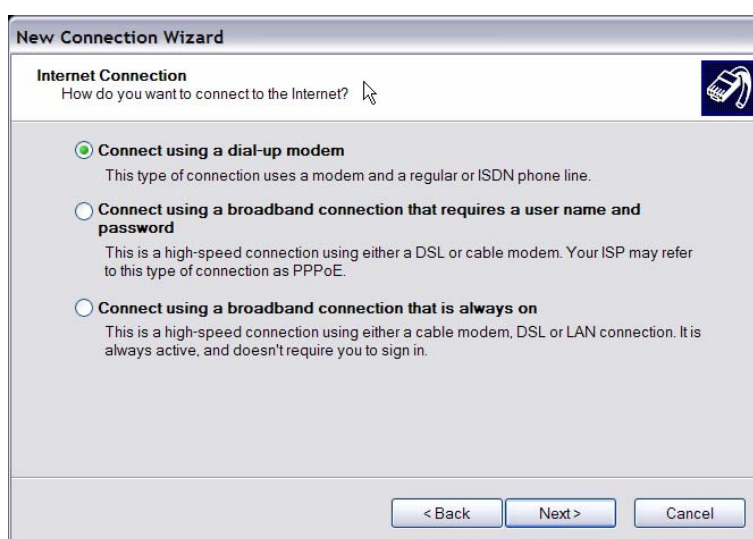

- Type the name of the connection you are creating.

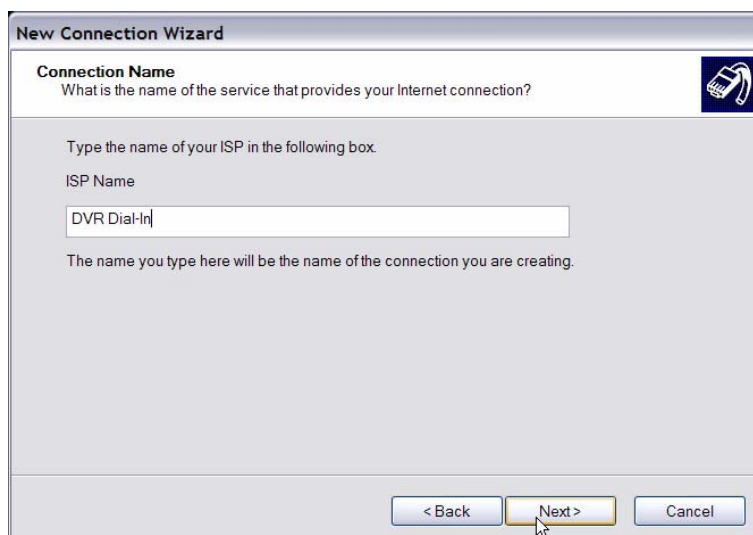

- Enter the phone number of the modem that is connected to the unit.



The screenshot shows the 'New Connection Wizard' window with the 'Phone Number to Dial' tab selected. The title bar reads 'New Connection Wizard'. Below the title bar, the tab is labeled 'Phone Number to Dial' with a subtitle 'What is your ISP's phone number?'. A small icon of a telephone handset is in the top right corner. The main area contains the text 'Type the phone number below.' followed by a label 'Phone number:' and a text input field containing '****'. Below the input field, a paragraph of text reads: 'You might need to include a "1" or the area code, or both. If you are not sure you need the extra numbers, dial the phone number on your telephone. If you hear a modem sound, the number dialed is correct.' At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'. A mouse cursor is pointing at the 'Next >' button.

- Enter the Username and Password that is set in the Dial-in Setup menu.




The screenshot shows the 'New Connection Wizard' window with the 'Internet Account Information' tab selected. The title bar reads 'New Connection Wizard'. Below the title bar, the tab is labeled 'Internet Account Information' with a subtitle 'You will need an account name and password to sign in to your Internet account.' and a small icon of a telephone handset in the top right corner. The main area contains the text 'Type an ISP account name and password, then write down this information and store it in a safe place. (If you have forgotten an existing account name or password, contact your ISP.)'. Below this text are three labels with corresponding input fields: 'User name:', 'Password:', and 'Confirm password:'. At the bottom of the main area, there are two checkboxes: 'Use this account name and password when anyone connects to the Internet from this computer' and 'Make this the default Internet connection'. At the bottom of the window, there are three buttons: '< Back', 'Next >', and 'Cancel'. A mouse cursor is pointing at the 'Next >' button.

- Click <Finish> to complete the dial-in connection.



- Now the dial-in connection is established.

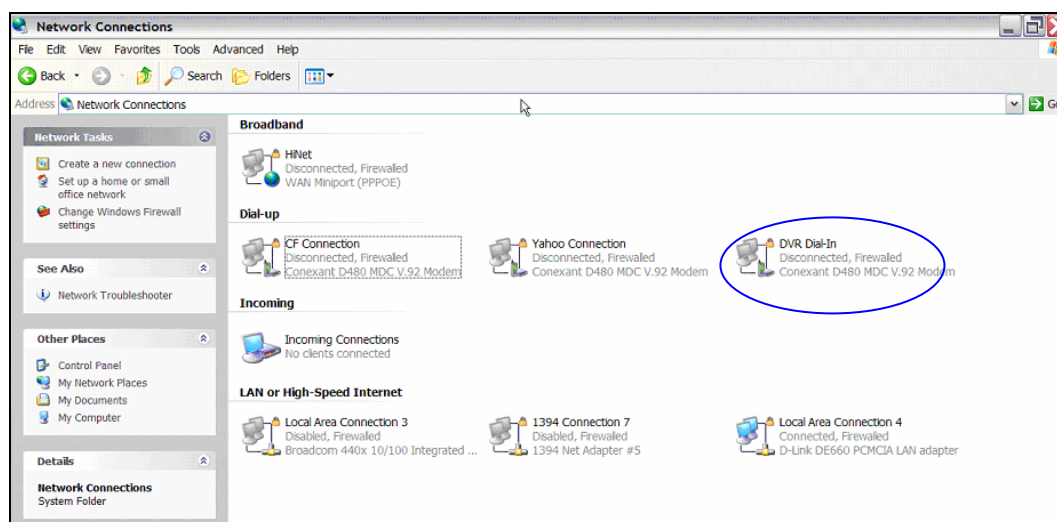

Establishing Dial-out Connection

The Dial-out function enables user to establish dial-up modem communication to and from **MPEG-4 DVR** series unit for remote notification use. Follow the description to set up your DVR and PC.

DVR Configuration:

- Connect an USB modem to the USB port and connect a working phone line to the modem.
- Press MENU and input the Administrator password to access the OSD Main menu. Select <Network Setup> and then <Dial-out Setup> to set up the Dial-out settings.
- Select the <Email Address> in Network Setup menu to edit an e-mail address for alarm notification.


- Select <Event Setup> in Main menu and set the Email Notice function to <ON> (enabled).
- Exit the OSD menu and save the configuration.
- For more information on dial-out settings, see Section Dial-out Setup.

PC Configuration:


- Click <Start>, <My Network Places>, <View Network Connections> and then select <Create New Connection>. The New Connection Wizard is displayed. Click <Next> to continue.




- Set up the network connection type. Select <Set up an advanced connection> and then <Accept incoming connections>. Click <Next> to continue.

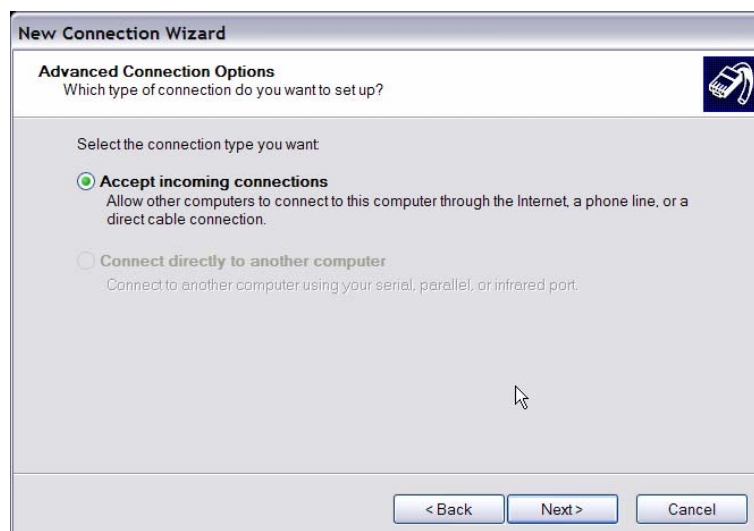


- Choose the modem device that will be used by the PC and click <Next>.

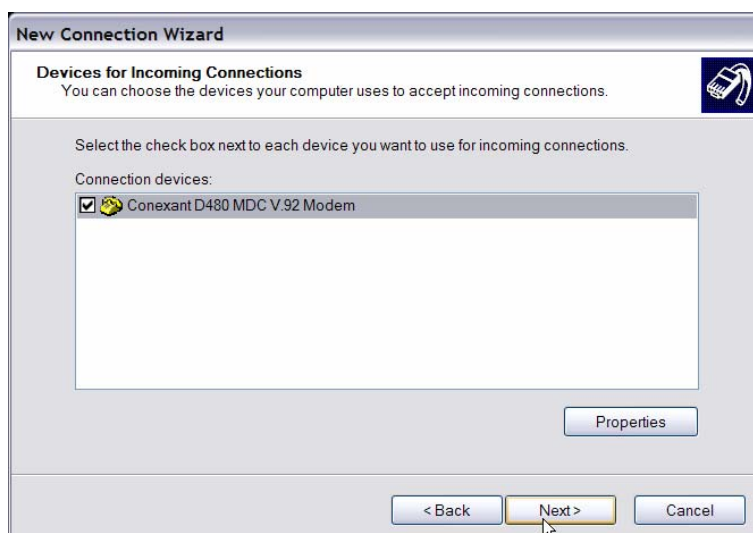


- In Incoming VPN Connection menu, choose <Do Not allow virtual private connections> and click on <Next>.

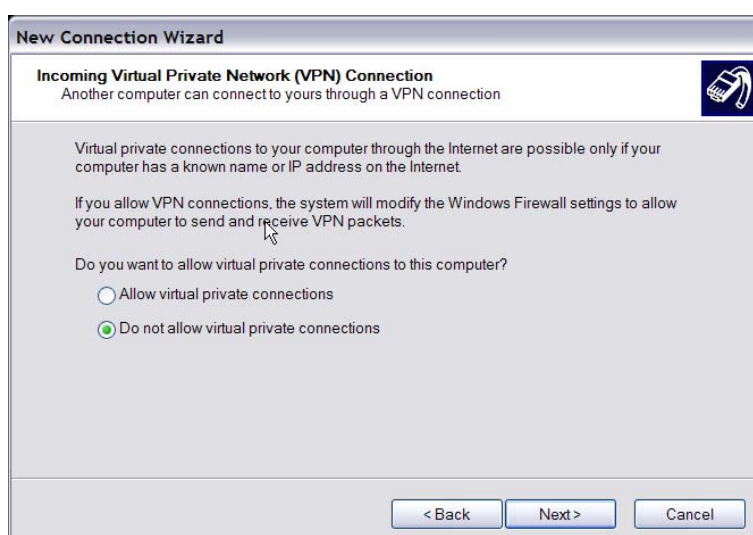


- In User Permission menu, select the users that will be using this connection. If needed, add a new user with the same user password that is set up in Dial-out Setup menu in local DVR. When done, click <Next> to continue.

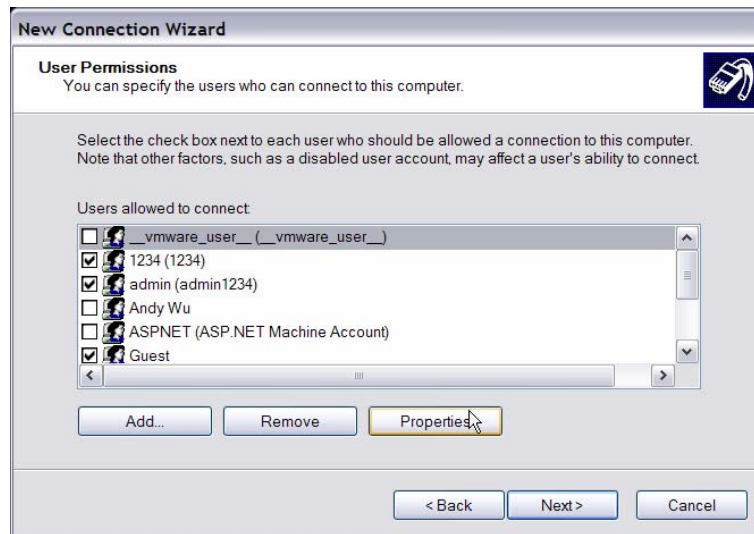


- In Networking Software menu, select <TCP/IP> and click on <Properties>.

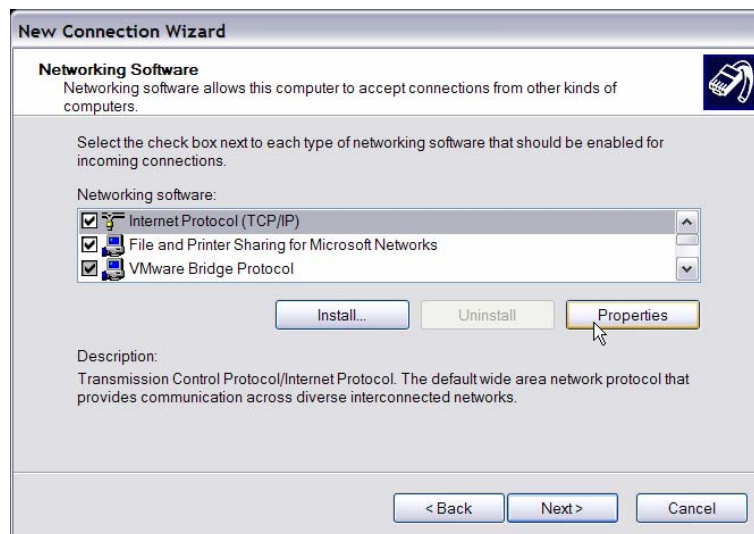


- In TCP/IP address assignment, if the PC has DHCP server, then choose <Assign TCP/IP addresses automatically using DHCP>, else choose <Specify TCP/IP addresses> and enter the range of IP addresses that you wish to use. Once done, click <OK> to confirm and back to Networking Software menu. Click on <Next> to continue.

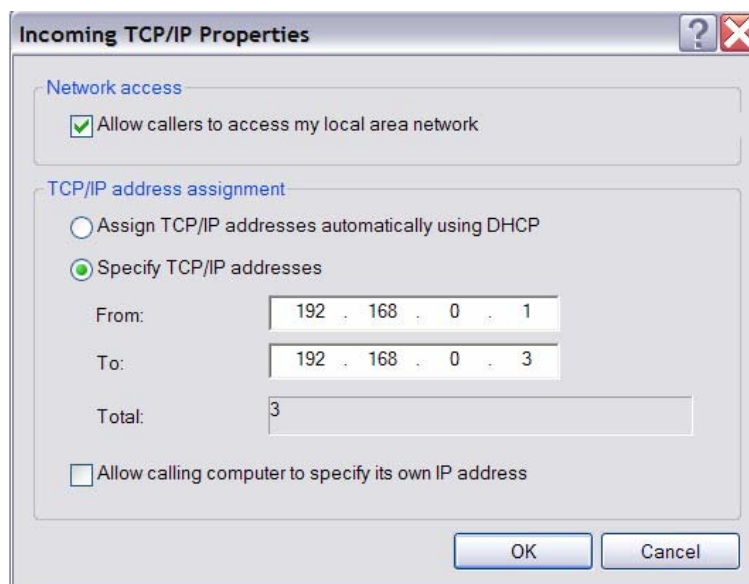

- Click <Finish> to complete the process.

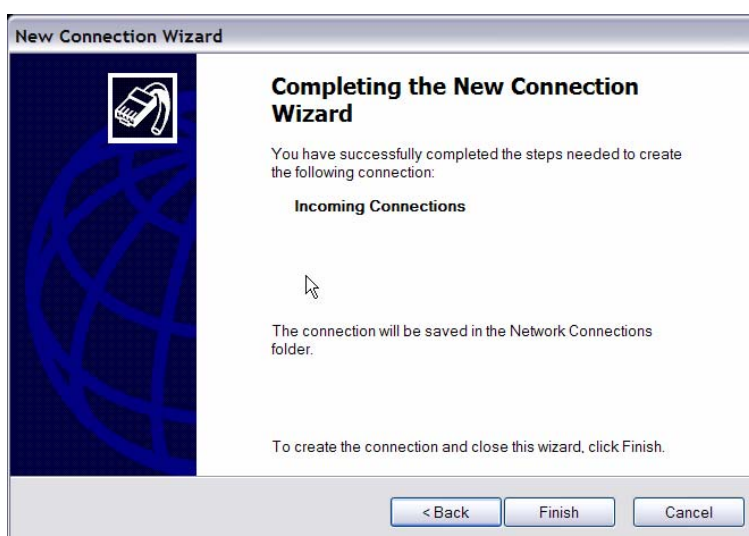

- The Incoming connection is established.

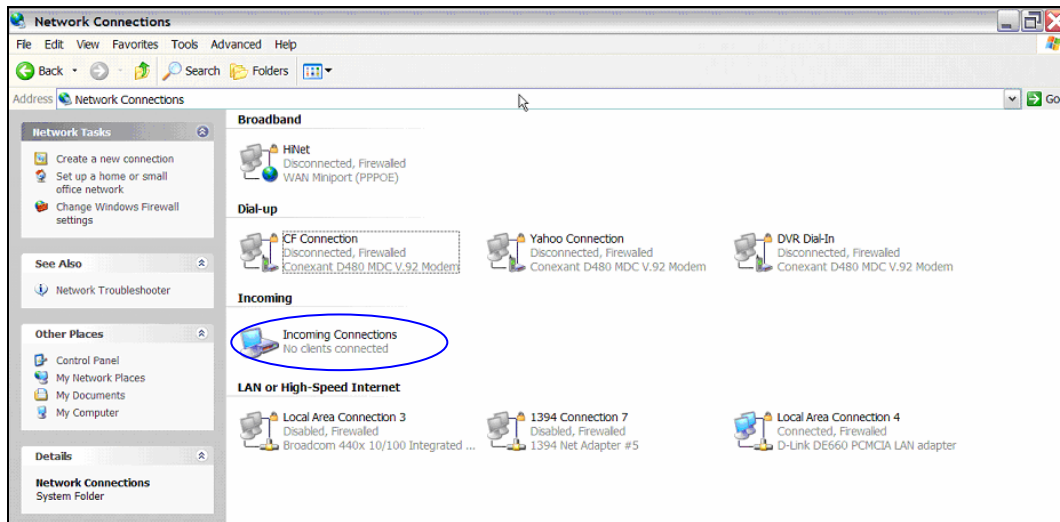

Appendix D: Verifying Digital Signature

The digital signature aims to authenticate a video file exported from the unit. Follow the description to export video with digital signature and verify the digital signature.

To export recorded video with digital signature:

To export recorded video with digital signature to a USB hard drive or CD-RW drive / DVD+RW drive, follow these steps.

- In <Video Export> menu, select copy device, data type, expected channel and start/end time, or event video clips.
- Set the <Digital Signature> function to <YES>.
- Start exporting process by setting <Begin Export> to <YES>.
-


Video Export				
1. Select Device				
2. Select Ch:	CH1	CH2	CH3	CH4
3. Start Time	2005/03/19	AM	07:50:05	
4. End Time	2005/03/28	PM	03:09:18	
5. Select Events				
6. Data Type				Normal
7. Digital Signature				NO
8. Erase Disc				NO
9. Begin Export				NO

Each recorded video will be exported into four files with different filenames, including *.gpg, *.avi, *.sig and readme.txt.

To verify the exported recorded video:

Following are the procedures for digital signature verification.


- Start your DynaRemote™ and click <Play> on the main window tool bar.
- Click <Verify> tab to display the Verify window.

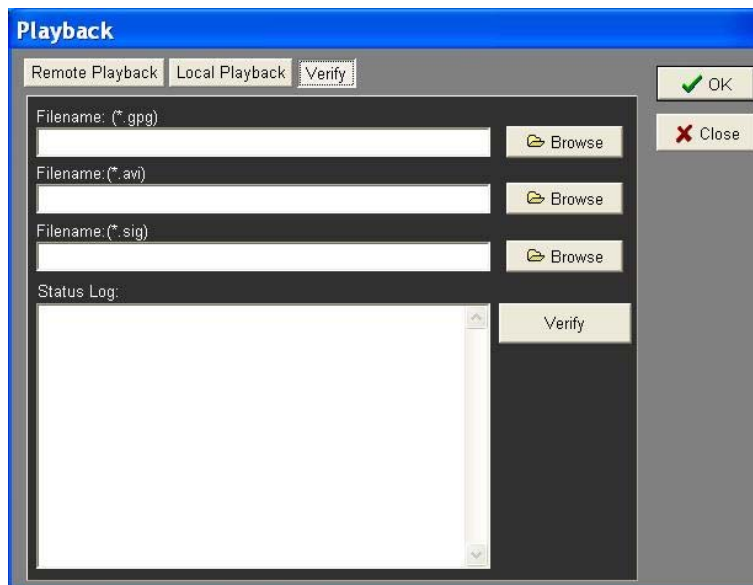


- Click <Browse> to select the *.gpg, *.avi, *.sig files respectively, which belong to the exported video you want to authenticate.




- Click <Verify> to start verifying digital signature.

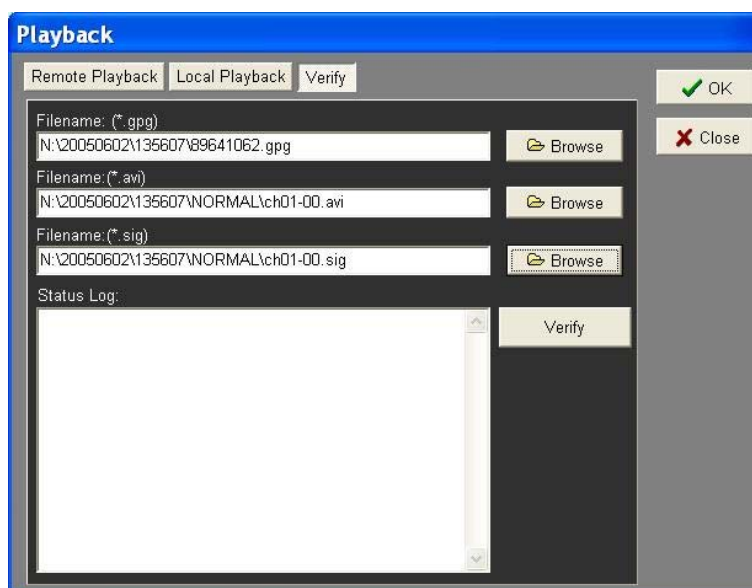

- The result of verify shows in the <Status Log> field. It returns a GOOD or BAD signature result. A GOOD signature indicates the exported clip has not been altered.

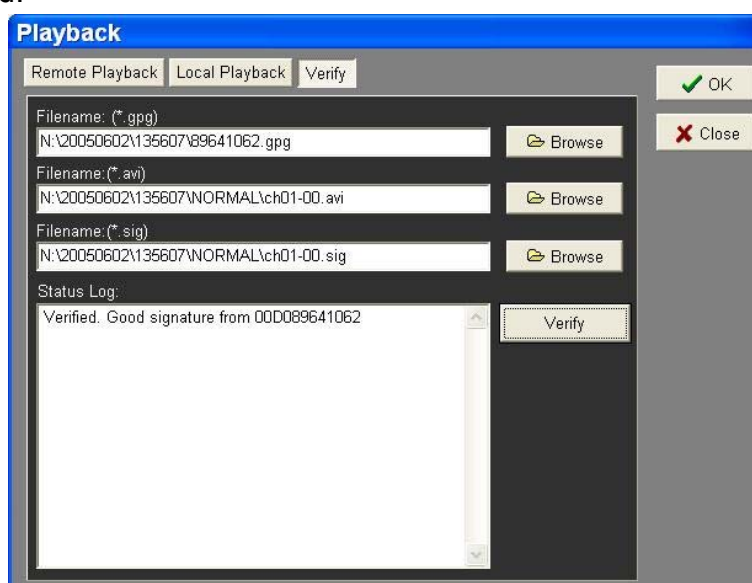

<GOOD> Signature

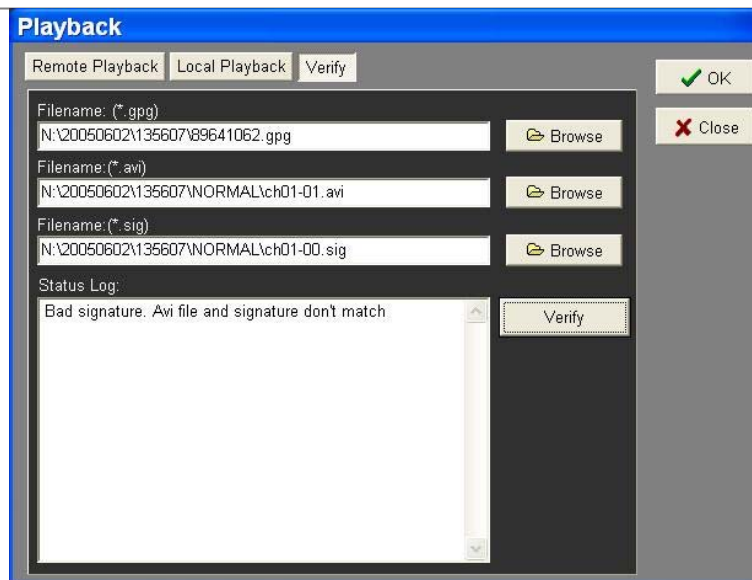


<BAD> Signature

Appendix E: Recommended HDDs

Brand	Model Name	Model Number	Size
Seagate	SV35 Series™ 7200.1	ST3500641AV	500G
	SV35 Series™ 7200.1	ST3250824AV	250G
	SV35 Series™ 7200.1	ST3160812AV	160G
	SV35 Series™ 7200.2	ST3320620AV	320G
	DB35 Series™ 7200.3	ST3320820ACE	320G
	Barracuda® 7200.8	ST3400832A	400G
	Barracuda® 7200.8	ST3250823A	250G
	Barracuda® 7200.9	ST3500841A	500G
	Barracuda® 7200.9	ST3400633A	400G
	Barracuda® 7200.9	ST3300622A	300G
	Barracuda® 7200.9	ST3250824A	250G
	Barracuda® 7200.9	ST3160812A	160G
	Barracuda® 7200.10	ST3750640A	750G
	Barracuda® 7200.10	ST3320620A	320G
	Barracuda® 7200.10	ST3250620A	250G
Western Digital	WD Caviar® SE	WD3200JB	320G
	WD Caviar® SE	WD2500JB	250G
	WD Caviar®	WD1600BB	160G
	WD Caviar®	WD1200BB	120G
HITACHI	Deskstar® 7K400	HDS724040KLAT80	400G
	Deskstar® 7K160	HDS721616PLAT80	160G
	CinemaStar™ 7K500	HCS725032VLAT80	320G
	CinemaStar™ 7K500	HCS725025VLAT80	250G
	CinemaStar™ 7K160	HCS721616PLAT80	160G

Appendix F: Remote Control

A remote control will be shipped with the box. The keys on the remote control are listed as below figure:

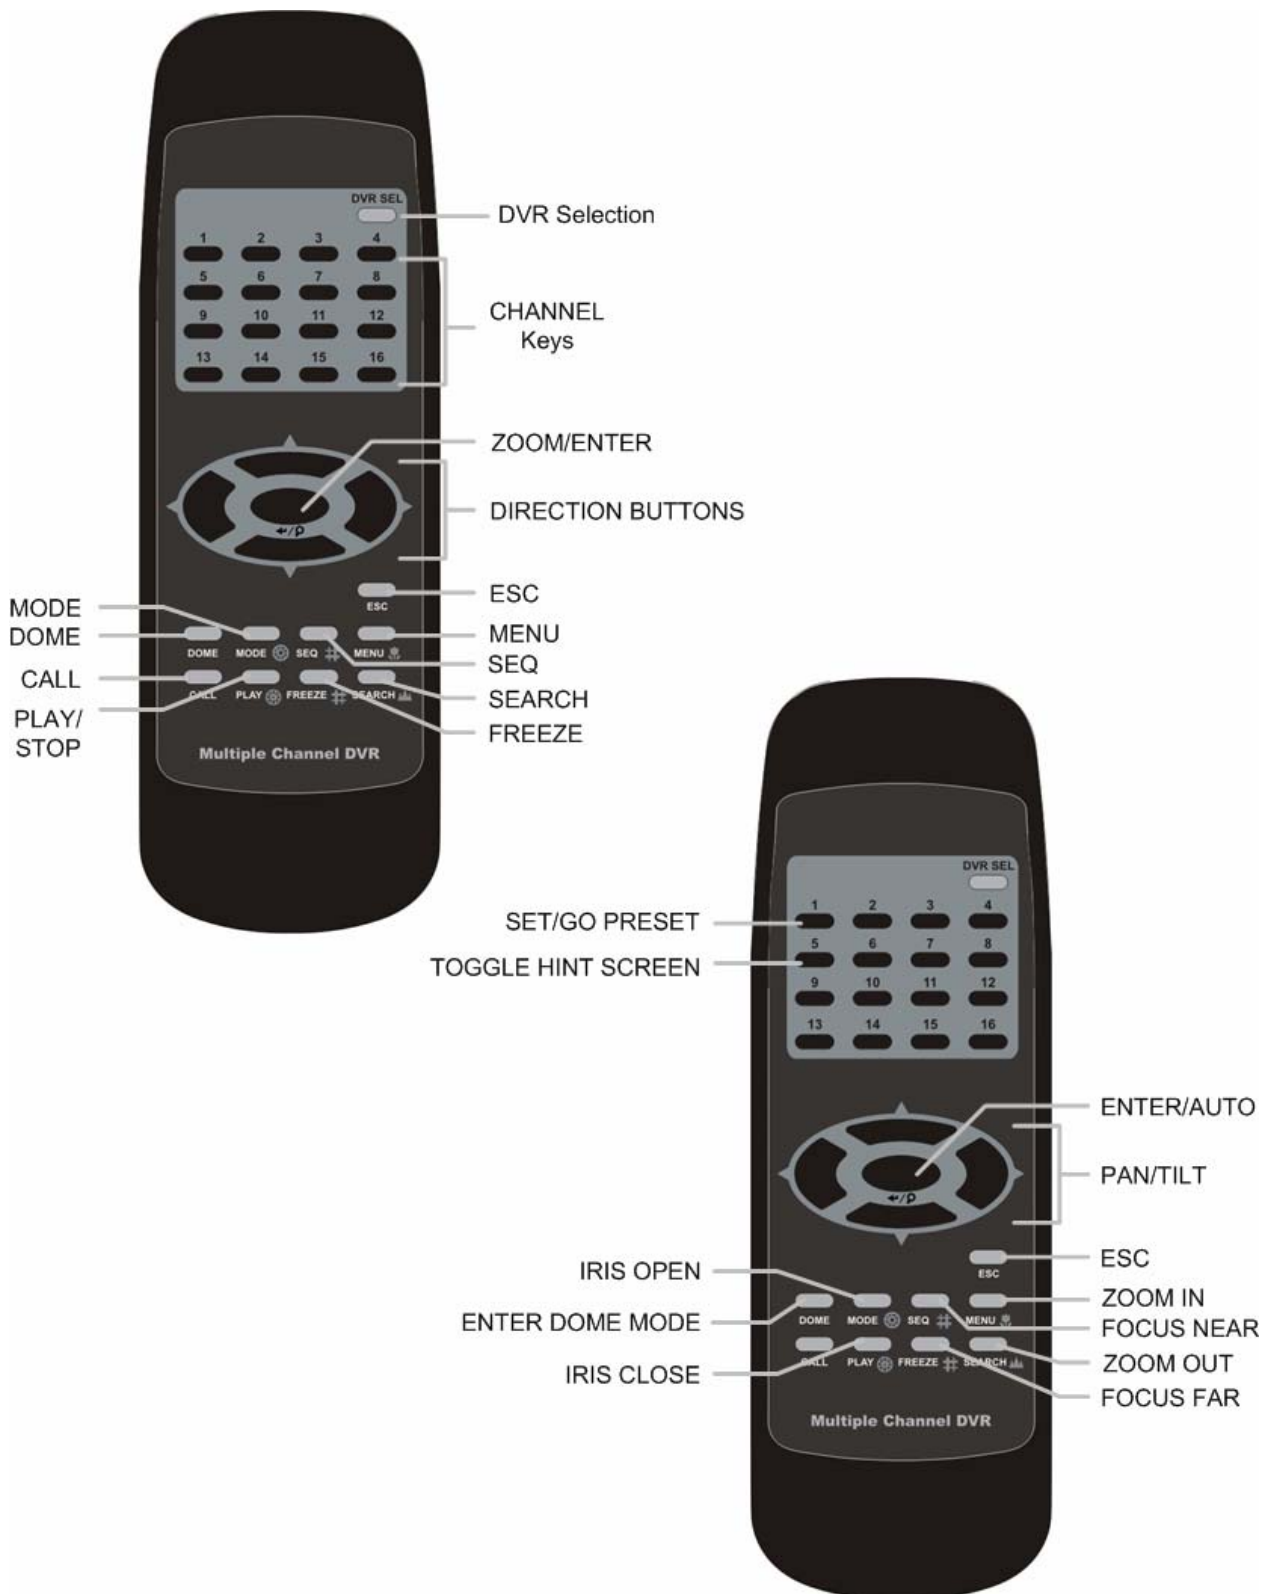

The keys of the remote control function as the keys of the front panel of the DVR. The only difference between the remote control and the front panel keys is the “DVR SEL” key. The DVR Selection key is used to switch control between each DVR.

The remote control can be used to control up to 16 DVRs. To setup the remote control, the first thing you need to do is to assign a unique DVR Unit ID to each DVR.

Use the front panel of the DVR, and follow this path to change the DVR Unit ID, <Main Menu> → <System Setup> → <RS485 Setup> → <Unit ID>

Change the DVR Unit ID to any number between 224 and 239, and exit the menu.

After the DVR Unit ID is changed, you will need to setup the “DVR SEL” of the remote control. Press “DVR SEL”, and then press the Remote Control # immediately to select the DVR. For example, assuming that you have set the DVR Unit ID to 225, then you should press “DVR SEL”, and then press “2” immediately. Now, the remote control will only be able to control the specified DVR. Press “DVR SEL”, and then press the Remote control # to switch between DVRs.

The ID Table is listed below for your reference.

DVR Unit ID	224	225	226	227	228	229	230	231
Remote Control #	1	2	3	4	5	6	7	8

DVR Unit ID	232	233	234	235	236	237	238	239
Remote Control #	9	10	11	12	13	14	15	16

However, if you would like to escape the single DVR control mode, press “DVR SEL”, and then press “ESC” to do so.

Appendix G: ezRecord Diagram Sample

Diagram Sample(Full-D1)

NTSC:720x480@30PPS

PAL:720x576@25PPS

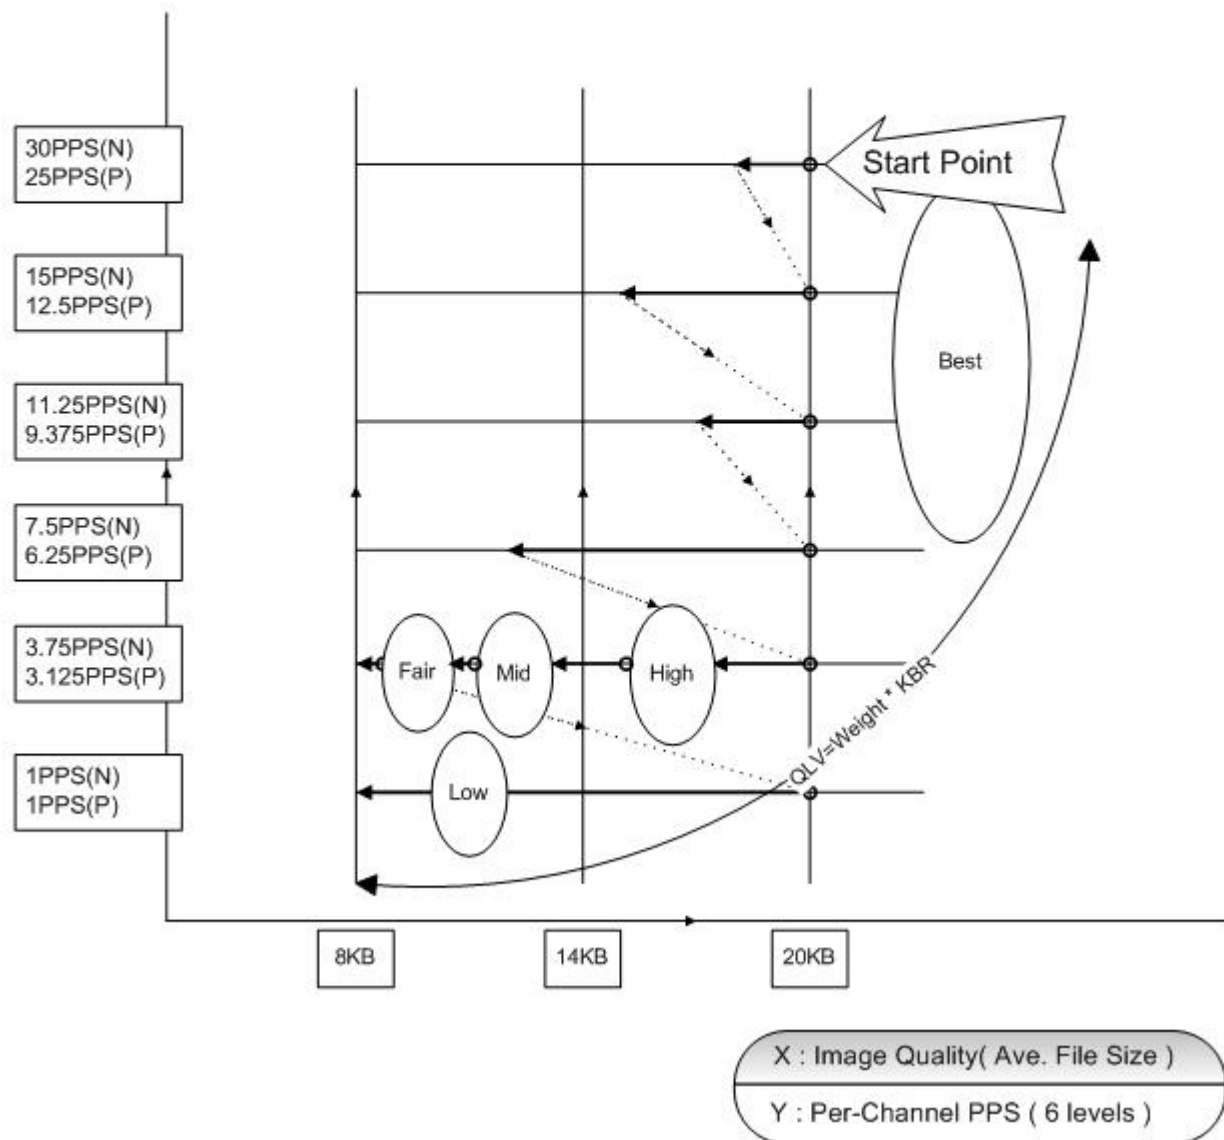


Diagram Sample(Half-D1)

NTSC:720x240@60PPS

PAL:720x288@50PPS


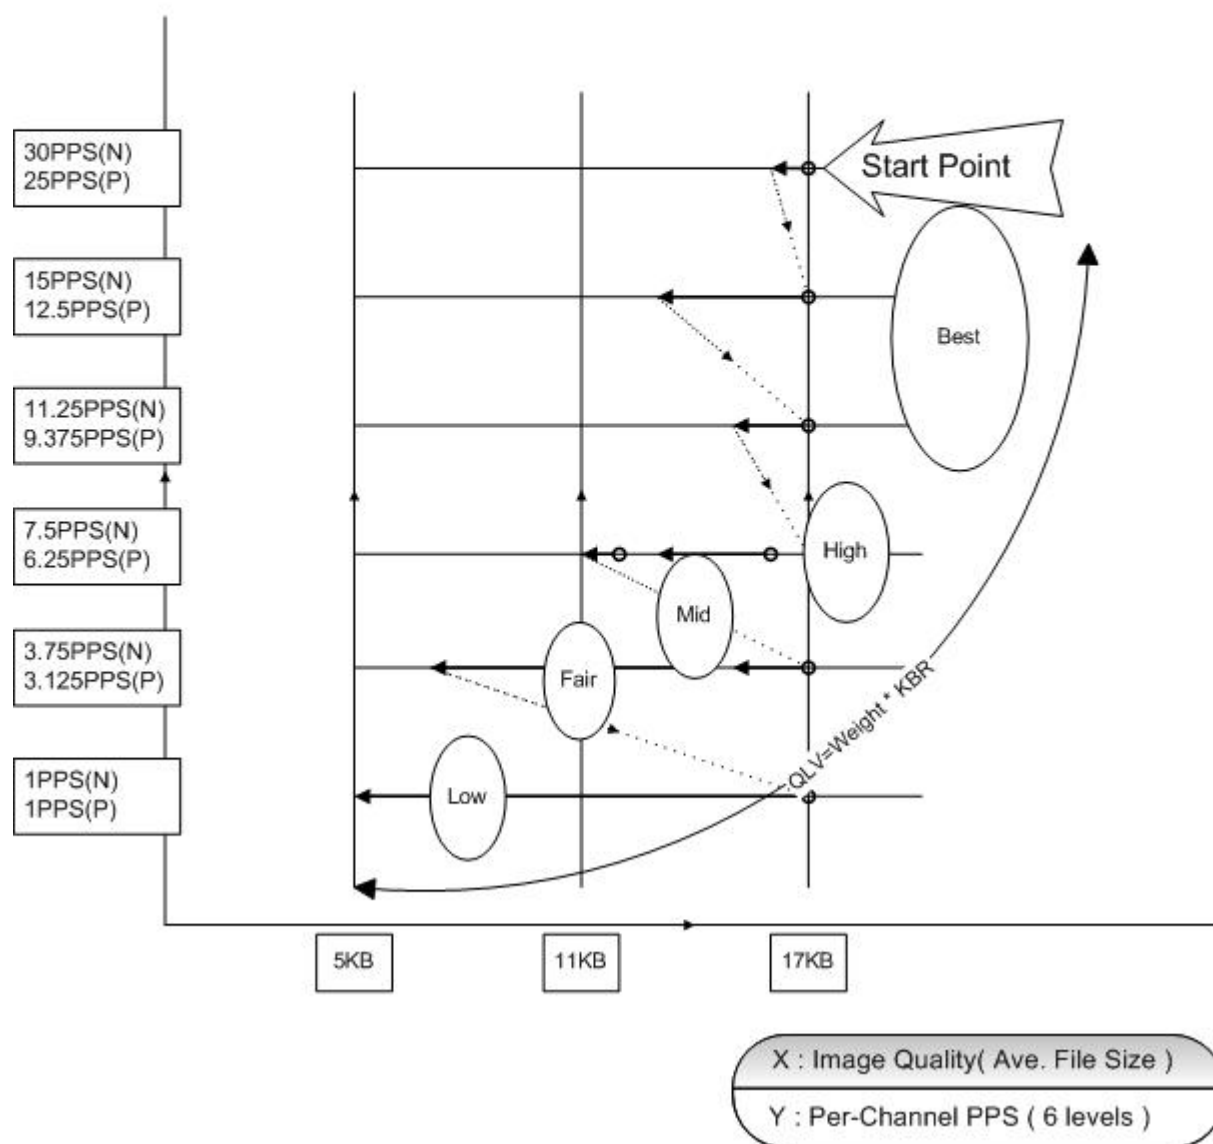


Diagram Sample(CIF)

NTSC:360x240@120PPS

PAL:360x288@100PPS

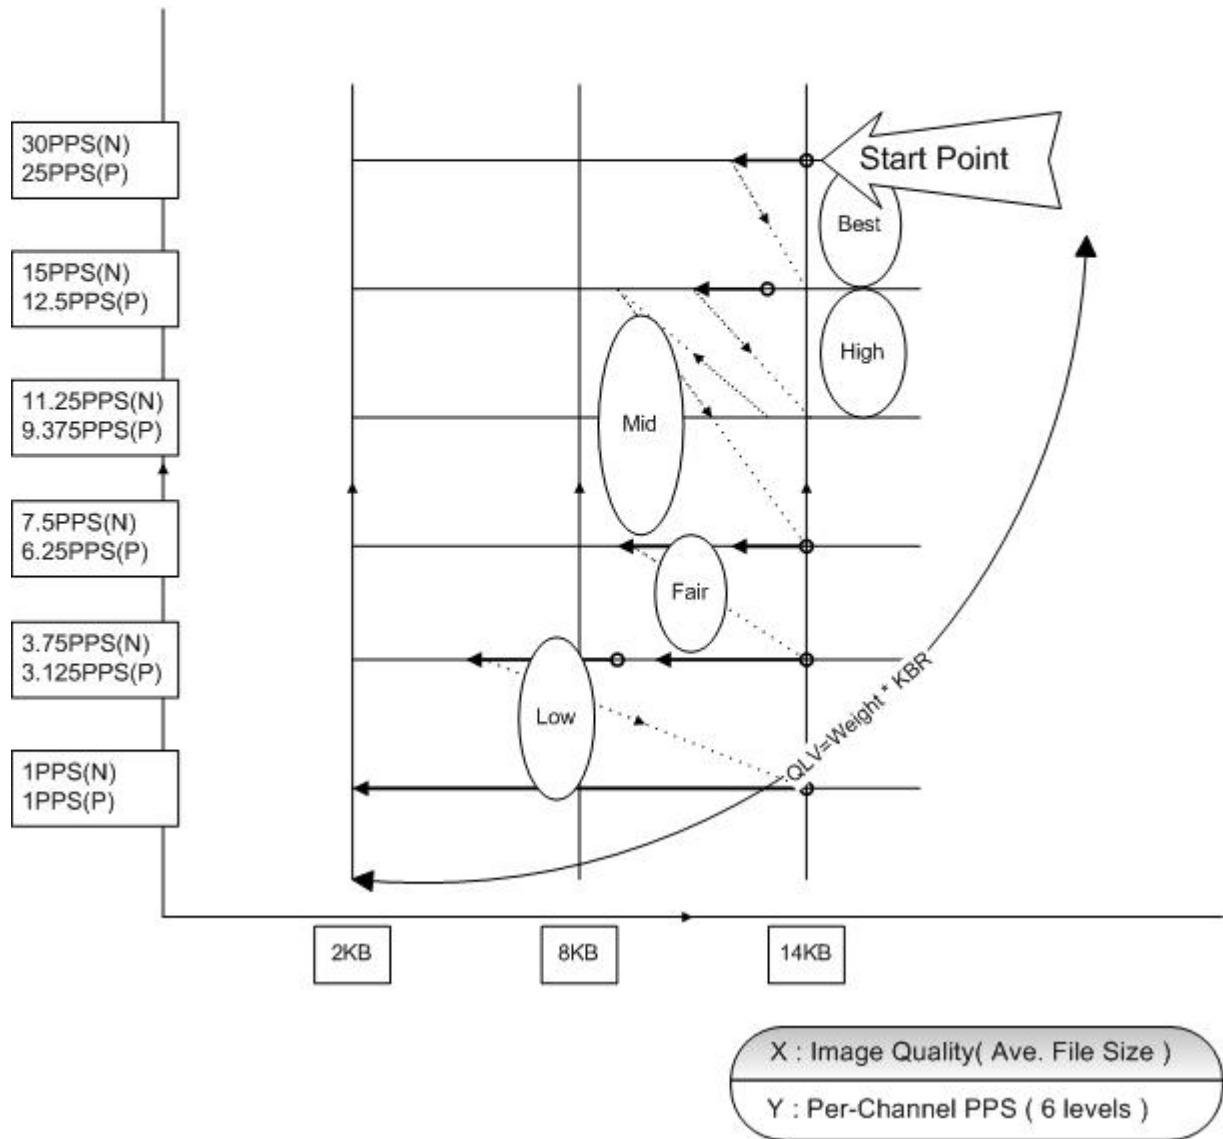

Appendix H: Search Recorded Data by Text

You can search recorded data by more than one way; but only those units equipped with Text function are able to search by text.

To search wanted recorded data by text, you have to setup text relative settings before searching (refer to <Text Setup>).

Follow below steps:

Step 1: Press SEARCH key, which is positioned on the front panel, and the <Text Query Page> appears as below figure.

Search			
-----Search By Time-----			
From:	2005/07/12	AM05:42:17	
End:	2006/07/16	PM03:26:49	
Select:	2006/11/21	PM12:11:56	
Begin Playback			
-----Search By Event-----			
Select Channel:	CH1	CH2	CH3 CH4
Event List			
-----Search By Text-----			
Text Query Page			

Step 2: Move your cursor and position it over <Text Query Page>. Press ENTER to enter the <Text Query Page> menu, which is shown as below figure:

Text Query Page			
By Text			OFF
Item			
Item			
By Numerals			OFF
Value			
Value (Upper Limit)			
By Date/Time			OFF
From:	2006/07/12	AM09:35:21	
To:	2006/11/21	PM11:45:37	
By Channel			OFF
Text Query List			

Step 3: There are four different searching conditions for listing the text recorded data: by text, by numerals, by date/time and by channels.

- **By Text**

To list out the transaction recorded data that matches certain keyword.

Five available options are describe as below:

<OFF>: Select to disable the keyword searching.

<Specific>: Select for listing recorded data matches a single keyword set in the next sub-item.

<AND>: Select for listing recorded data matches two keywords that are found in the same line. You have to setup the next two sub-items.

<OR>: Select for listing recorded data matches on or two of the keywords set in the following two sub-items.

<Exception>: Select to list all exceptions.

- **By Numerals**

To list out the transaction record data that matches certain value. Five available options are describe as below:

<OFF>: Select to disable the numerals searching.

<Specific>: Select for listing recorded data

<Greater Equal Than>: That the value of transaction is greater then or equal to certain value will be marked as an exception.

<Less Equal Than>: That the value of transaction is less than or equal to certain value will be marked as an exception.

<Inside The Range>: That the price of transaction is within certain range will be marked as an exception.

<Outside The Range>: That the price of transaction is outside certain range, will be marked as an exception.

- **By Date/Time**

To list all recorded data recorded during the indicated period. The following two sub-items is offered for you to enter the start time and end time of the wanted period.

- **By Channel**


To list all recorded data that is coming form certain camera. Select <OFF> to disable this function.

Step 4: After completing above settings, move cursor over <Text Query List>, and press ENTER. All recorded data that matches the searching condition will be listed out on the screen.


Appendix I: Operating USB Mouse on Your DVR

The DVR gives the user the privilege to use an USB mouse to operate the DVR. To use the USB mouse, please read through the following descriptions.

Insert an USB mouse to any USB port of the DVR. Move the USB mouse, and the cursor should appear. Move the cursor to the **top-left** of the screen, and 8 icons will be displayed.

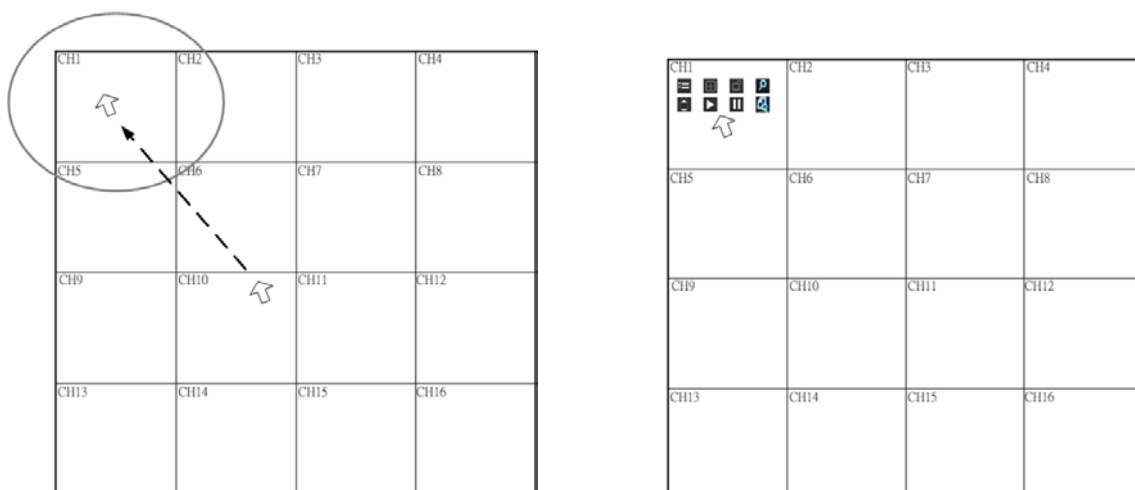


The functions of the 8 icons are illustrated on the left. They are similar to the functions of the front panel keys. Note that the Dual Main icon is only available for the Turbo Model.

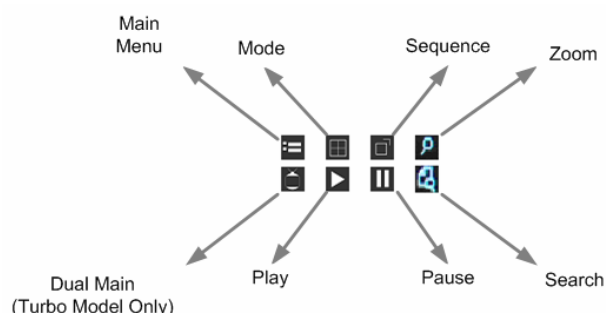

Click the left button of the USB mouse is same as the “ENTER” key of the front panel of the DVR. Click right button of the USB mouse is same as the “ESCAPE” key of the front panel of the DVR. The scroll wheel is used to change value. For example, if you want to change Dome ID, go to the following path:

<Main Menu> → <Camera Setup> → <Dome ID>

Left click on Dome ID, and scroll the wheel up or down, you will see the ID number changes. After the ID number is selected, left click on the Dome ID, and the ID number will be changed.

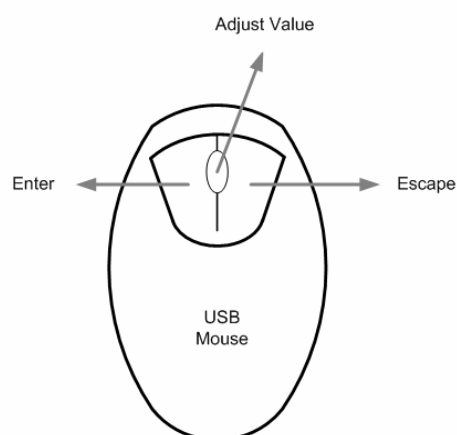

Appendix J: HDD COPY TOOL (EXT2IFS)

For user who wishes to access the data of the HDD of the DVR using Windows® based computer, the user will need a special HDD Copy Tool program called EXT2IFS. This document will show you how to use the EXT2IFS. Please follow the instruction below.

Installing EXT2IFS to Your Computer

To install the EXT2IFS program, you need to download it from <http://uranus.it.swin.edu.au/~jn/linux/ext2ifs.htm>. A detailed description about the program can also be found on the website.

The following steps guide you to install/use the EXT2IFS program.

Step 1:


Download EXT2IFS to your computer from the website listed above.

Step 2:

Turn off your DVR and computer. Remove the HDD from your DVR and install the HDD (Using an External Hard Drive Cartridge or the like) to your computer. Boot the computer after the HDD has been installed.


Step 3:

Extract the EXT2IFS program that you have just downloaded to a folder of your computer. Open the folder and click “service.exe”, and the window below will be displayed.

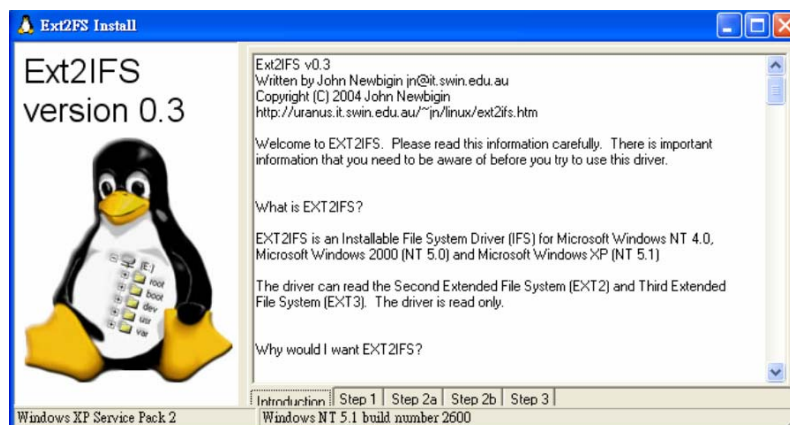


Step 4:

Click <Step 1>, and then choose <Install to SystemRoot> and <Start driver on boot> options. Then, click <Install Driver> button.

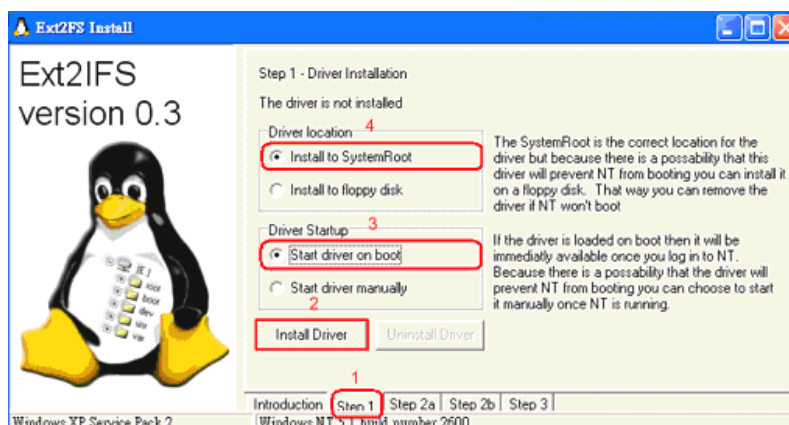**Step 5:**

Click <Step2b>. Assign each partition to a drive letter. After the assignments of HDDs are made, click <Save Assignments> button.

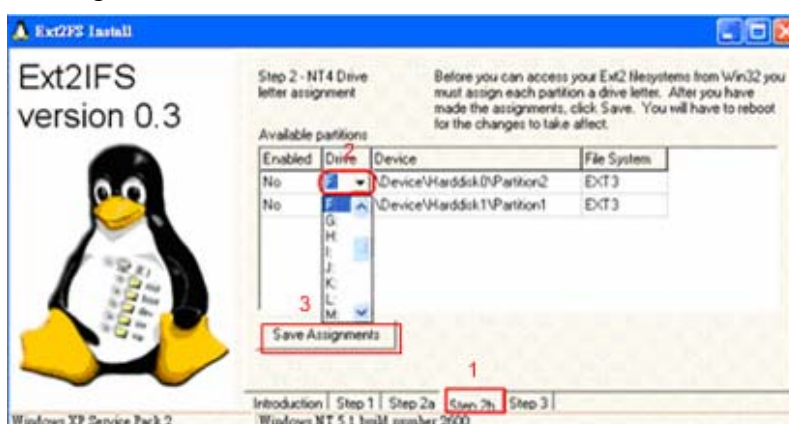
**Step 6:**

Click <Step3>. Then, click <Start Driver> button. Now, reboot the computer for the changes to take effect. The HDD installation is now completed.



Now that you are able to access the HDD, you **must** use the DVRPlayer to play the video clips. You can obtain the DVRPlayer from:

1. Click “DVRPlayer” located on the top right of the DynaRemote™ window to download it..

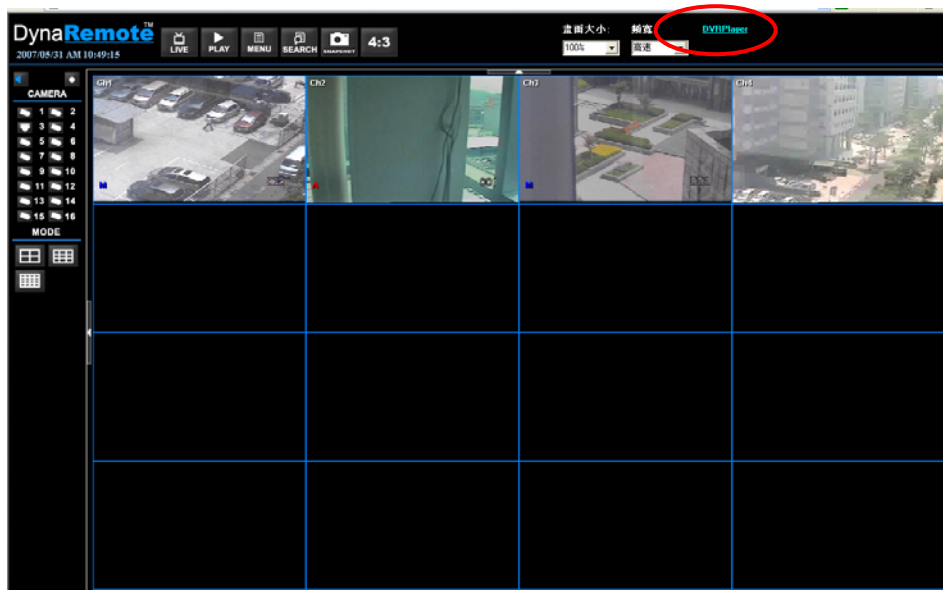

2. Folders of the exported video clips using ezBurn or Export function of the DVR. The exported file folders will contain a DVRPlayer.

After obtaining the DVRPlayer, you can follow the instruction in the next section to play the *.drv file.



NOTE: The *.drv files in the HDD are **different** from the *.drv files that you exported and can ONLY be played by following the instruction on the next page.

Start Playing the *.drv file


After the HDD has been added to your computer, you can now use the DVRPlayer to play the *.drv file. Please follow the steps below:

Step 1:

Click "DVR_Player.exe" in the DVRPlayer folder to start the DVRPlayer.


Step 2:

Click the PLAY icon circled below.

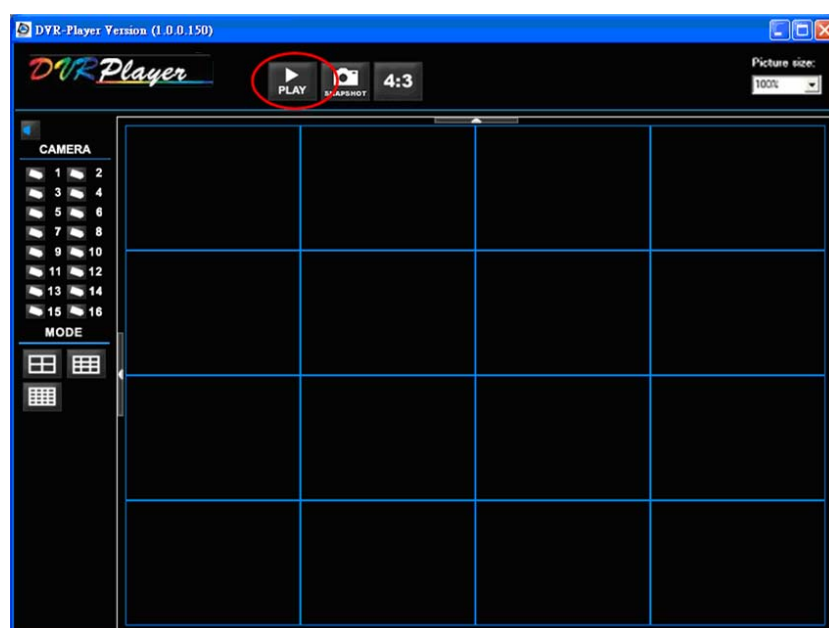


Step 3:

Find the drive that you have assigned drive letter. In this example, the drive is M drive. Click OK under M drive.

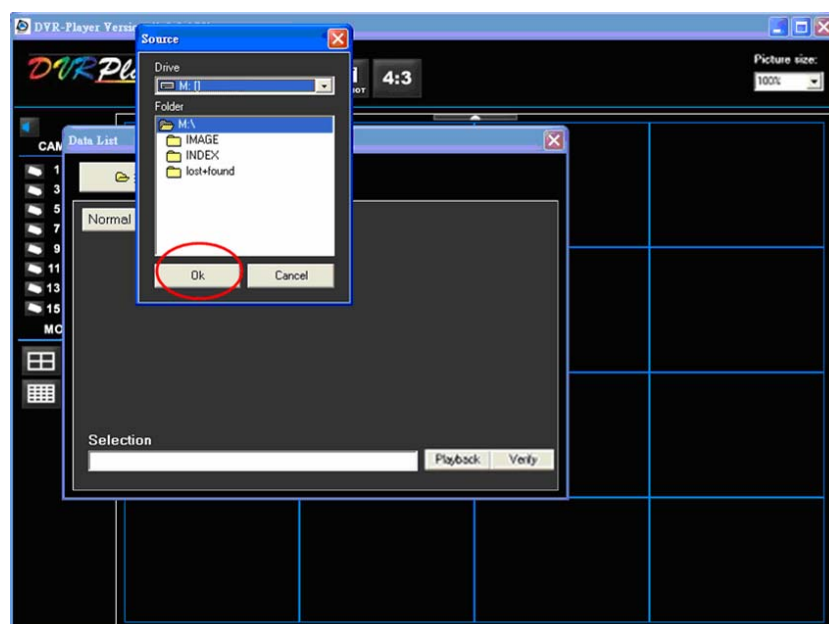

Step 4:

A list of files will be displayed. Select a file and click “Playback” to play the video clip or “Export” if you want to export the file to your computer.

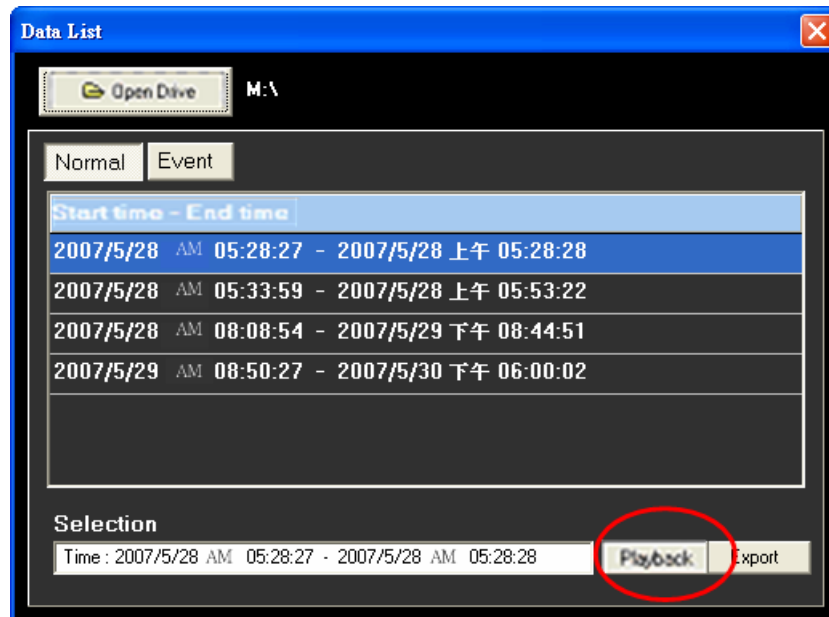

NOTE: The video files are usually stored in the first drive, in this example, the first drive is M Drive. However, if you cannot find any file under M Drive, try N Drive (The 2nd Drive) instead.

To Remove the HDD from Your Computer

To remove the HDD from your computer, you will need to follow the instruction below.

Re-open the EXT2IFS, and go to <Step 1> menu. Click “Uninstall Driver”, and you will see a message “The service is currently started. You will have to reboot before the service is completely uninstalled.” Click “OK” and turn off the computer. Remove the HDD from your computer, and reboot the computer. The removal of HDD is now complete.



VC Videocomponents GmbH
Brachenfelder Str. 45
D-24534 Neumünster
Tel.: ++ 49 (0) 4321 - 39 05 40
Fax: ++ 49 (0) 4321 - 28 04 82
e-mail: mail@vcvideo.de
Internet: www.vcvideo.de

Service
Tel.: ++ 49 (0) 4321 - 3 90 54 33
e-mail: technik@vcvideo.de

All contents of this document may change without prior notice
All rights are reserved.