

Dear Customer!

By selecting this VC product you have chosen a professional device, which guarantees highest possible quality and reliability.

Please read the following instructions carefully before commissioning the product in order to be able to take full advantage of all quality features regarding this product line.

Clientsoftware

Art. Nr. 14509

Art. Nr. 14511

Art. Nr. 14513

Art. Nr. 14516

Art. Nr. 14517

Art. Nr. 14580

Art. Nr. 14595

Art. Nr. 14592

Art. Nr. 14550

INDEX

1. Forward	2
2. Introduction	3
3. Installation	4
4. Using Net software	5
4.1. VC DVR Login Setup	5
4.1.1. Site Setup	6
4.1.2. Setup Connection Mode	8
4.1.3. MISC. Configuration	9
4.1.4. IP Server Setup	9
4.1.5. Change Login Password	10
4.2. VC DVR Net	11
4.3. Remote Search	15
4.4. Remote Setup	18
4.5. Event Viewer	19
5. Appendix	20
5.1. Changing Position	20
5.2. Movie Clip & Snapshot	20
5.3. Event Notification	21
5.4. Dial-Up Connection	22
5.4.1. Installation of Dial-Up Server	22
5.4.2. Installation of Dial-Up Client	27
5.4.3. Using Dial-Up Connection	30

1. Forward

Previously, camera manipulation and data storing/searching were possible only on the DVR installed computer. This meant that a person must physically present in front of the specific computer for even minor administration such as checking the current status of the system. This has become a big hassle for those who must overlook many DVR systems. To overcome these difficulties, VC DVR Net has been introduced.

With VC DVR Net, you can now enjoy all the functions of a VC DVR system anytime, any remote location by connecting to the main server computer over modem, LAN, or Internet. The functions include checking the system status, searching the stored data, and even changing the user settings and the recording schedule.

The ability to be able to perform total control from any place any time is what VC DVR Net makes by introducing Network Security Program for the next generation.

For any question you have, please contact to the following address.

When you are sending your concerned matter, please include your country and phone number.

2. Introduction

- **Support TCP/IP.**

Support communication protocol to log in VC DVR DVR.

- **Real-time Monitoring of VC DVR motion pictures**

Log in VC DVR Net and monitor all VC DVR DVR system images in real time.

- **Flexible relocation of displayed channels**

Displayed channel can be moved to desired location of the screen by simple drag and drop.

- **Searching and Recording VC DVR data**

Various feature for Search and Recording, and even bring data to save it on the local computer.

- **Audio Search**

Recorded audio data can be retrieved VC DVR Net software.

- **Two-way Voice Communications**

VC DVR Net provides voice communication capabilities with the VC DVR DVR system.

- **PAN/TILT/ZOOM/FOCUS remote control**

PTZ Controls can be attained by manipulating VC DVR Net program.

- **Manipulate VC DVR DVR Settings**

Ability to change settings of VC DVR DVR system from VC DVR Net, such as enable / disable of cameras, change recording schedule, and change setting of sensors.

- **Remote Notify function (Automatically message alert sent from VC DVR DVR)**

When VC DVR DVR System detects motion or sensor trigger, it notifies its event and automatically turns on VC DVR Net (while VC DVR Net is minimized). Also can be verified from event viewer


- **Analyzing Event Log**

VC DVR Net can receive and record events notified from VC DVR DVR System, and the event viewer will directly connect to the VC DVR DVR System to retrieve data.

-VC DVR CAP, VC DVR MPG, VC DVR LIVCAP are all supported.

3. Installation

Click 'Setup.exe' and follow the procedure.

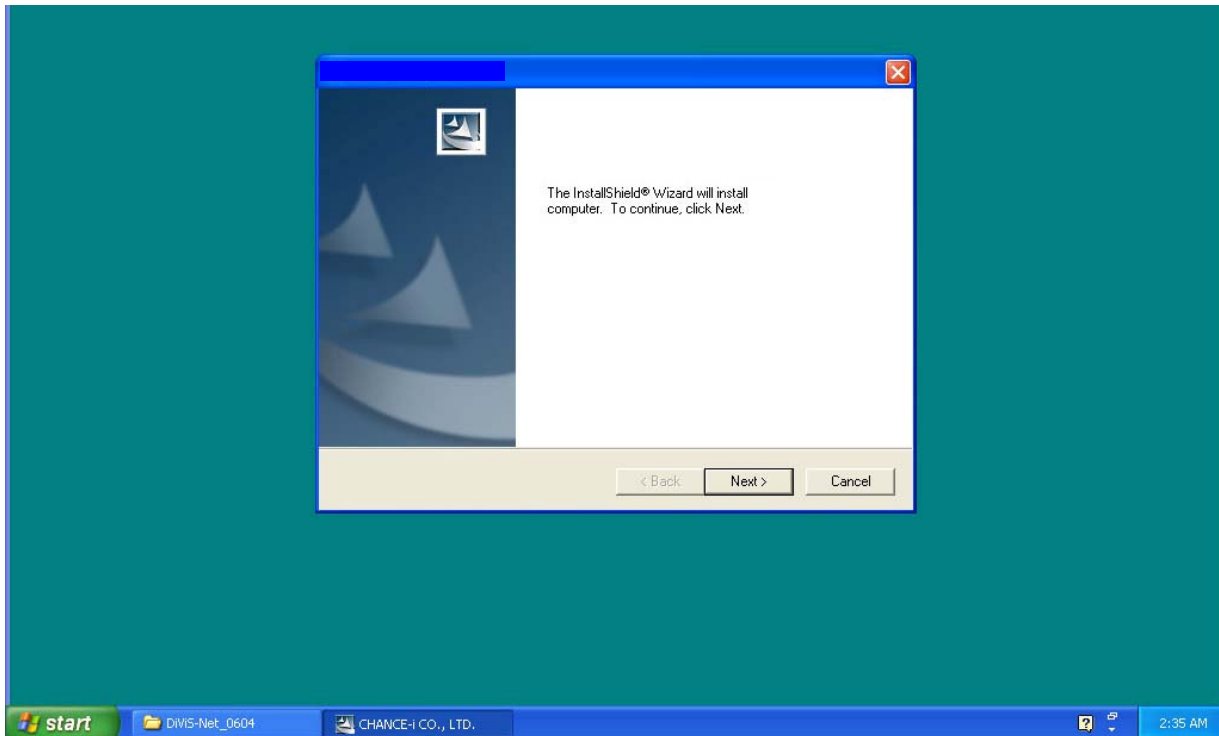

After installation, following folder will be created in the Start menu.



VC DVR Net: VC DVR Net program

AVI Viewer: Program to view video clips recorded at the local storage.

Event Viewer: Program to view event log.

Uninstall: VC DVR Net remove program

4. Using Net Software


4.1. VC DVR Login Setup

Run VC DVR Net. Then following dialogue box appears, which asks for ID of VC DVR Net.



- **Login:** ID / password is for the authorized manager who controls the local network system. Note that login name and password here is for VC DVR Net program. It is different login and password than that of DVR-main.
- **New:** Create a new user (management) who wants to have the new network system.
- **Edit:** Change the existing information of registered user.
- **Cancel:** Exit without change.
- **Minimized screen:** Make the tray icon of this network program. Used for Remote Notify.

For the first time, or to add a new user, click “New” and type the information of user as follows.

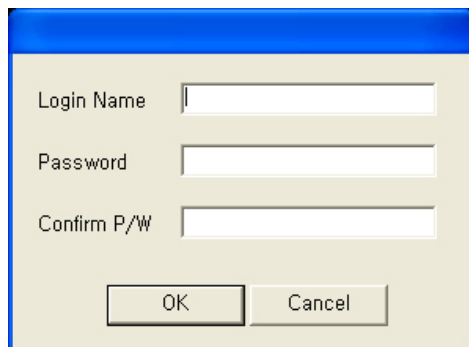


- **Login name:** ID for a VC DVR Net program user.
- **Password:** Password for Login.
- **Confirm P/W:** Reconfirm the password

Note: The user created here is for local manager, which is not related the user(s) registered at VC DVR System.

After you input the above information, click “OK”. Then, “Add, Delete and Edit site information” screen will be appeared.

4.1.1. Site Setup

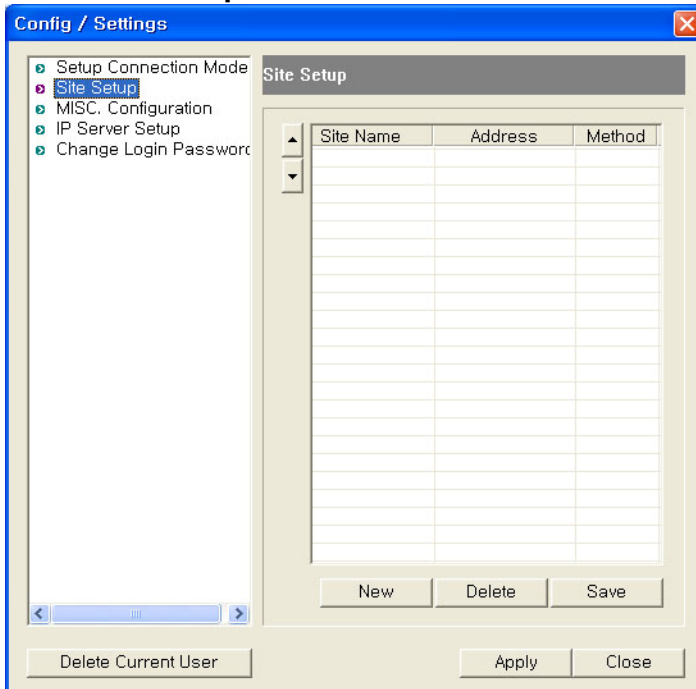


- **New:** Add a new site information.
- **Delete:** Delete the registered site.
- **Save:** Record any changes made.

- **Apply:** Apply any changed setting and close the Config / Settings.
- **Close:** Close Config / Settings without applying changes

Note: Any changes will be effective once the Save button is clicked. Close or Apply without Save will loose all changed information. The same site name can not be registered twice.

Click “New” to add a new site information.

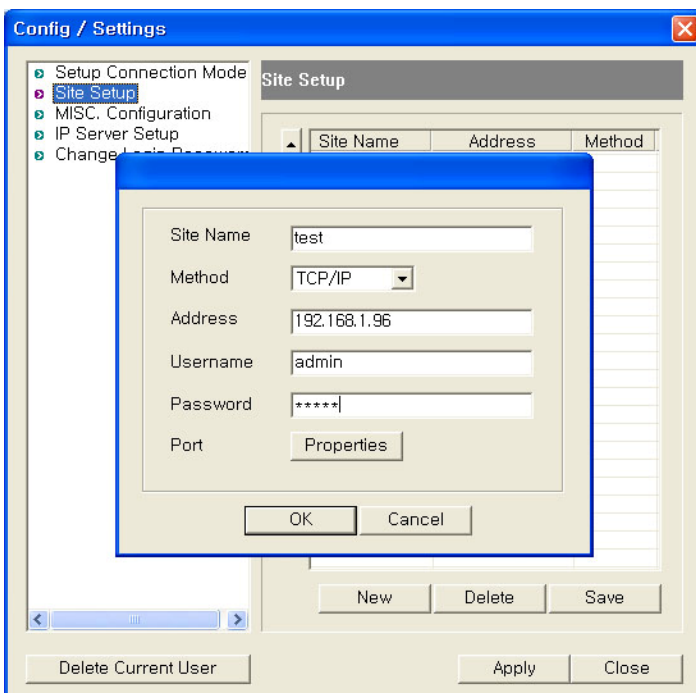

- **Site name:** Assign system’s name or site name. In the use of IP Server, put the Code No. , The code for Server side can be set at “system->Use IP Server” in the VC DVR DVR Setting.


Note: This code is also necessary for Remote notify.

- **Method:** Select “TCP/IP” when you are using LAN, cable modem, ADSL. In case of IP Server, select “SERVER”.

- **Address:** Assign IP address of system or IP address in use of IP Server.

- **User name:** Enter ID, registered in VC DVR DVR System.

- **Password:** Enter password, registered in VC DVR DVR System
- **Port (Properties):** Set the port No, which was stored in accordance with “ Appendix > DVR Management > Detail setting ” in DVR main/ User’s Guide. It is recommended to use the default data stored in DVR program unless it is necessary to use others.

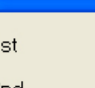

1st 3000

2nd 3001

3rd 3003

4th 8800

5th 3007


* (1024 ~ 65535)

Click “OK” to finish a new site setting, then the added site will be listed as following.


[illegible]

In order to edit the site information already stored, double click on the site name to change the data. “Save” must be clicked to take effect.

4.1.2. Setup Connection Mode

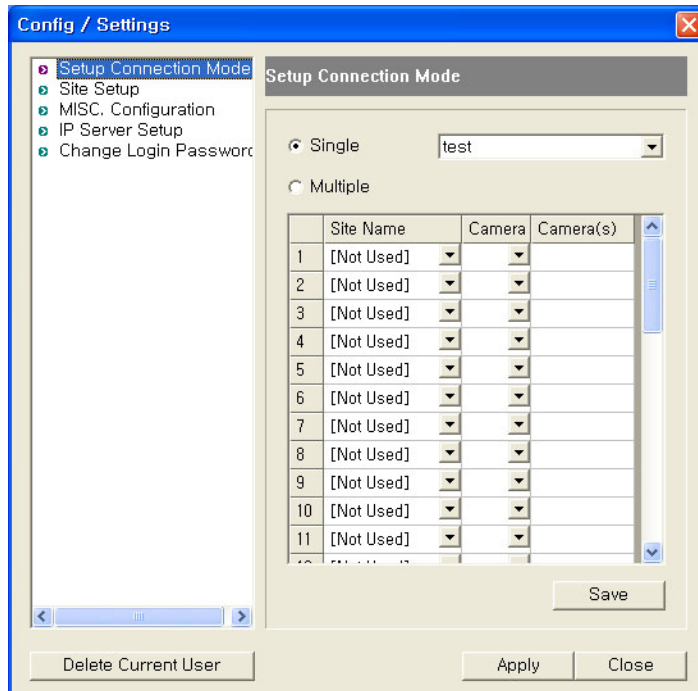

- **Single:** Check and select one of registered sites to access one site of DVR main.
- **Multiple:** Check to access multi-sites upon log in. Connection must be defined as following.

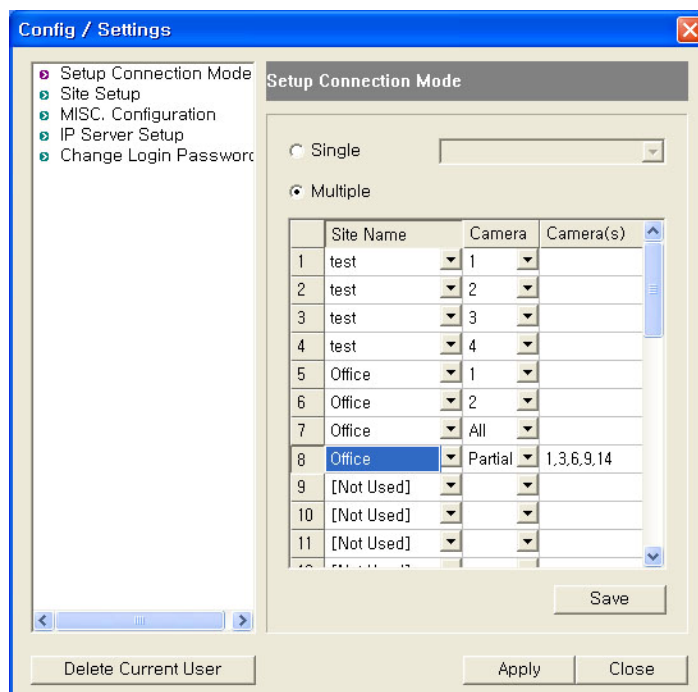

- **Site name:** select a site to connect.

- **Camera number(s):** Choose a camera number, all, or partial

--**All:** Choose to display all available cameras sequentially from the selected site.

--**Partial:** Choose to display multiple cameras from the site. Number of cameras must be assigned. For example, the position 8 will display camera 1, 3, 6, 9, and 14 sequentially from site name Office.

“Save” must be clicked to take effect.

4.1.3. MISC. Configuration

The screenshot shows the 'Config / Settings' window with the 'MISC. Configuration' tab selected. The left sidebar lists several options: 'Setup Connection Mode', 'Site Setup', 'MISC. Configuration' (highlighted), 'IP Server Setup', and 'Change Login Password'. The main area contains three fields: 'Avi Path' with a text box showing 'c:\w' and a 'Browse' button; 'Log Path' with a text box showing 'c:\w' and a 'Browse' button; and 'Max Size' with a text box showing '5' and 'MB'. At the bottom right is a 'Save' button. At the bottom left is a 'Delete Current User' button. At the bottom center are 'Apply' and 'Close' buttons.

•**AVI Path:** Assigns the path to store video clips recorded while monitoring.

•**Log Path:** Assigns the path to store the log file.

•**Max Size:** Assigns the maximum size of the log file.

“Save” must be clicked to take effect.

4.1.4. IP Server Setup

The screenshot shows the 'Config / Settings' window with the 'IP Server Setup' tab selected. The left sidebar lists several options: 'Setup Connection Mode', 'Site Setup', 'MISC. Configuration', 'IP Server Setup' (highlighted), and 'Change Login Password'. The main area contains a checkbox labeled 'Use IP Server' which is checked. Below it are three fields: 'Server' with a text box, 'Code' with a text box, and 'Interval' with a dropdown menu showing '0 min'. At the bottom right is a 'Check' button. At the bottom left is a 'Delete Current User' button. At the bottom center are 'Apply' and 'Close' buttons.

•**Use IP Server:** Enables to use IP Server if checked.

•**Server:** IP address of the IP Server.

•**Code:** Assigns unique code name to be registered at the IP Server. Code must be named less than 10 digits, using case sensitive alpha-numeric characters.

•**Interval:** Selects the time interval to notify current IP address to the IP Server.

“Save” must be clicked to take effect.

4.1.5. Change Login Password

The screenshot shows a window titled "Config / Settings" with a sidebar on the left containing a tree view of configuration options: "Setup Connection Mode", "Site Setup", "Misc. Configuration", "IP Server Setup", and "Change Login Password" (which is selected and highlighted in blue). The main area of the window is titled "Change Login Password" and contains three text input fields labeled "Old Password", "New Password", and "Confirm Password". Below these fields is a "Save" button. At the bottom of the window, there are three buttons: "Delete Current User", "Apply", and "Close".

- Old Password:** Enter current password
- New Password:** Enter new password
- Confirm Password:** Confirm new password.



“Save” must be clicked to take effect.


4.2. Accessing VC DVR Net



Type login and password and click “LOGIN”.



 : Minimize VC DVR Net software in the system tray. Click  at right bottom corner will bring the full window.

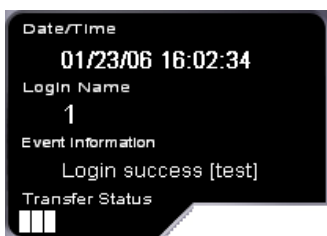

- **Date/Time:** indicates the time and date of the location of DVR Net
- **Login name:** User ID currently logged in with.
- **Event Information:** It is the place to indicate any of event notification from connected site(s). To receive notification, “Remote notification of events” must be checked on DVR main.
- **Transfer Status:** This is indicating the connecting speed as bench mark only.



: Refresh the connection.

Press “CAMERA” to control the PTZ.



: PTZ cameras connected to VC DVR DVR System can be controlled from VC DVR Net. The arrow buttons will move the camera in the direction of the arrow, and the ZOOM, FOCUS buttons will manipulate the camera accordingly. However, only user with permission can control the PTZ setting.

The number in the middle circle indicates the camera number being controlled, and the push of top or bottom arrow button makes the selection of the camera.



: When the PTZ camera supports preset function and tour, this control is available at VC DVR Net. However, settings of preset and tour must be made at VC DVR DVR System. And No. of available preset points are depending on the camera's feature.

Press “IMAGE” to show image control.



: Adjusts the image quality such as Brightness, Contrast, Saturation and Hue by pushing the arrow buttons.

Press “RATE” to adjust resolution and compression rate .



: Compression Rate can be adjusted between 10 ~ 90 to enhance the transmission speed (* for default compression rate). Lower value will provide faster transmission. Resolution can be selected among 1/2, 1/4, or 1/8 (* for default resolution), and lower resolution provides faster transmission speed. Compression rate and resolution adjusted here are not changing actual resolution and compression rate recorded on the server.

Note: this section cannot be applied to MPG series products.

Press “MISC” to control following functions.

 


- **Switching (SLOW / FAST):** Adjust switching interval slower or faster when the channel is displaying multiple cameras by switching (Applicable for multi connection only).
- **Position Number:** Displays the position number on the image.
- **Site Name:** Displays the site information on the image.
- **Camera Number:** Displays the camera number on the image.
- **Camera Name:** Displays the camera name assigned at the server.
- **Date / Time:** Displays date and time from the server.
- **POS Data:** Displays POS data if available.


• **Event Mute:** Mutes the beep sound by the event notification. It also disables the popup by event notification while minimized.




: Displays the position number, which is currently selected. All adjustments and/or controls are applied to the camera on this position.

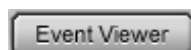

 : Shows the event list, which contains log of events notified from server(s). Double clicking on the event will popup the search window to retrieve data immediately.

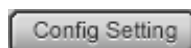

 : Open the “Config / Settings” Window (Refer to 4.1.VC DVR Login Setup for detail).

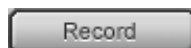

: Records all displayed channels. Each channel will be recorded in MP4 format at the AVI Path assigned from “Config / Settings” => “MISC Configuration”. The position with enabled switching camera will not be recorded. Switching camera must be disabled when the desired camera is on, before start recording.



: Search recorded data from server. Multiple search windows can be initiated simultaneously to search multiple servers at the same time.



: Adjusts setting of VC DVR DVR System from VC DVR Net.



: Changes display mode to 1, 4, 6, 9, 10, 16, or 36 screen.



: Displays next set of view.



: Enlarges the image size from single channel display mode.



: Reduces the image size from single channel display mode.



: Enlarges the VC DVR Net screen with minimal control buttons.



 
: Enables on-screen PTZ Control. If enabled on the PTZ camera connected, Using mouse, left click and drag on the screen to pan and tilt the camera, and scroll to zoom in and out



: Displays status of current screen mode. Pink color indicates positions currently on-screen.



: To control voice communications between VC DVR Net and VC DVR DVR System. For this function, "Sound Recording" of Settings in VC DVR DVR System must be checked. The functions of four taps are "Send Voice" / "Receive sound" / "Send and receive voice" / "cancel", from the left.

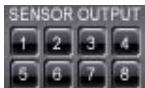


: Displays status of Relay on VC DVR DVR System. Relay can be activated / deactivated by clicking on the buttons.



: Click this to exit from VC DVR Net.

4.3. Remote Search

Search data of VC DVR DVR System from remote location using VC DVR Net.

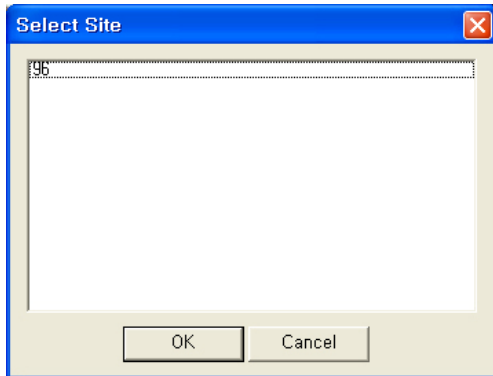


: Click the remote search button to start. The window on the left will show up with list of registered sites

Select the site to search, and click "OK" to start search.



 : The calendar allows the user to choose the specific date in which to search through. Days with stored recorded data will be highlighted red.

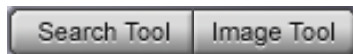

: Change between search tools and image control tools.



: Buttons in upper line works for fast rewind (left directional arrow) and fast forward (right directional arrow). Buttons in middle line activate the normal playing back in forward and reverse but the speed can be adjusted by controlling (-),(+) tap on the top. The buttons in lower line give playback frame by frame, forward or reverse.



: Image Tools allow the user to adjust image properties to enhance the image quality. Adjustments are not effecting to the original image recorded. Click on Cancel to go back to the original image.

Zoom Search: It is possible to zoom in, up to x3, to the desired area using right click of the mouse while, or before searching (Available only at single channel search)



: hides the time information.



: Select one of the split image profiles for viewing the images.



: These taps give the enlarged screen by (+) or return to small screen by (-).



 
: The camera number is shown vertically on the right and hour on bottom horizontally, and minute on top horizontally. The searching point can be selected by clicking the camera number, hour, and minute (shown in red).



: In above picture, selection of camera can be done by clicking these buttons, scrolling camera group as 4 camera in a group, namely 1~4, 5~8, 9~12, 13~16



: The camera icon indicates camera mode. Clicking the icon will toggle to sound search mode to retrieve recorded sound with image. While searching multiple channel, selected camera for audio playback will be indicated with yellow caption as shown below/

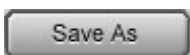


: Click "Save As" to save the current image, jpg format.



: Print the image currently on display.




 : Save images as a movie clip, MP4 format.

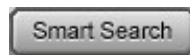

: Identical as "Smart Search" feature of the VC DVR DVR (Please refer to the VC DVR DVR manual.)

Motion Sensitivity is different from VC DVR DVR, and the result might differ even if the search is performed under the same condition.

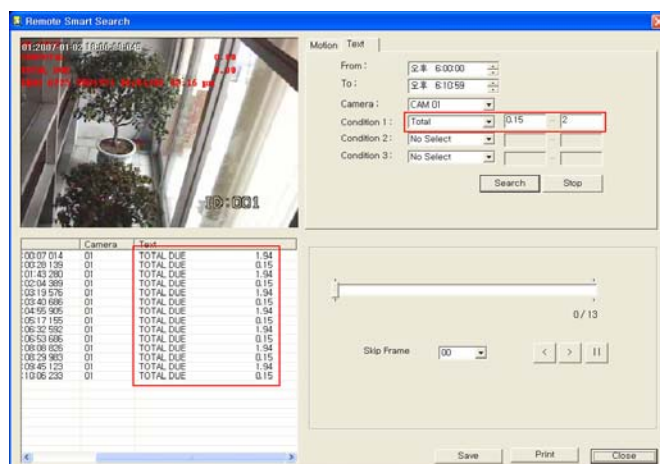


: Exit Search.

4.4. Remote Setup



: Allow user to change the configuration of VC DVR DVR System from VC DVR Net. The following screen will allow the user to select the site.

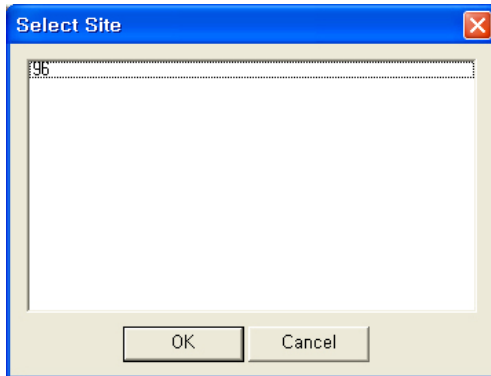

Select the site and click "OK"

Changes will be applied to the selected VC DVR DVR System.
setting are not accessible from the VC DVR Net.


Some of

*Note: For further setting guide, please refer to 5.Configuration of
"Installation and User's Guide" for VC DVR DVR System.*

4.5. Event Viewer

Event Viewer allows user to review the event log of Net software. It also contains all event record notified by VC DVR DVR System. Please refer to the “5.3. System - Allow remote connections” on Installation and User’s Guide to set remote notification.

 : opens the following Event Viewer window.

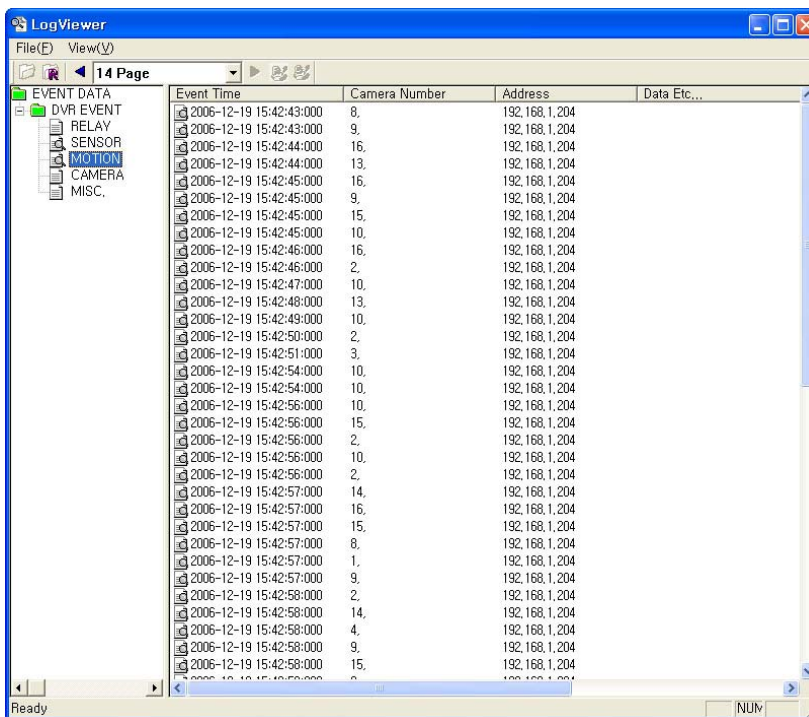

Events can be reviewed and/or searched by categories. Double clicking on a recorded event under Motion and Sensor will load a search popup window, which enables to playback instantly, as shown below.



5. Appendix


5.1. Changing Position



At the connection of Net software, connected cameras will be positioned in order of camera numbers. It is possible to relocate the camera position to the desired location by left click on the image that needs to be relocated, drag it to the new position, and release the mouse button.


5.2. Movie Clip & Snapshot

Either movie clip or snapshot can be created while monitoring. Right click on the desired position and select “Save as Movie Clip” or “Save as Snapshot”.

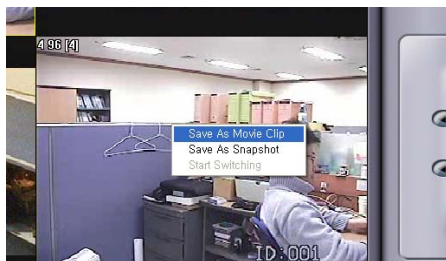

Save as Movie Clip: check to create mp4 format movie clip until unchecked. Recording will be automatically finished when Net software is minimized. Recorded file will be stored at the location assigned from MISC. Configuration, AVI Path.


Save as Snapshot: select to capture the image. It will bring up a snapshot window with a captured image, and the image can be saved as a jpg format file by double clicking on the snapshot window.

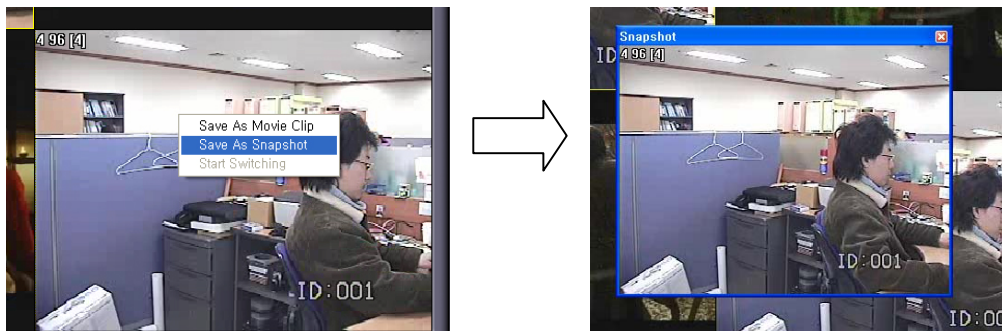

5.3. Event Notification

Event notification allows VC DVR Net users to receive notification from VC DVR DVR System when any event occurs, such as motion and/or sensor detection. In order to activate, following settings are

required at the DVR Main. Open System Setting from the VC DVR DVR System to configure settings.

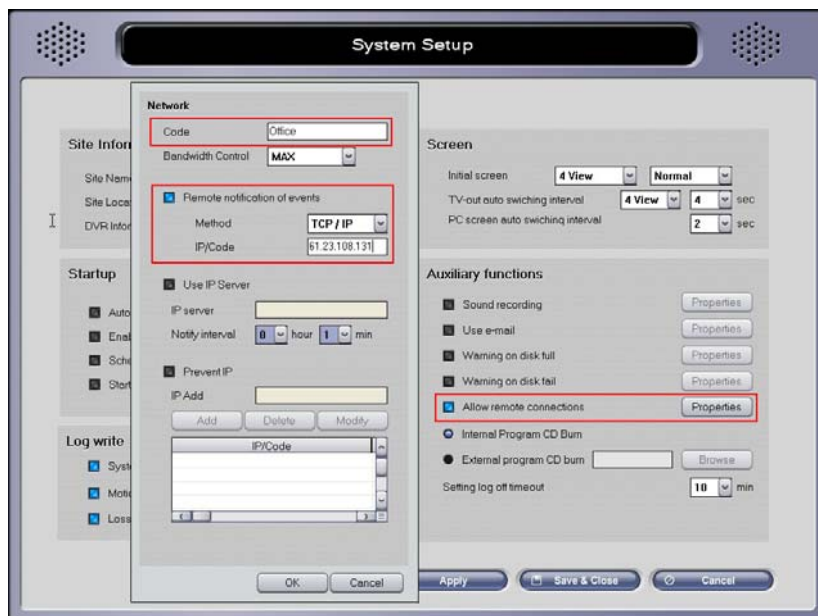


Check “Allow remote connections” and open properties. Check “Remote Notification of events”, and select the method. In IP/Code column, enter IP address or Code depending on the method selected.

Note: The code shall be same as the one entered in “Code” at 4.1.3. IP Server Setup



From “Color & motion” of “Camera Setup”, check “Detective motion – Notification”. Click on “Properties”, and check “Remote Notify” to send notifications when an event occurs. Check “Use Notify Schedule” to utilize the schedule to notify the VC DVR Net. If selected, notification schedule on the following page must be configured.

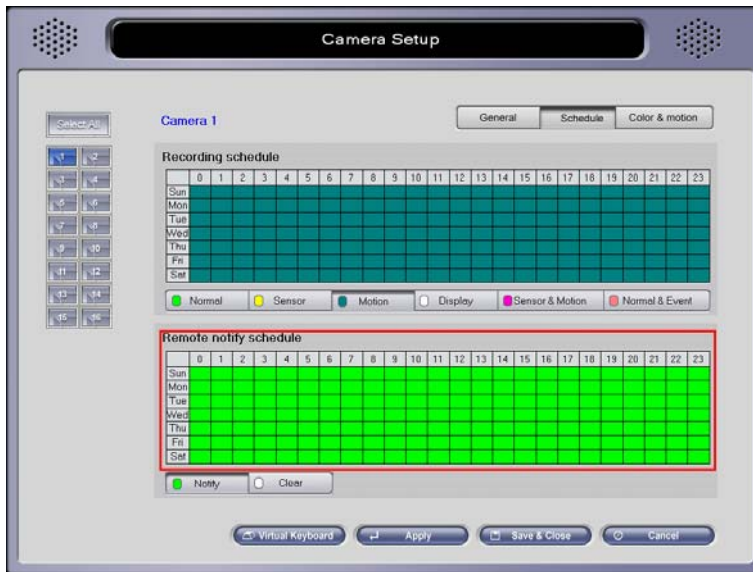

Set up “Notify scheduling” in “Scheduling” of “Camera Setup”.

When event notification is completely set, Net software will display and store the event information into the log file, which can be retrieved and searched by the Event Viewer. Also it will allow to restore the Net software, if any event occurred and notified while Net software is minimized.

The VC DVR Net may be minimized, but must be running in order to receive the notification. The icon will be placed on the system tray when it is minimized.




5.4. Dial-Up Connection

In order to connect to the VC DVR DVR System through regular phone connection, both VC DVR DVR System and Net system need to be equipped with modem, and Dial-Up Server / Client must be configured. The following instruction is based on the Windows XP environment, and can be applied to Windows 2000 also.

5.4.1. Installation of Dial-Up Server


On VC DVR DVR System, click “Start > Control panel > Network Connections.”

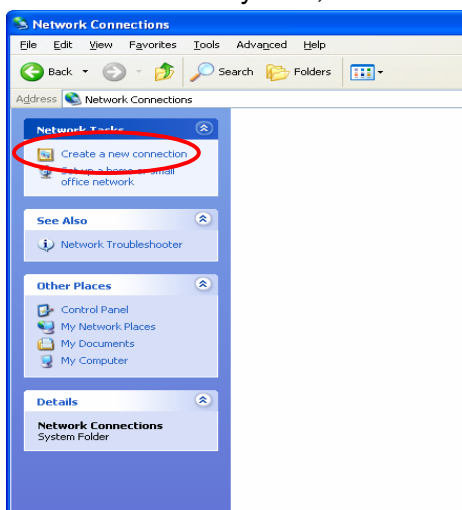


Click “Create a new connection.”




Click 'Next'.

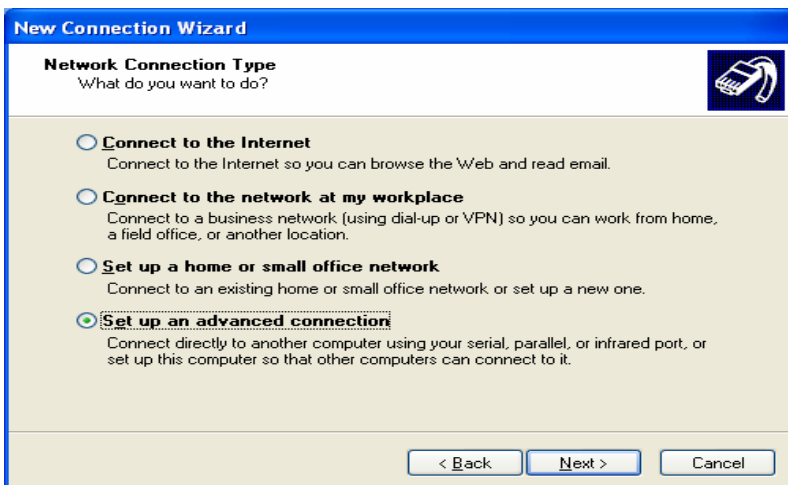


Select "Set up an advanced connection", and Click "Next".

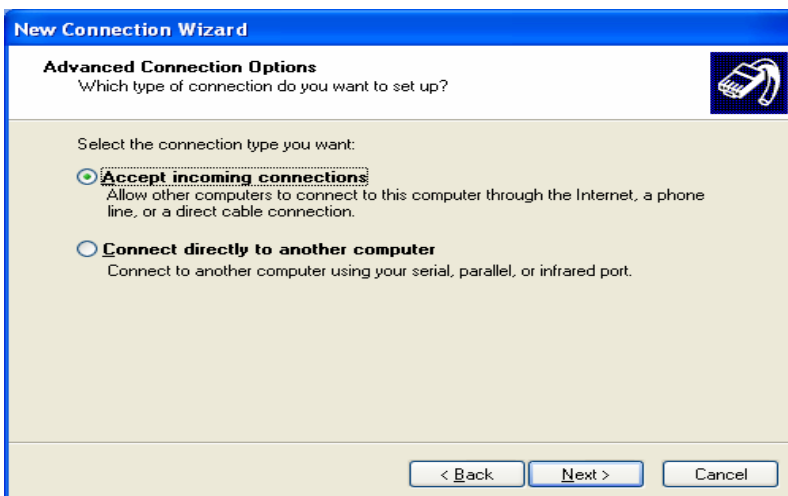


Check "Accept incoming connection" and Click "Next".

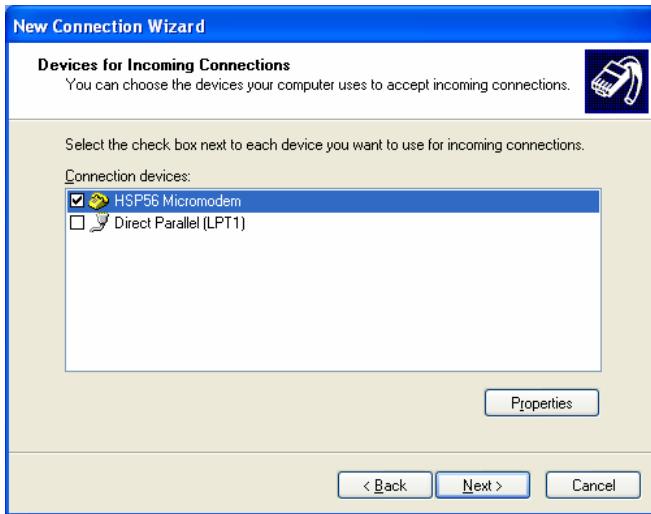


Select a proper modem from device list, and click “Next”

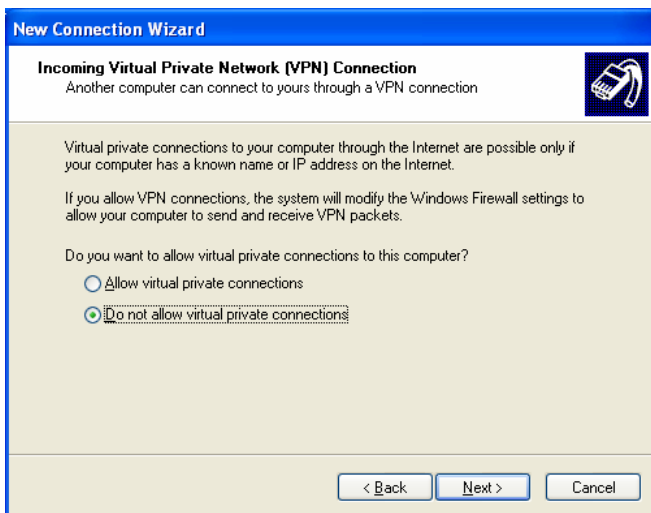

Select “Do not allow virtual private connections”, and click “Next”.

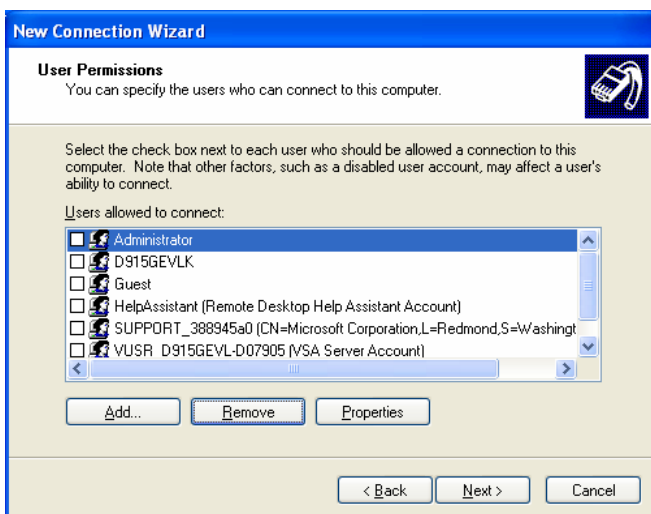

Click “Add” to add a new user. The user must be created to allow connection to the VC DVR DVR System.

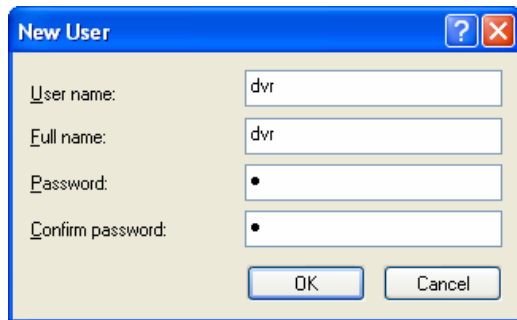

New User

User name: dvr

Full name: dvr

Password: •


Confirm password: •

OK Cancel

Fill out the user information and click “OK”.

This user information must be used at the Dial-Up Client, which will be discussed on the next chapter.

Note: The “Allowed User” means “RAS User” who can access the Dial-Up server from Dial-Up Client.

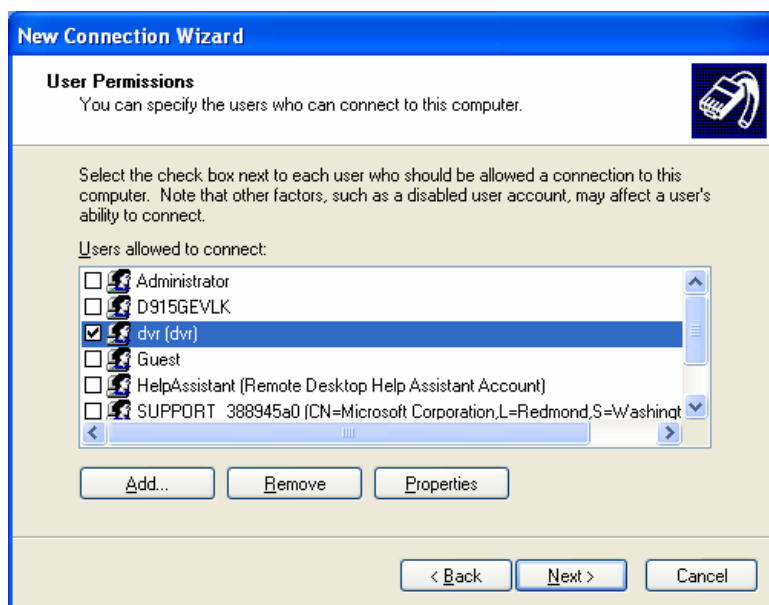

New Connection Wizard

User Permissions
You can specify the users who can connect to this computer.

Select the check box next to each user who should be allowed a connection to this computer. Note that other factors, such as a disabled user account, may affect a user's ability to connect.


Users allowed to connect:

- ☐ Administrator
- ☐ D915GEVLK
- ☒ dvr (dvr)
- ☐ Guest
- ☐ HelpAssistant (Remote Desktop Help Assistant Account)
- ☐ SUPPORT_388945a0 (CN=Microsoft Corporation,L=Redmond,S=Washington)

Add... Remove Properties

< Back Next > Cancel

After a user created, make sure to check the user created, and click “Next”.

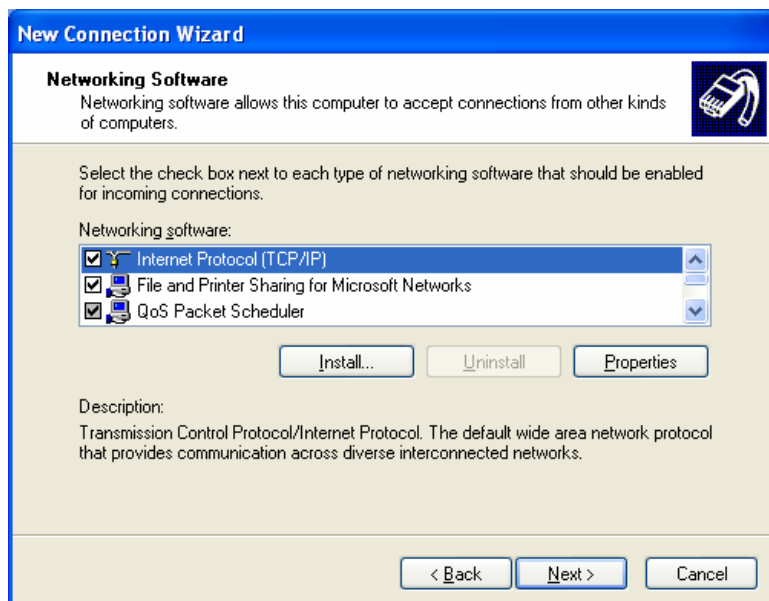

New Connection Wizard

Networking Software
Networking software allows this computer to accept connections from other kinds of computers.

Select the check box next to each type of networking software that should be enabled for incoming connections.

Networking software:


- ☒ Internet Protocol (TCP/IP)
- ☒ File and Printer Sharing for Microsoft Networks
- ☒ QoS Packet Scheduler

Install... Uninstall Properties

Description:
Transmission Control Protocol/Internet Protocol. The default wide area network protocol that provides communication across diverse interconnected networks.

< Back Next > Cancel

Select “Internet Protocol TCP/IP” and click ‘Properties’.

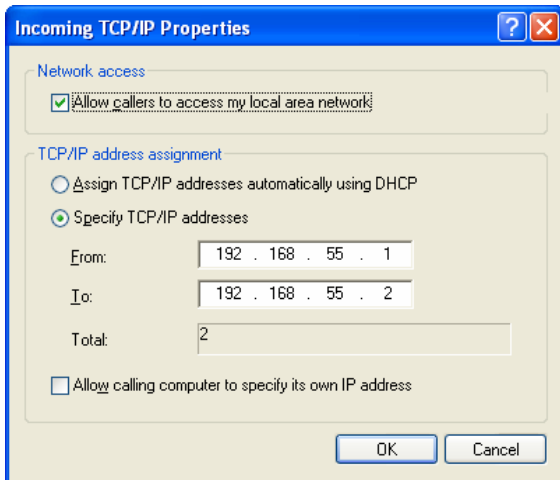


Check “Allow callers to access my local area network”. In TCP/IP address assignment, check “Specify TCP/IP addresses”, and fill out from and to IP address as shown in picture. It is strongly recommended to use as it is shown. Click “OK”, and click “Next” at the Networking Components.

When the connection established successfully, ‘From’ IP will be the virtual IP of the server, VC DVR DVR System, and ‘To’ IP will be assigned to the client.




Specify the connection name and click “Finish”. Any name may be used for connection name.

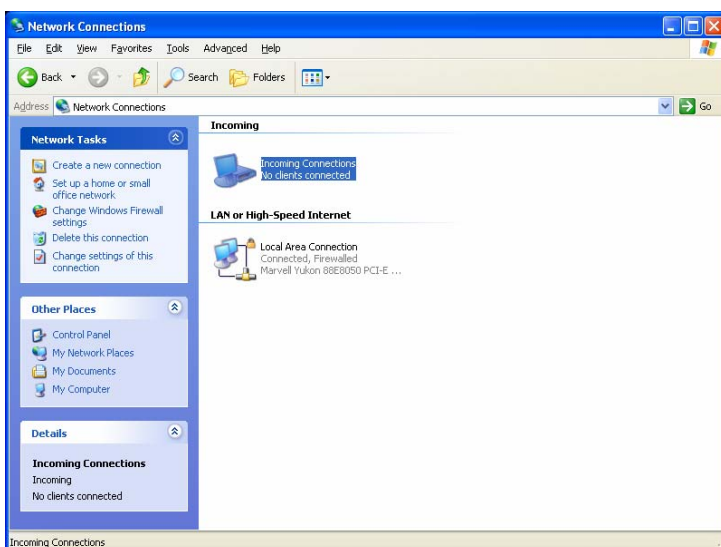

Upon completion of Network Connection Wizard, the new connection icon will be located in Network Connection.

5.4.2. Installation of Dial-Up Client

On VC DVR Net system, click “Start > Setup > Control pad > Network Connection.”

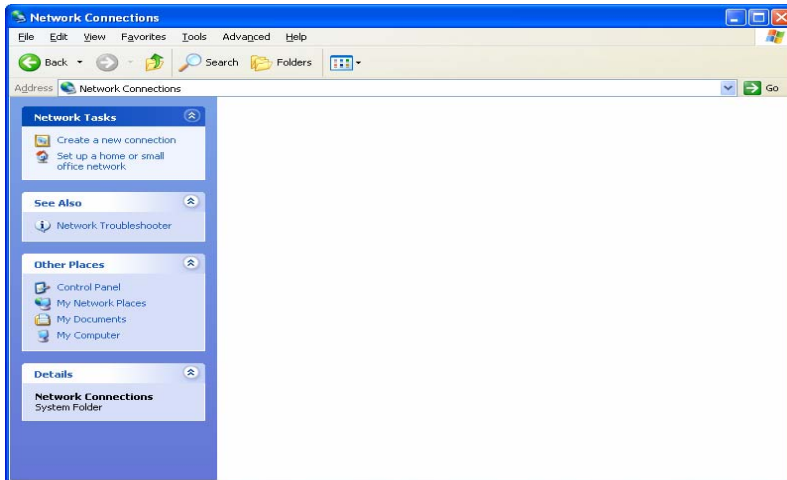


Click “Create a new connection.”



Click ‘Next’.



Select “Connect to the Internet”, and Click “Next”.

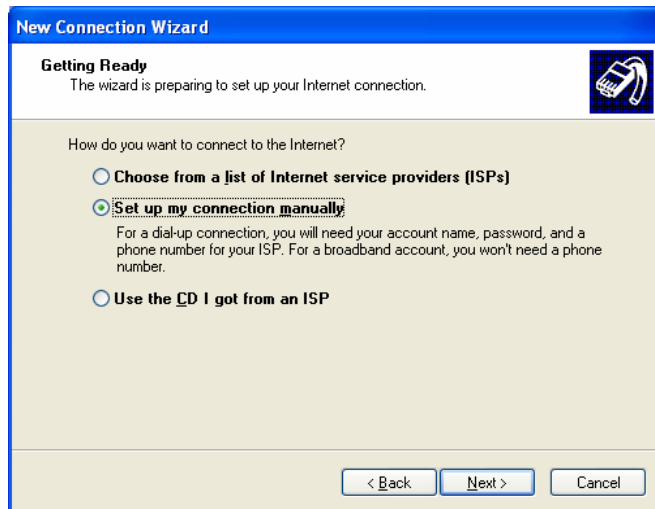

New Connection Wizard


Getting Ready
The wizard is preparing to set up your Internet connection.

How do you want to connect to the Internet?

☐ Choose from a list of Internet service providers (ISPs)
☒ **Set up my connection manually**
 For a dial-up connection, you will need your account name, password, and a phone number for your ISP. For a broadband account, you won't need a phone number.
☐ Use the CD I got from an ISP

< Back Next > Cancel

Select “Set up my connection manually”, and Click “Next”.

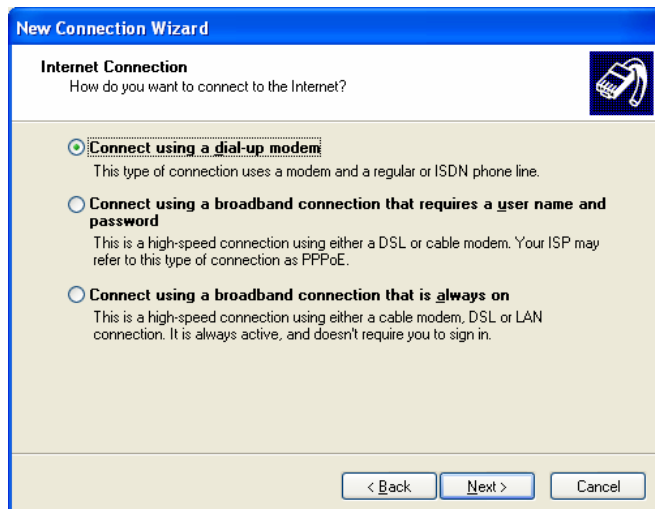


New Connection Wizard

Internet Connection
How do you want to connect to the Internet?

☒ **Connect using a dial-up modem**
 This type of connection uses a modem and a regular or ISDN phone line.
☐ Connect using a broadband connection that requires a user name and password
 This is a high-speed connection using either a DSL or cable modem. Your ISP may refer to this type of connection as PPPoE.
☐ Connect using a broadband connection that is always on
 This is a high-speed connection using either a cable modem, DSL or LAN connection. It is always active, and doesn't require you to sign in.

< Back Next > Cancel

Select “Connect using a dial-up modem”, and Click “Next”.

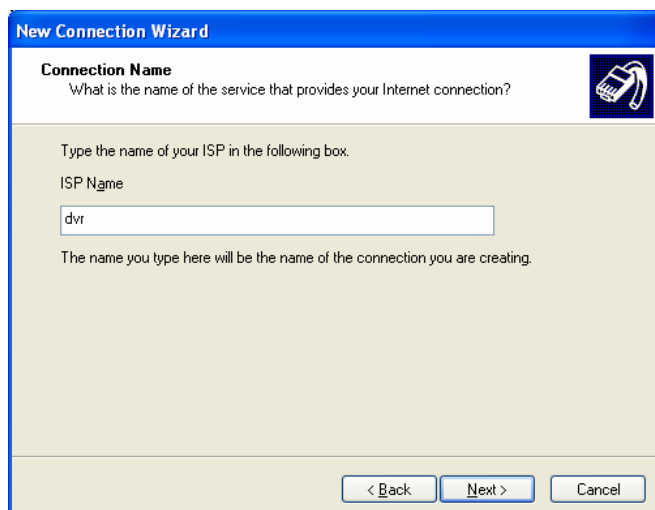

New Connection Wizard

Connection Name
What is the name of the service that provides your Internet connection?

Type the name of your ISP in the following box.


ISP Name

dvr

The name you type here will be the name of the connection you are creating.

< Back Next > Cancel

Set ISP Name as you want, and Click “Next”.

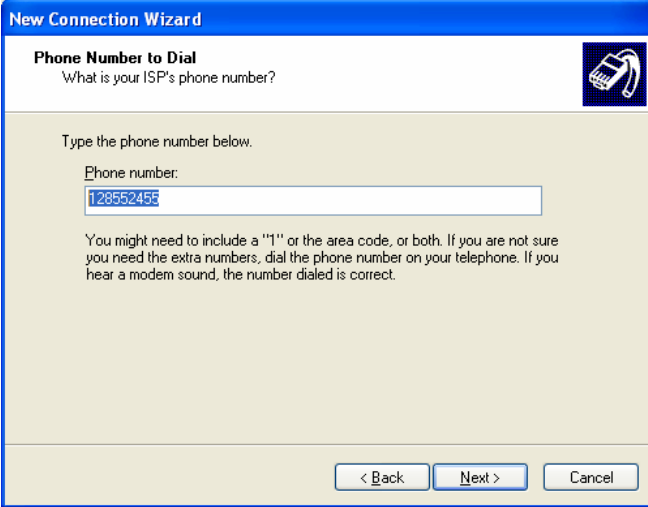

New Connection Wizard

Phone Number to Dial
What is your ISP's phone number?


Type the phone number below.

Phone number:
128552455

You might need to include a "1" or the area code, or both. If you are not sure you need the extra numbers, dial the phone number on your telephone. If you hear a modem sound, the number dialed is correct.

< Back Next > Cancel

Enter the phone number which is assigned to the VC DVR DVR System, and Click "Next".



New Connection Wizard

Internet Account Information
You will need an account name and password to sign in to your Internet account.

Type an ISP account name and password, then write down this information and store it in a safe place. (If you have forgotten an existing account name or password, contact your ISP.)

User name: dvr

Password: •

Confirm password: •

☒ Use this account name and password when anyone connects to the Internet from this computer

☒ Make this the default Internet connection

< Back Next > Cancel

Enter the user information, which was created on the VC DVR DVR System, and Click "Next".



New Connection Wizard

Completing the New Connection Wizard

You have successfully completed the steps needed to create the following connection:

dvr

- Make this the default connection
- Share with all users of this computer
- Use the same user name & password for everyone

The connection will be saved in the Network Connections folder.

☐ Add a shortcut to this connection to my desktop

To create the connection and close this wizard, click Finish.

< Back Finish Cancel

Click "Finish" to complete setting.


5.4.3. Using Dial-Up Connection

- On VC DVR DVR system


Make sure that the Dial-Up Server is configured and Main is running.

- On VC DVR Net system,

Click “Start > Setup > Control pad > Network Connection.”

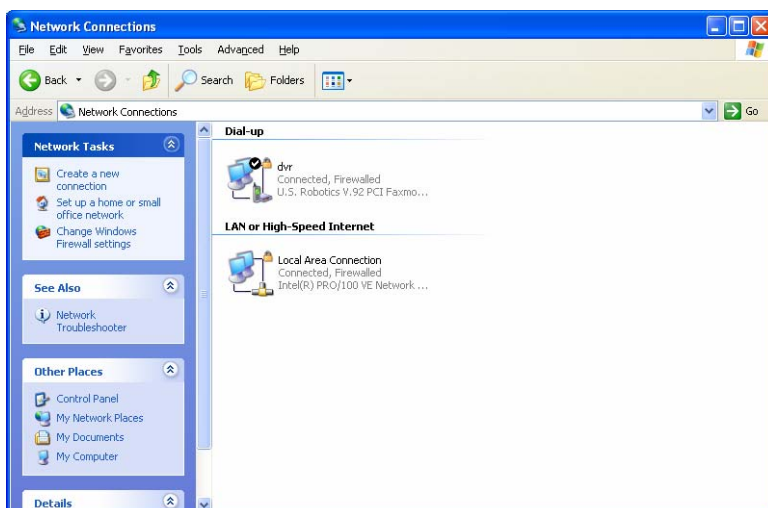

The icon for the Dial-up will be displayed with the name assigned while setting. Double click on the icon. It is 'dvr' on the left picture.

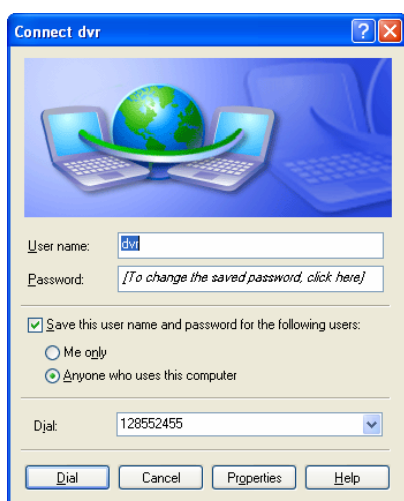

Verify the user name, password, and number to dial. Then click on 'Dial' to establish the connection.

If the connection fails, check modem drivers on both VC DVR DVR and Net systems, under Device Manager, and check the Dial-up server and client setting.

If connected, run VC DVR Net and register a site with following information.

Method: TCP/IP

Address: the virtual IP registered at 'From' in Dial-up server.

Username & Password: user information registered at the VC DVR DVR System.

After setting the site information as above, it is ready to connect to the VC DVR DVR System.

Note: The image will be displayed very slow due to the limited transmission speed.



VC Videocomponents GmbH
Brachenfelder Str. 45
D-24534 Neumünster
Tel.: ++ 49 (0) 4321 - 39 05 40
Fax: ++ 49 (0) 4321 - 28 04 82
e-mail: mail@vcvideo.de
Internet: www.vcvideo.de

Service
Tel.: ++ 49 (0) 4321 - 3 90 54 33
e-mail: technik@vcvideo.de

All contents of this document may change without prior notice
All rights are reserved.