

Dear Customer!

By selecting this VC product you have chosen a professional device, which guarantees highest possible quality and reliability.

Please read the following instructions carefully before commissioning the product in order to be able to take full advantage of all quality features regarding this product line.

8][]hUY`J]XYcfecorder

Art.no. 168&) !(#/%

Art.no. 168&) !5 < 8

Art.no. 168) %!(#/%

Art.no. 168) %!5 < 8

Art.no. 168) ' !(#/%

Art.no. 168) ' !5 < 8

Contents

SAFETY INSTRUCTION	3
CHAPTER 1 PRODUCT OVERVIEW	1
1.1 REAR PANEL	1
1.2 REMOTE CONTROLLER (FOR REFERENCE ONLY)	2
CHAPTER 2 DVR INSTALLATION & CONNECTION	3
2.1 HDD INSTALLATION	3
2.2 CONNECTION DIAGRAM	4
2.3 POWER SUPPLY CONNECTION	4
CHAPTER 3 DVR COMMON OPERATIONS	5
3.1 USING THE SUPPLIED MOUSE	5
3.2 USING THE VIRTUAL KEYBOARD	5
3.3 PASSWORD & LOCKING THE SCREEN OPERATION	5
CHAPTER 4 DVR STARTING UP	5
4.1 STARTUP WIZARD	6
4.2 LIVE VIEWING SCREEN	9
CHAPTER 5 DVR MENU	11
5.1 OVERVIEW	11
5.2 DISPLAY	12
5.2.1 Analog Channels	12
5.2.2. IP Channels	13
5.2.3. Live	15
5.2.4. Output	16
5.2.5 Image Control	16
5.2.6 Private Zone	18
5.3 RECORD	19
5.3.1 Record	19
5.3.2 Record Schedule	20
5.3.3 Mainstream	20
5.3.3 Substream	22
5.3.4 Mobile stream	23
5.4 CAPTURE	24
5.5 NETWORK	26
5.5.1 Network	26
5.5.2 E-mail	28
5.5.3 E-mail Schedule	29
5.5.4 DDNS	29
5.5.5 RTSP	30
5.5.6 FTP	32
5.6 ALARM	33

5.6.1 Motion	33
5.6.2 Alarm	34
5.6.3 PTZ Linkage	36
5.7 RECORD SEARCH & BACKUP.....	37
5.7.1 General	37
5.7.2 Events.....	38
5.7.3 Picture.....	39
5.7.4 Playback Video Recordings.....	41
5.7.4.3 Time Frame.....	43
5.7.4.4 Sub-periods Playback.....	44
5.7.5 Play Backup Files.....	45
5.8 DEVICE.....	48
5.8.1 HDD.....	48
5.8.2 S.M.A.R.T.....	49
5.8.3 PTZ Setup & Control	49
5.8.3.1 PTZ control.....	51
5.8.4 Cloud Storage.....	52
5.9 SYSTEM.....	54
5.9.1 General	54
5.9.2 DST.....	55
5.9.3 NTP.....	55
5.9.4 Users	56
5.9.5 Info.....	57
5.9.6 Log	58
5.10 ADVANCED	59
5.10.1 Maintain.....	59
5.10.2 Events.....	60
5.11 SHUTDOWN	61
CHAPTER 6 REMOTE ACCESS VIA WEB CLIENT	62
6.1 WEB PLUGIN DOWNLOAD AND INSTALLATION	62
6.2 WEB CLIENT MANAGER	65
6.2.1 Live Interface	65
6.3.2 Playback.....	67
6.3.3 Remote Setting	71
6.3.4 Local Setting.....	71
CHAPTER 7 APPENDIX	72
7.1 TROUBLESHOOTING.....	72
7.2 USAGE MAINTENANCE	73
7.3 ACCESSORIES (FOR REFERENCE ONLY)	74

SAFETY INSTRUCTION

Please carefully read the following safety instruction so as to avoid personal injuries and prevent the equipment and other connection devices from being damaged.

1. Power sources (note: please use the power supply attached or specified by the manufacturer)

Never operate the equipment by using unspecified power supply.

2. Never push objects of any kind through openings of DVR

Never push objects of any kind through openings of DVR so as to avoid electric shock or other accidents.

3. Do not put the equipment in the dusty field

Do not put the equipment in the dusty field.

4. Do not place the equipment under rain or humid environment

Do not place the equipment under humid environment like basement. If the equipment is accidentally in contact with water, please unplug the power cable and immediately contact your local dealer.

5. Keep the surface of the equipment clean and dry

Use soft damp cloth to clean the outer case of DVR (do not use liquid aerosol cleaners)

6. Do not operate if any problems are found

If there are any strange smell or sound from DVR, unplug the power cable and contact the authorized dealer or service center.

7. Do not try to remove the upper cover

Warning: Do not remove the cap of DVR so as to avoid electric shock.

8. Handle with care

If DVR does not work normally because of hitting on the hard object, please contact the authorized dealer for repair or replacement.

9. Use standard lithium battery (Note: Use the batteries attached or specified by the manufacturer)

After cutting off the power supply, if the system clock cannot continue to work, please replace the standard 3V lithium battery on the main board.

Warning: Turn off DVR before replacing the batteries, or you may be suffered from serious electric shock. Please properly dispose of the used batteries.

10. Put the equipment in a place with good ventilation


The DVR system includes HDD, which produces large amount of heat during operation. As a result, do not block the ventilation openings (on the top, bottom, both sides and the reverse side) for cooling the system during operation. Install or put the equipment in the place with good ventilation.

11. The attached power adapter can only be used for 1 set of DVR. Do not connect more equipment, or DVR may be restarted repeatedly because of insufficient power.


12. Prevent the equipment from water dropping or splashing. Do not place objects containing water, such as flower vase, on the equipment.

Chapter 1 Product Overview

1.1Rear Panel

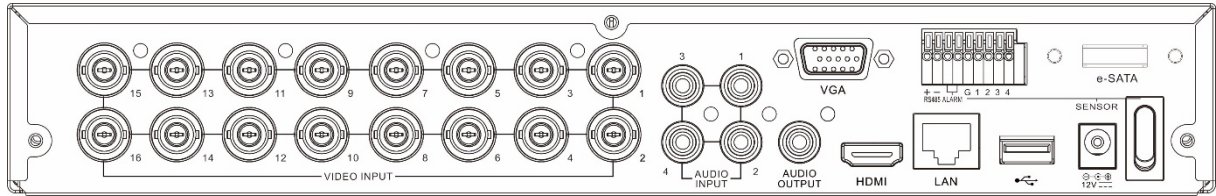


Item	Description
VIDEO INPUT	Connect with video input devices, standard BNC port
AUDIO INPUT	Connect with audio input signals, RCA port
AUDIO OUTPUT	Audio signal output, RCA port
USB port	Connect the supplied mouse or USB flash memory
VGA	Connect to your TV or a monitor with VGA input.
HDMI	Connect to your digital TV or monitor with HDMI input
LAN	Connect to your home network
e-SATA	Optional. Connect to e-SATA HDD for recording & backup
RS-485	Connect to PTZ devices
Sensor & Alarm	Optional. Connect to external sensor & alarm devices
Power	Connect to the supplied power adaptor
Power Switch	Turn on /off power supply

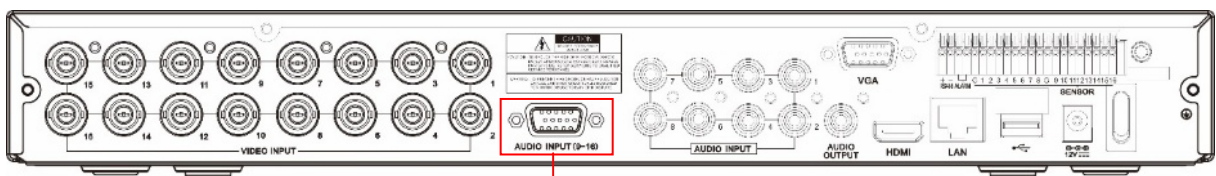

AUDIO INPUT (9-16)


For some models to connect to audio inputs with supplied connector

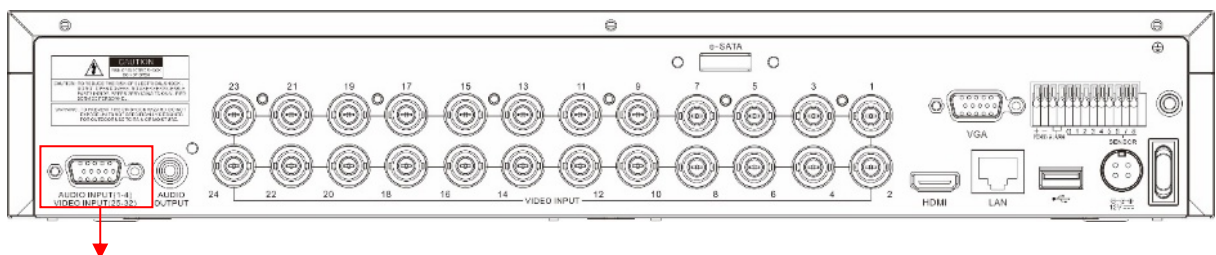

AUDIO INPUT (1-4) & VIDEO INPUT (25-32)

For some 32CH DVR to connect to audio inputs & video inputs (25CH ~ 32CH) with supplied connector

1.2 Remote Controller (For Reference Only)

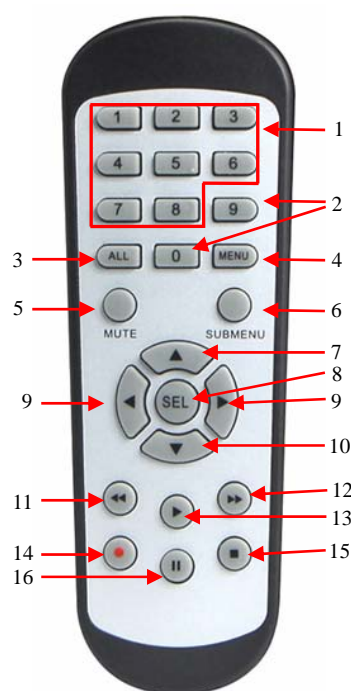

No.		Description
1	1-8	Numeric keys Press to display channel 1~8
2	9、0	Numeric keys
3	ALL	Press to display all channels Multiple display mode
4	Menu	Press to enter or exit the Main Menu
5	Mute	Mute On/off
6	Submenu	Go to submenu
7		Up arrow key; Volume increase
8	SEL	Press to enter the selected menu item and edit the setting
9		Left/Right key; Decrease/increase parameter value of control bar.
10		Down arrow key; Volume decrease
11		Press to rewind during video playback
12		Press to fast forward during video playback
13		Press to play recorded video or enter the recording search menu
14		Press to start manual recording
15		Press to stop manual recording or stop the video playback
16		Press to pause the video playback or enter frame-playback mode

Chapter 2 DVR Installation & Connection


2.1 HDD Installation

Depending on the package you have purchased, the hard disk drive may be included in the full package. If it is not pre-installed, follow the installation instructions on this user manual.


Caution: DO NOT install or remove the hard disk drive while the device power is turned ON.

HDD Installation:


- (1) Cut power firstly, and then remove screws on both sides & rear panel, and open DVR upper cover.

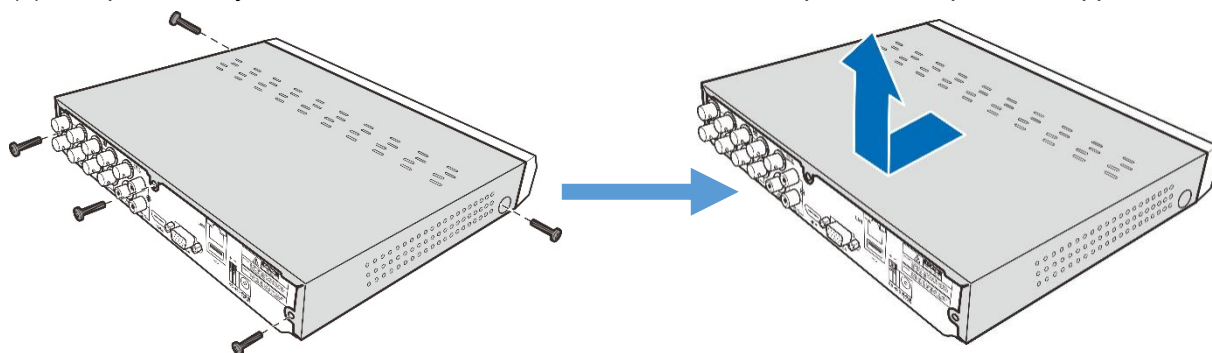

- (2) Connect the data and power cables to the HDD and place the HDD on the DVR case. Carefully flip the DVR case and secure the HDD to the DVR with the screws.

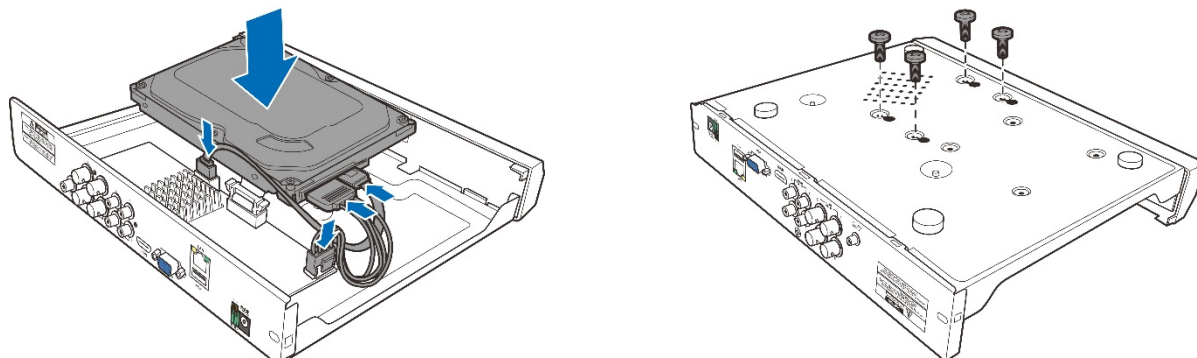


- (3) Put the upper cover back carefully, and fix the cover with screws.

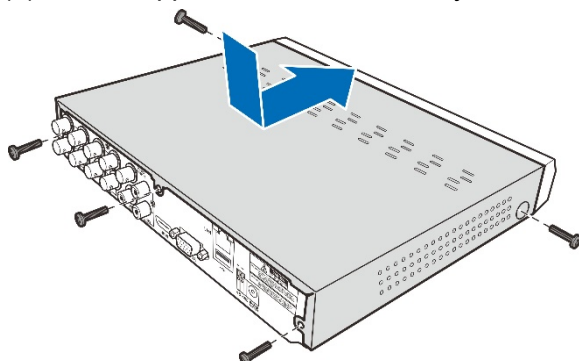

Note: Above procedures are for reference only. The practical operation may be different depending on the DVR you purchased.

2.2 Connection Diagram

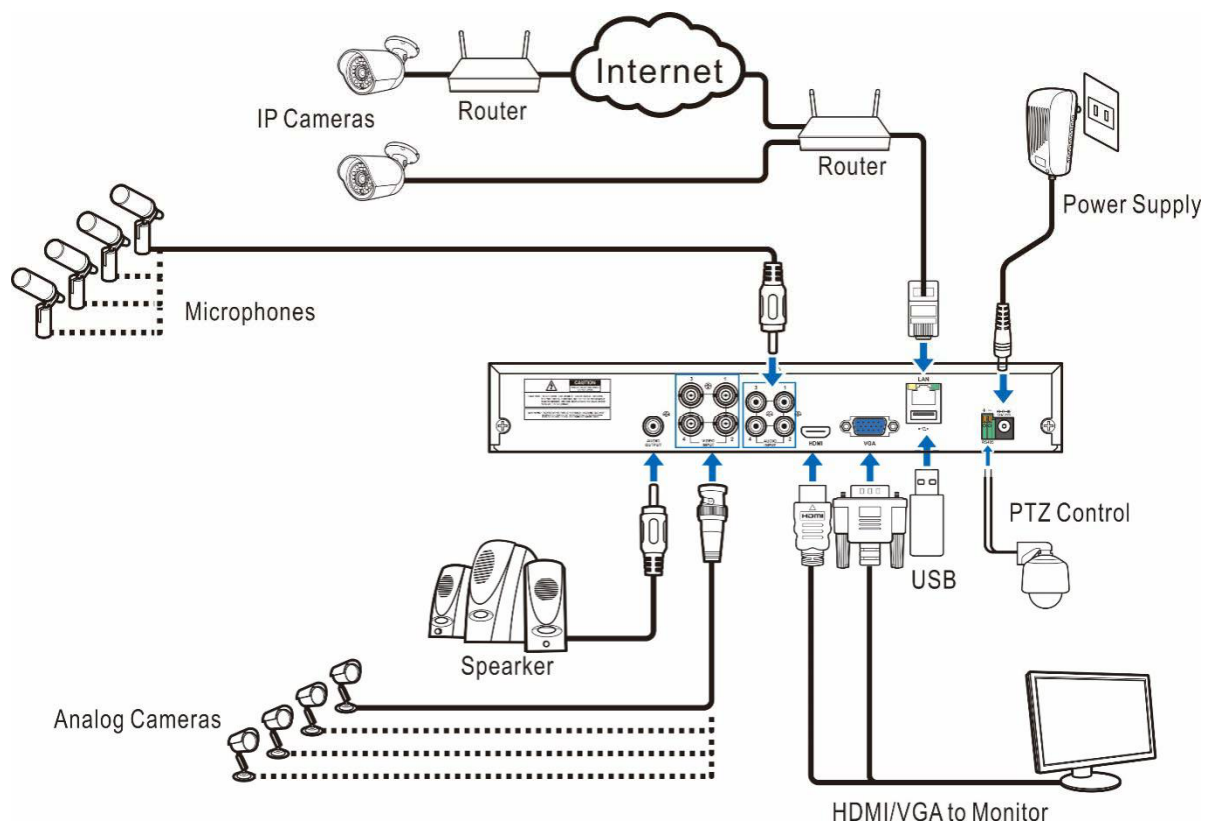


Note: Above diagram is for reference only. The practical connection may be different depending on the DVR you purchased.


2.3 Power Supply Connection

Caution: Use only the supplied power adapter that came with the DVR

Connect one end of the power adapter to the power connector on the back of the DVR. Plug the other end of the power adapter into the wall outlet.

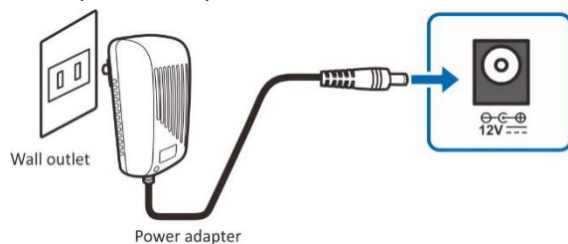

For some specific models, you may need to press the Power switch to turn on the power.

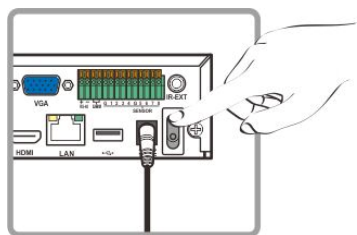


Chapter 3DVR Common Operations

3.1Using the Supplied Mouse

Left Button of Mouse	Right Button of Mouse
Click once to choose an item in the menus and confirm your selection.	Click once to open the pop-up menu on the Live Viewing screen and toexit from the menus.
Click once upon a channel on Live Viewing screen to open Camera Quick Toolbar	
Double-click on the channel on the exit from the menus. Live Viewing screen to view the channel in full screen mode. Double-click again to exit the full screen mode.	
Click and hold to drag an area on motion mode or adjust the values of sliders and scales on menu mode.	

3.2 Using the Virtual Keyboard

You will see the virtual keyboard automatically on the screen anytime you need to enter data

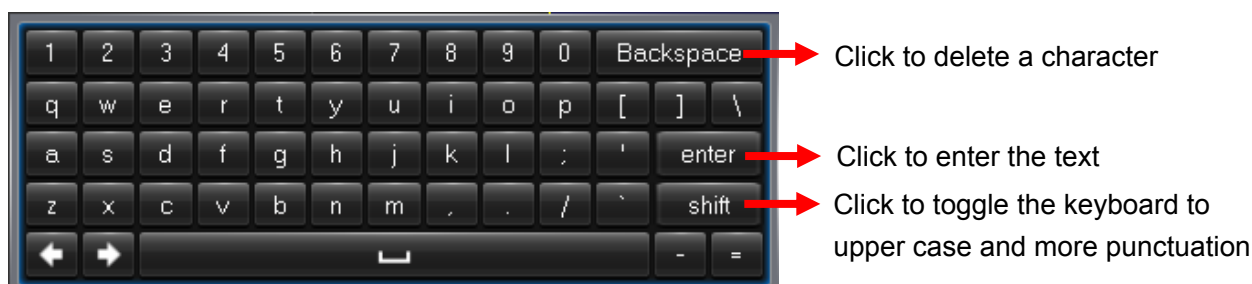

3.3 Password & Locking the Screen Operation

When you run the DVR for the first time, you will be required to set your password immediately in order to protect your privacy. Please be sure to record your username and password and save them in a secure place. If you forget your password, you will be unable to login the system, please contact your reseller to reset the password.

The screen will be locked to protect unauthorized OSD operation while the DVR is not in menu operation for a while. If necessary, you can also lock the screen operation manually. To do so, right-click on the Live Viewing screen to make the Pop-up menu bar visible, then click the Lock

icon  .



Chapter 4 DVR Starting up


4.1 Startup Wizard

After DVR startup is completed, the Startup Wizard will be displayed. Wizard setting menu includes: Homepage, HDD Management, Network Configuration, Email Configuration, IPC Setup, Record Schedule and General System Configuration.

1) Homepage and HDD Management

You can click "Cancel" to skip Start Wizard. Tick "Don't show this window next time" if you don't want to display Start Wizard when system start-up.


If the HDD is installed in the DVR for the first time, it will be needed to be format. Select the HDD which you want to format, and then click "Format HDD" button to format the HDD.

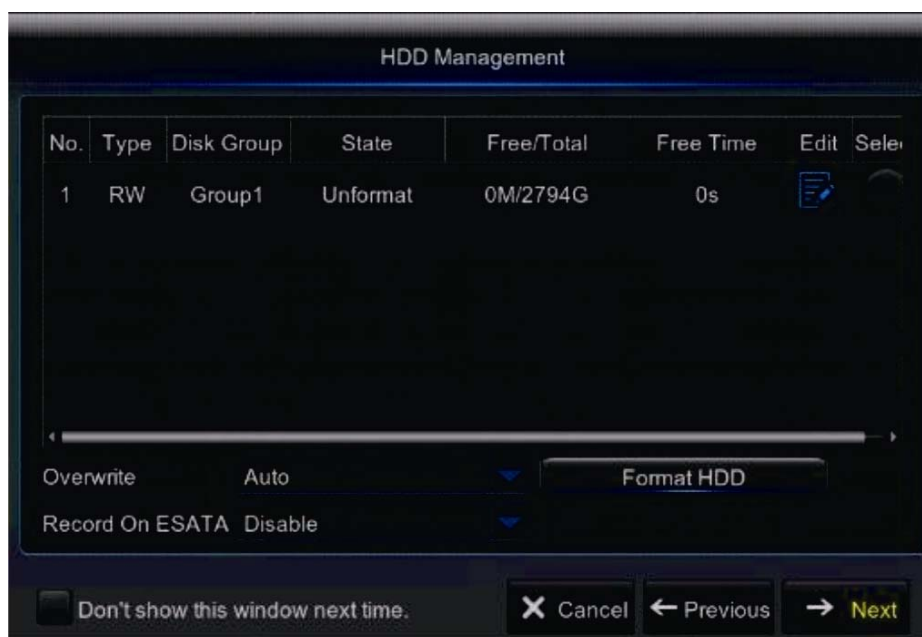

Overwrite: Use this option to overwrite the old recordings on the HDD when the HDD is full. For example, if you choose the option 7 days then only the last 7 days recordings are kept on the HDD. To prevent overwriting any old recordings, select Disable. If you have disabled this function, please check the HDD status regularly, to make sure the HDD is not full.

2) Network Configuration


This menu allows you to configure network parameters, such as PPPoE, DHCP, Static, and 3G. The most common types are DHCP or Static. Most probably your network type is DHCP, unless the network is manually addressed (usually called- Static). If you need an authentication user name and password to the Internet, then choose PPPoE. If you want to use mobile network connection, then choose 3G.

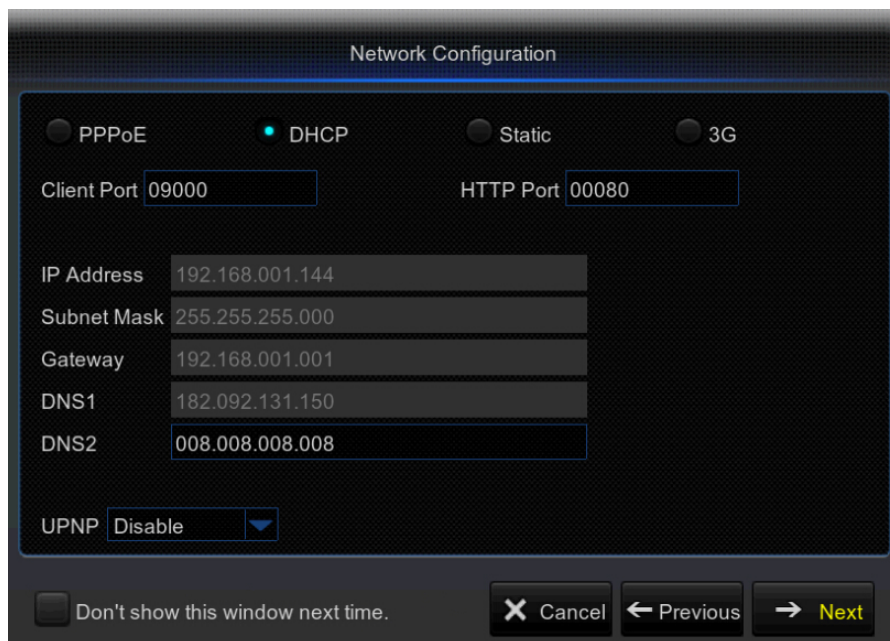

The Network Configuration window features a title bar and four radio buttons at the top: PPPoE, DHCP (selected), Static, and 3G. Below these are input fields for Client Port (09000) and HTTP Port (00080). A series of stacked input fields follow for IP Address (192.168.001.144), Subnet Mask (255.255.255.000), Gateway (192.168.001.001), DNS1 (182.092.131.150), and DNS2 (008.008.008.008). A UPNP dropdown menu is set to 'Disable'. At the bottom, there is a checkbox for 'Don't show this window next time.', and three buttons: 'Cancel', 'Previous', and 'Next'.

3) Email Configuration


This menu allows you to configure email settings. Please complete these settings if you want to receive the system notifications on your email when a motion is detected, HDD becomes full, HDD is in error state, or Video Loss occurs, etc.

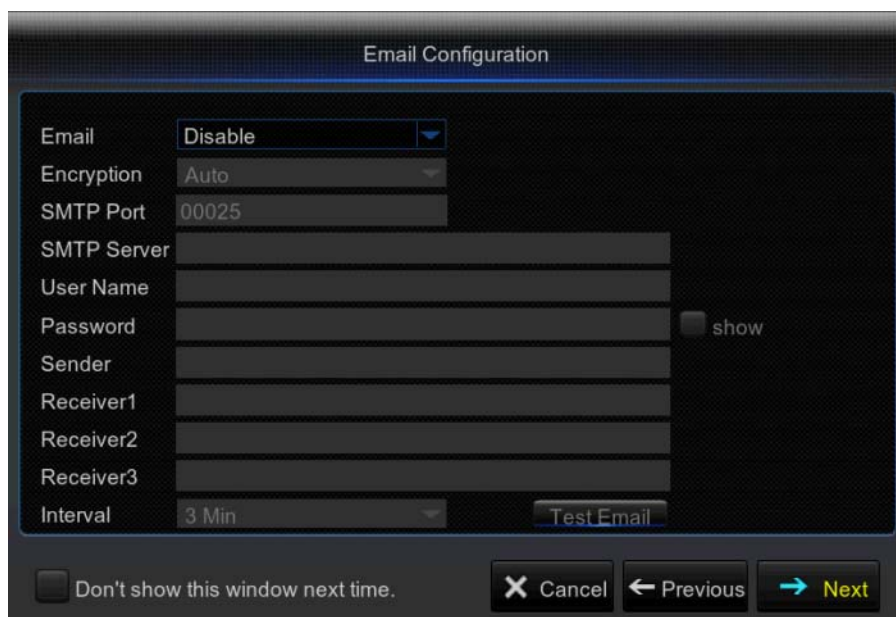

The Email Configuration window has a title bar and a dropdown menu for 'Email' set to 'Disable'. Below are dropdown menus for 'Encryption' (Auto) and 'SMTP Port' (00025). There are input fields for 'SMTP Server', 'User Name', 'Password', 'Sender', 'Receiver1', 'Receiver2', and 'Receiver3'. A 'show' checkbox is next to the Password field. An 'Interval' dropdown is set to '3 Min', and a 'Test Email' button is to its right. At the bottom, there is a checkbox for 'Don't show this window next time.', and three buttons: 'Cancel', 'Previous', and 'Next'.


4) IPC Setup

This menu allows you to add and modify IP cameras configurations.

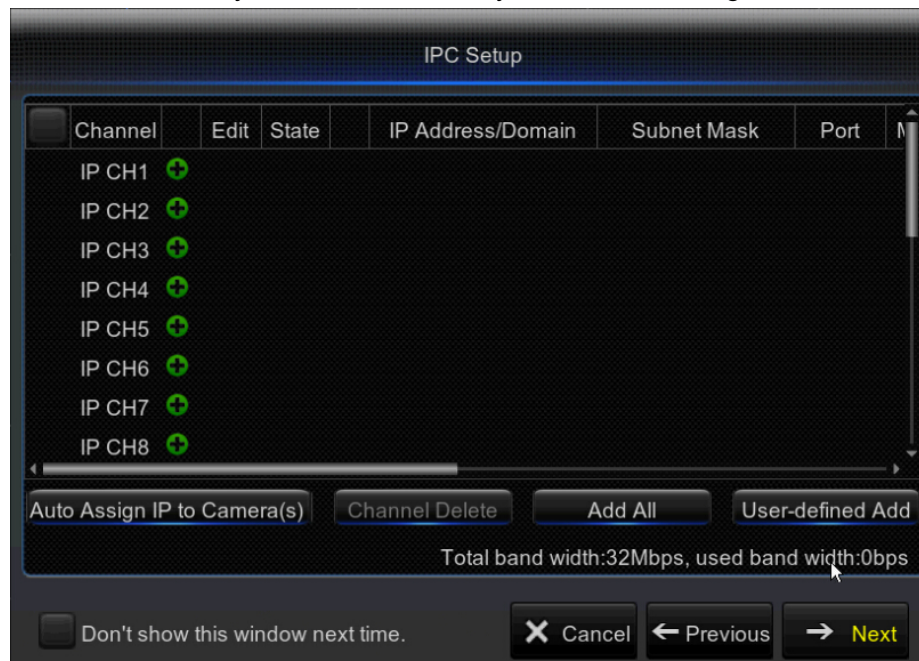


5) Record Schedule

This menu allows you to specify when the DVR records video and define the recording mode for each channel. The recording schedule lets you set up a schedule like, daily and hourly by Normal (continuous) recording, Motion recording, and Alarm recording. To set the recording mode, click first on the mode radio button (Normal, Motion, or Alarm), then drag the cursor to mark the slots.

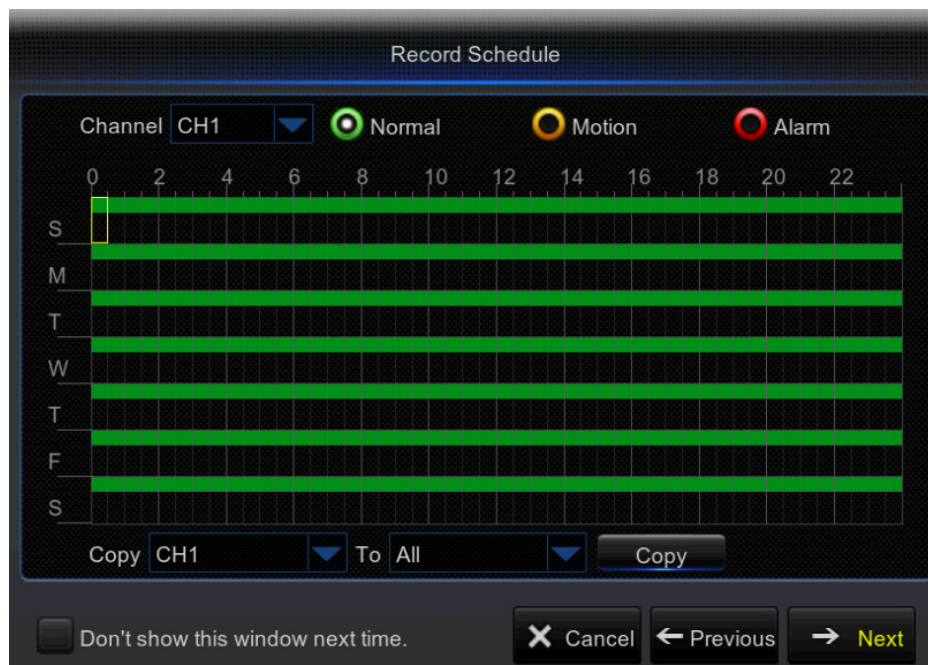


6) General System Configuration

This menu allows you to configure the general parameters of the system, such as Date, Time, Date Format, Time Format, Language, Menu Timeouts, Mode.

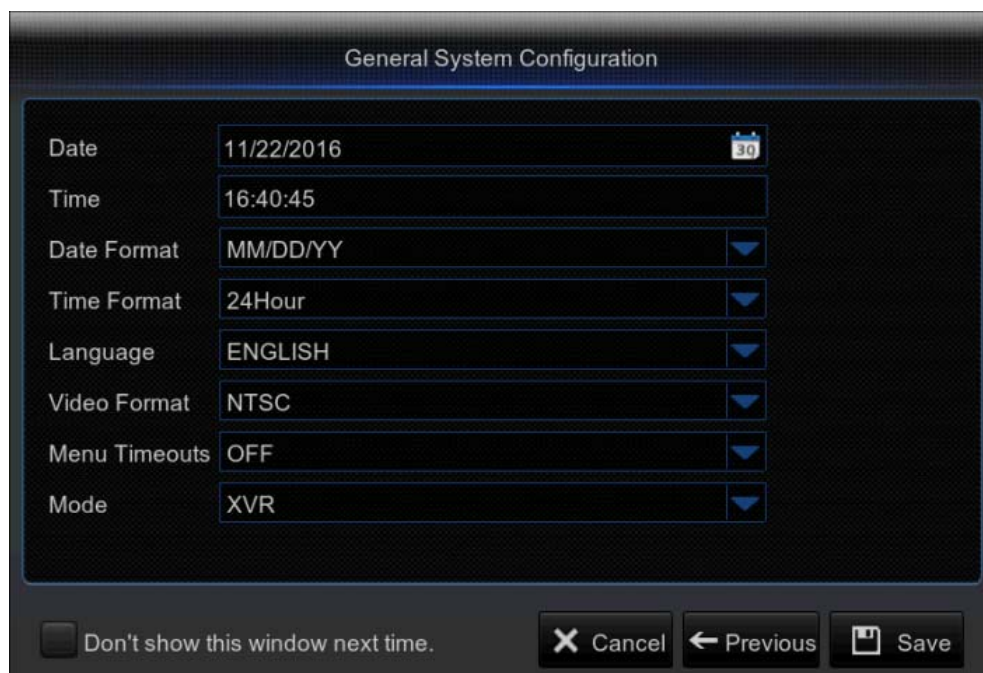

4.2 Live Viewing Screen

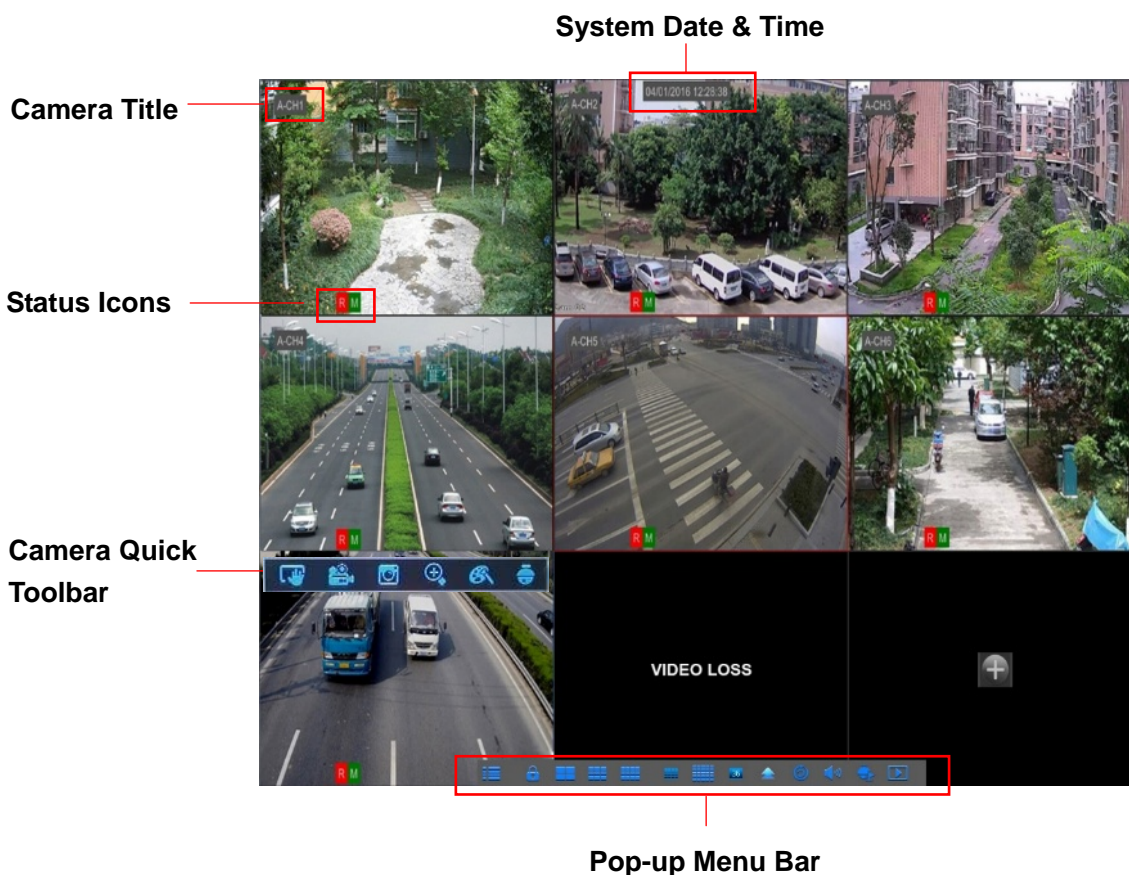

System Date & Time

To display current system date & time

Camera Title

To display the camera title

A-: This indicates that the cameraconnected is an AHD camera

T-: This indicates that the cameraconnected is a TVI camera

C-: This indicates that the cameraconnected is a CVI camera

IP: This indicates that the camera connected is an IP camera

Status Icons

R indicates that the DVR is currently recording.

M The motion icon in Green indicates that the DVR is detecting motion from the camera but not recording.

M This icon appears when the camera has detected motion and triggers recording.

I The I/O alarm icon in Green indicates that the external sensor device is triggered but not recording.

I The I/O alarm icon in Green indicates that the external sensor device is triggered for recording.

H The HDD icon indicates that the DVR cannot detect a HDD or the HDD is not formatted.

VIDEO LOSS: Connection to the camera has been lost.

Off-line: The added IP camera is offline or disconnected.

No Camera: IP Camera has not been connected to the DVR.

No HDD: HDD is not installed

Camera Quick Toolbar



Click to enter PTZ control panel

- Click to adjust the channel color settings


Click to zoom in the channel

Click to playback the recent 5 minutes recording




→ Click to start recording the channel manually

→ Click this to manually capture an image

Pop-up Menu Bar


 Click to open the Main Menu


 Click to lock/unlock the screen operation

   Click to switch to different camera views

 Click to view more layout options

  Click to switch all IP channels to mainstream or substream (for live view resolution)


 Click to switch among real-time, balanced, or smooth view. The view effect modes influence only the displayed video quality by bit rate and frame rate but do not influence the recording quality.

 Click to start viewing channels in a sequence.

 Click to adjust the volume


 Click this to start / stop cruise for a PTZ camera

 Click to playback videos

 Click to view system information

Chapter 5 DVR Menu

5.1 Overview

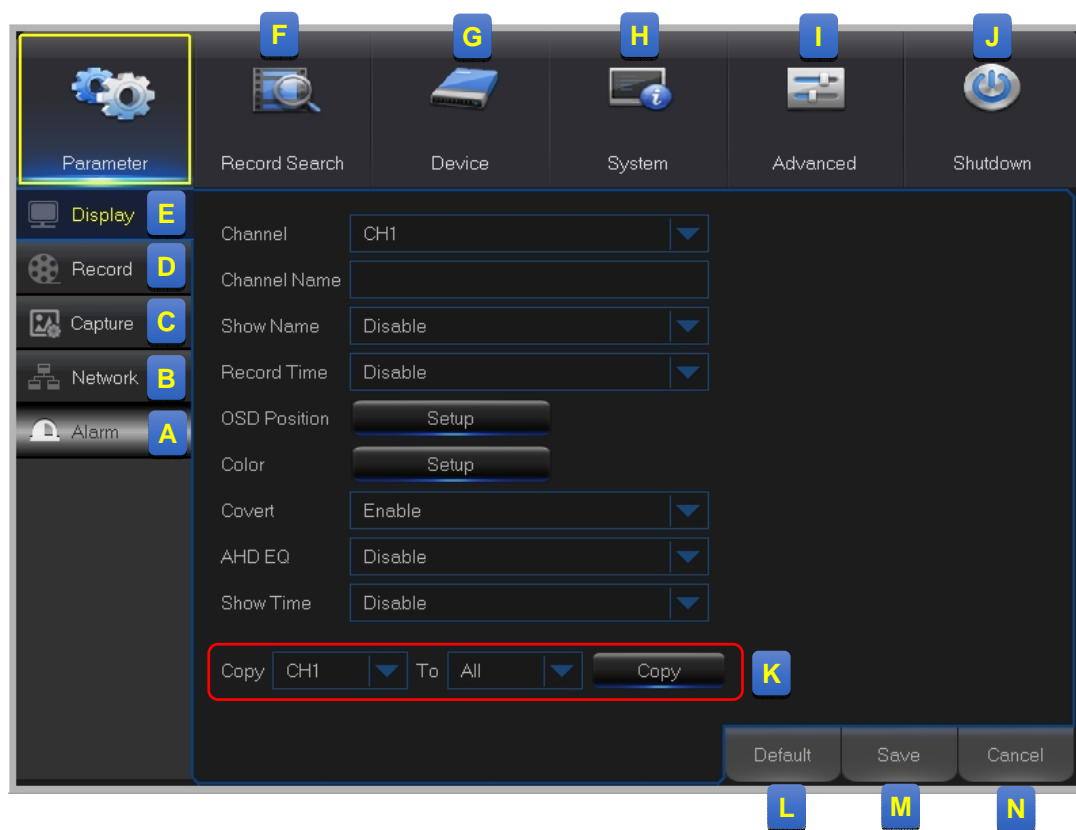

A: Alarm – To set the motion detection function and/or I/O alarm function

B: Network – To configure the DVR's access parameters to the network, configure email settings, DDNS parameters, etc.

C: Capture – Image capture configuration

D: Record – To configure the recording options and set the recording schedule

E: Display – To configure how many channels are displayed on the Live Viewing screen, for example color setup, video output resolution, privacy areas, etc.

F: Record Search – To search for recordings, events, and captured images

G: Device – HDD Management, set the PTZ configuration parameters, and connection parameters to link your DVR to your Dropbox account.

H: System - To modify general DVR settings, such as date and time, User management, view system info, etc.

I: Advanced– Advanced settings, for example load default, Firmware update, etc.

J: Shutdown - To shut down or reboot the DVR

K: Copy (Parameters) To - Click to copy the current settings to all channels or one specific channel


L: Default - To restore the default settings

M: Save - Click to save the modifications

N: Cancel - Click to discard the modifications

5.2 Display

5.2.1 Analog Channels

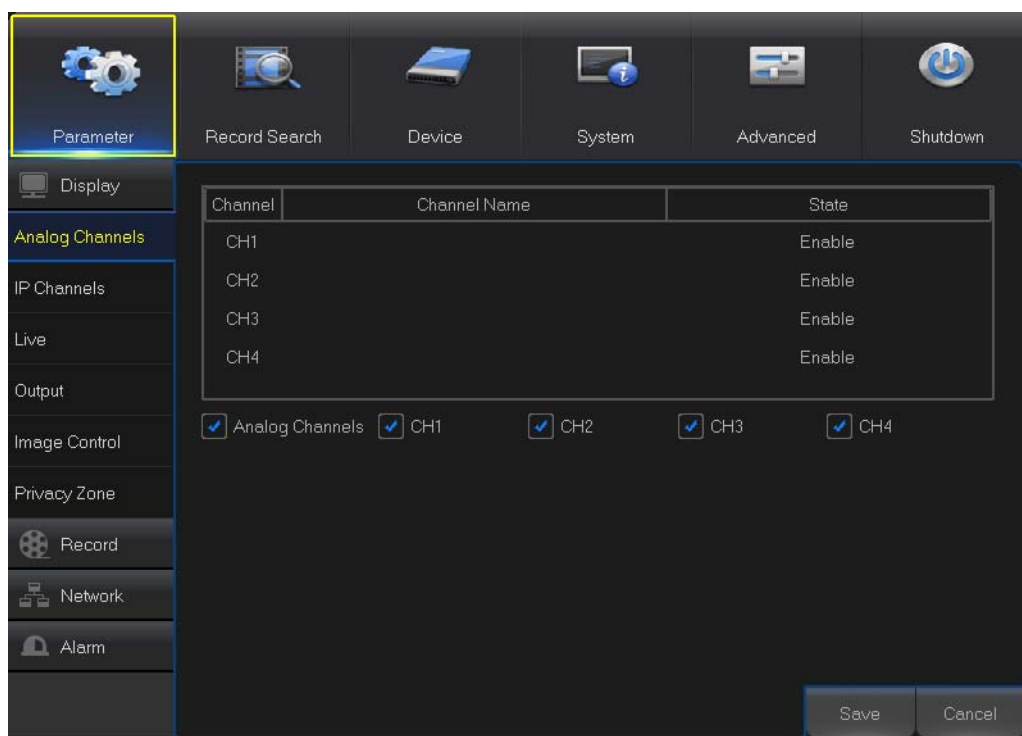

Channel: Display channel identification.

Channel Name: Display the channel name.


State: Display the channel status.

Analog Channel: Click on the checkbox next to the channel identifier to enable or disable the analog channel. To disable an analog channel can increase an IP channel input.

NOTE: After making modifications to the channel status, click Save to save the changes. You are prompted to confirm the modifications. Click OK to confirm.

5.2.2. IP Channels

This DVR supports to connect IP camera inputs. In this menu, you can add, edit or delete the IP cameras.

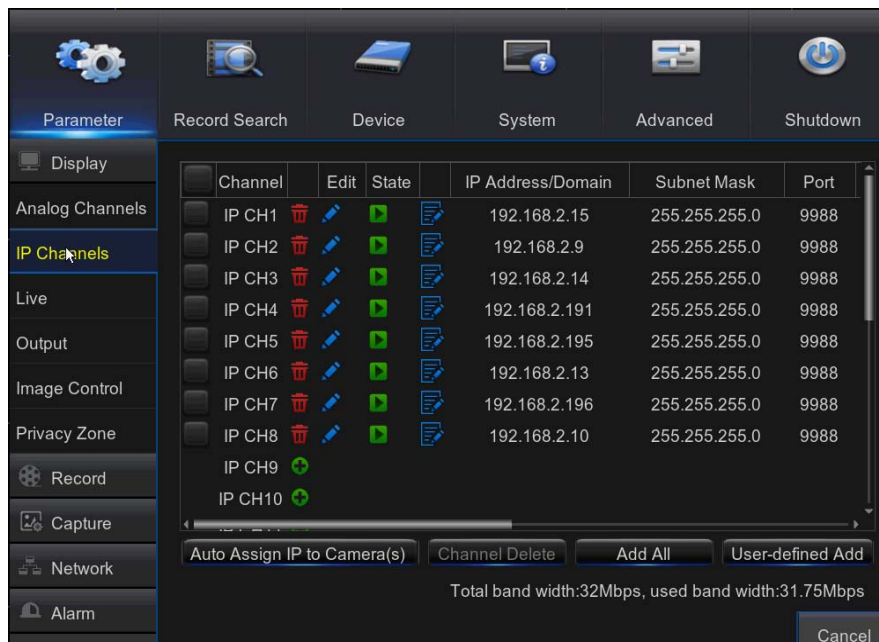


Auto Assign IP to Camera(s): Click to reassign an IP address to the IP camera that is already connected to the DVR.

Add All: Click to add local ONVIF cameras (DVR and IP cameras are connected to the same router). To complete the connection, enter user name and password of the IP camera, and click **OK**.

User-defined Add: Click to add remote ONVIF cameras over the Internet.

Enter the connection parameters of the IP camera: **IP Address/Domain**, **Port**, **Protocol**, **User Name**, and **Password**. Then click **Add**.

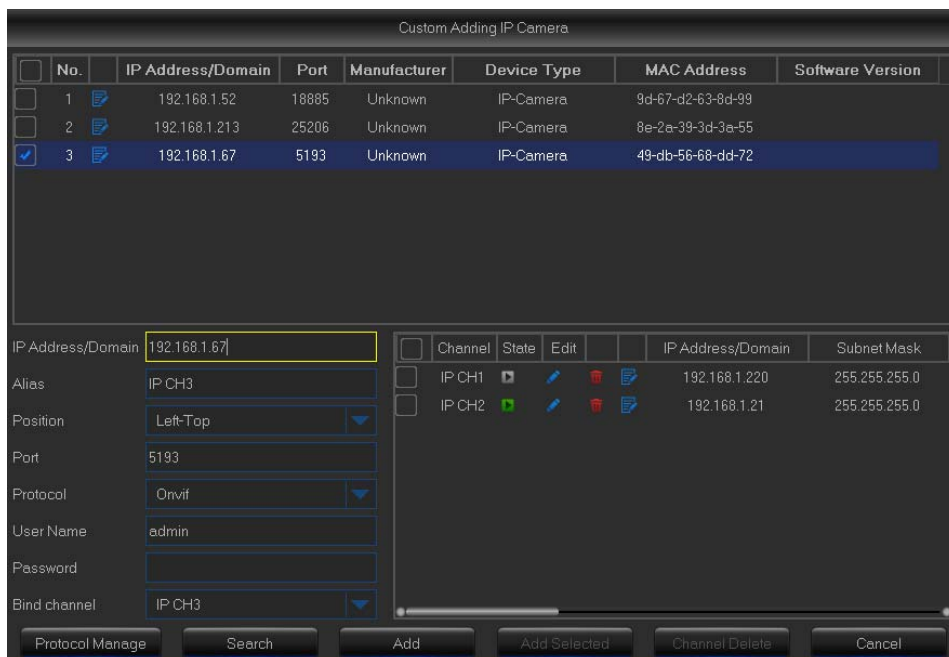

With the **Protocol Manage** button, you can edit your own RTSP protocol to connect to IP cameras.

Protocol Manage

Custom Protocol: Custom Protocol1

Protocol Name:

Stream Type: Mainstream Substream

Enable Substream: ☐

Type: RTSP RTSP

Port: 0 0

Resources Path: rtsp://192.168.1.150:554/0 rtsp://192.168.1.150:554/1

Example :
[type]://[IP address]:[port]/[resources path]
rtsp://192.168.0.1:554/resourcesPath

Default OK Cancel

Parameter Record Search Device System Advanced Shutdown

Display

Analog Channels

IP Channels

Live

Output

Image Control

Privacy Zone

Record

Network

Alarm

Channel	Edit	State	IP Address/Domain	Subnet Mask	Port	Man
<input type="checkbox"/> IP CH1			192.168.1.194	255.255.255.0	2650	Un
<input type="checkbox"/> IP CH2			192.168.1.21	255.255.255.0	6460	Un
<input type="checkbox"/> IP CH3			192.168.1.14	255.255.255.0	13920	Un
<input type="checkbox"/> IP CH4			192.168.1.7	255.255.255.0	25447	Un
<input type="checkbox"/> IP CH5			192.168.1.2	255.255.255.0	13077	Un
<input type="checkbox"/> IP CH6			192.168.1.202	255.255.255.0	23556	Un
<input type="checkbox"/> IP CH7			192.168.1.79	255.255.255.0	5699	Un
<input type="checkbox"/> IP CH8			192.168.1.208	255.255.255.0	19920	Un

Auto Assign IP to Camera(s) Channel Delete Add All User-defined Add

Total band width:1.632Mbps, used band width:0bps


Cancel

Added IP
Camera List

In the Added IP Camera List, you can view the IP Camera **Channel** title, **Delete** IP Camera, **Edit** IP Camera, Check the connection **State**, view the **IP address/Domain / Subnet Mask / Port**, view the **Manufacturer** of the added IP cameras, view the **Device Type**, check the **Protocol, MAC Address & Software** version of IP cameras.

5.2.3. Live

This menu allows you to configure channel parameters.

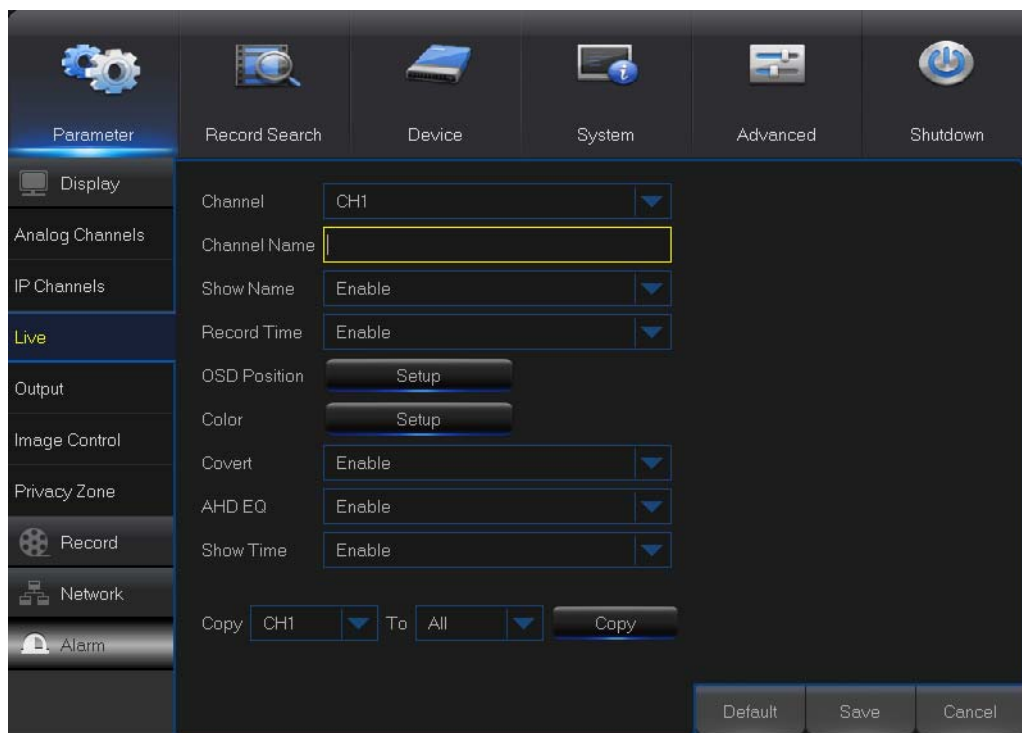

Channel: Select the channel you want to modify.

Channel Name: Enter the name of the channel.

Show Name: Enable to display the channel name on the live screen.

Record Time: Disable if you do not want to see the recording time on the channel.

OSD Position: Click **Setup** to determine where you want the channel name and current date to be displayed when you are viewing the channel. Drag the channel name box and the date/time box to the desired location on the channel view.

Color: Click **Setup** to configure video color settings.



HUE: Changes the color mix of the image.

BRIGHT: Defines how bright the image appears on the display.

CONTRAST: Increases the difference between the darkest black and the whitest white in the image. Modify the contrast if the sections of the image look "grey out".

SATURATION: Alters how much color is displayed in the image. The higher the saturation, the brighter and vivid colors will appear to be. Setting this parameter too high can degrade the image quality.

Covert: Enable if you want to hide this channel from appearing on the Live Viewing screen.


Disabling or enabling this option does not affect video recording on the HDD.

AHD EQ: Enable or disable AHD EQ (Enhanced Quality) function. Configure this parameter if you are an advanced user.

Show Time: Disable if you do not want the current time to appear on the channel.

5.2.4. Output

This menu allows you to configure video output parameters

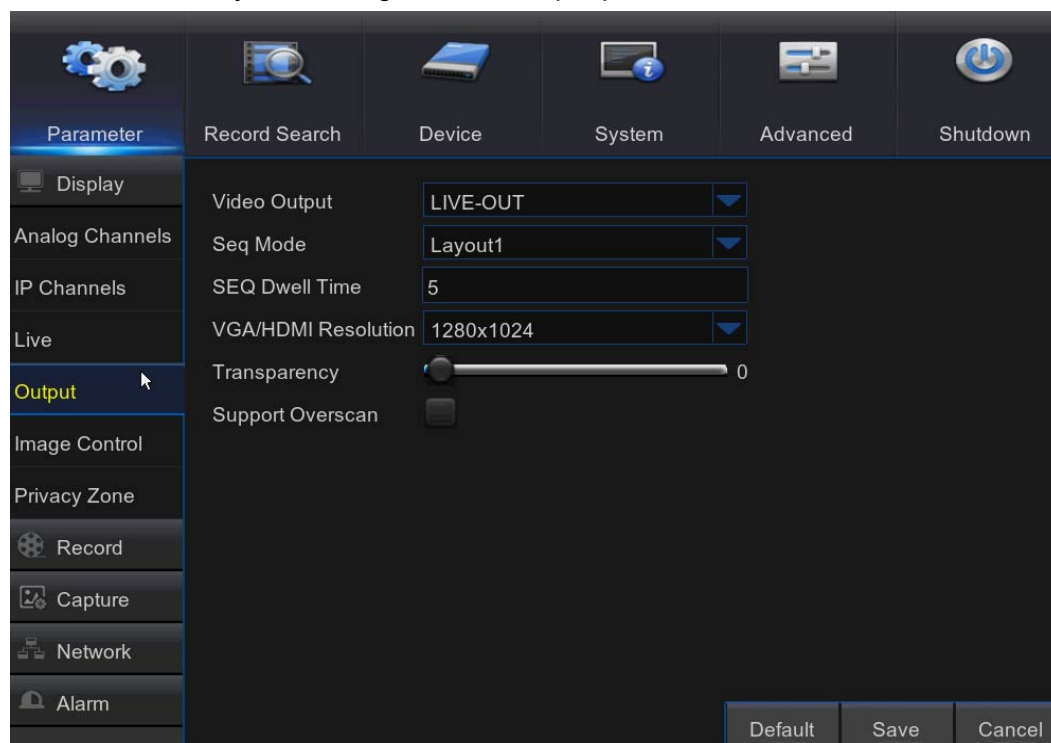

Video Output: This is the monitor that you use for live view display.

Sequence Mode: Choose your favorite layout from the drop-down menu for viewing channels in a sequence on live view.

SEQ Time: Set how long you want the live view from a channel to be displayed in a sequence.


VGA/HDMI Resolution: Select the highest resolution your monitor/TV supports. The higher the resolution, the more details you will see on your images. The DVR will restart after you change the resolution.

Transparency: Decide how transparent you want the menus to be. Choose partially transparent (see-through) if you need to keep an eye on happenings while adjusting settings.

Support Overscan: Check to adjust the position of the video image on the live viewing screen.

5.2.5 Image Control

This menu allows you to configure the camera settings. Some IP cameras may not support this feature and the IP camera settings cannot also be changed using the DVR.

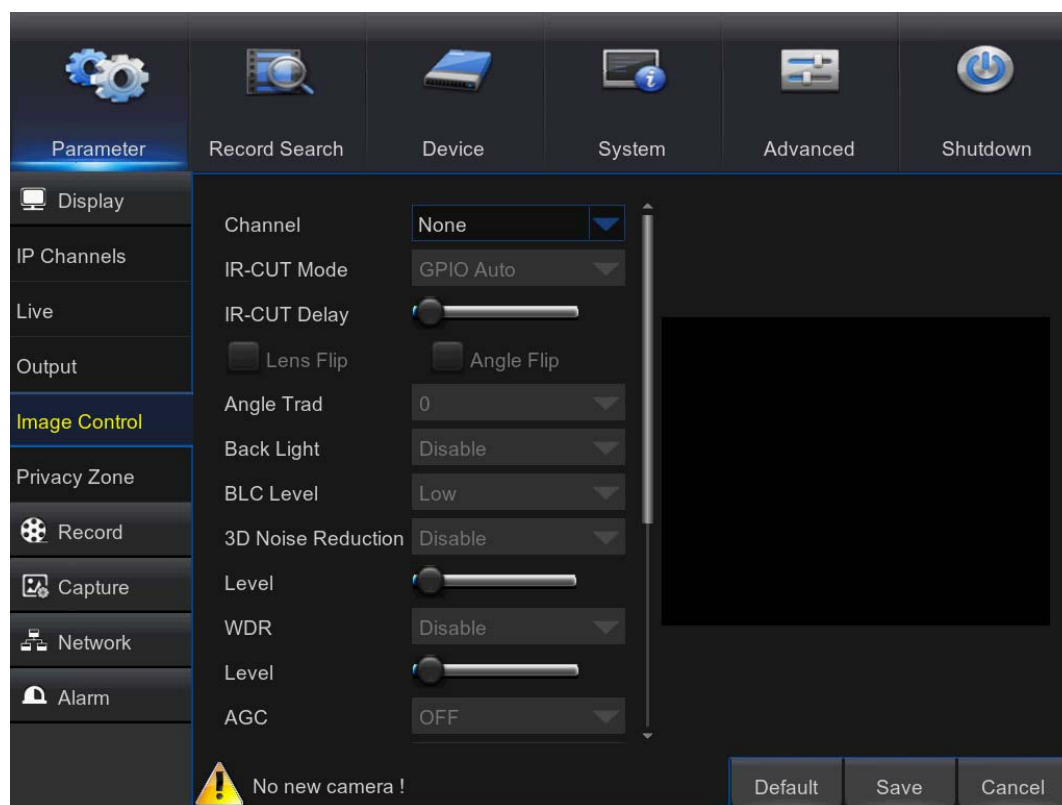

Channel: Select the channel you want to modify.

IR-CUT Mode: Select the desired built-in filter switch-over mode to ensure the camera works properly both in the daylight and night.

IR-CUT Delay: Set the IR-CUT switching time delay.

Lens Flip/Angle Flip: Check to enable automatic lens flip and/or angle flip.

Angle Trad: Set the flip angle.

Back Light: Enable this feature to compensate the darkness of the subject when shooting against bright light sources. For example, sunlight.

BLC Level: Set the backlight compensation level.

3D Noise Reduction: Enable this feature to digitally minimize video noise and extend the DVR storage.

Level: Set the noise reduction level.

WDR (Wide Dynamic Range): Enable to allow automatically adjust the brightness and contrast of the video when shooting in the darkness with bright light sources.

Level: Set the WDR level.

AGC (Automatic Gain Control): Configure when shooting in changing lightning environments. The video image is brightened in dark areas.

White Balance: Choose the white balance level between Auto (automatic adjustment), Manual (manual adjustment of red and blue gain), indoor (optimized according to the indoor environment).

Red/Green/Blue: Adjust the red/green/blue value.

Shutter: Set the shutter mode.


Time Exposure: Choose the exposure time of the camera.

Defog Mode: Use in foggy environments to improve the video quality.

Level: Set the defog level.


5.2.6 Private Zone

This menu allows you to create Privacy Zone(s) if you want to partially cover up part of the image. You can create up to four privacy zones in any size and location on the channel view. These zone(s) appear as “red box rectangle areas”. Just click inside the default red-lined rectangle and drag it where you want to create a privacy zone.

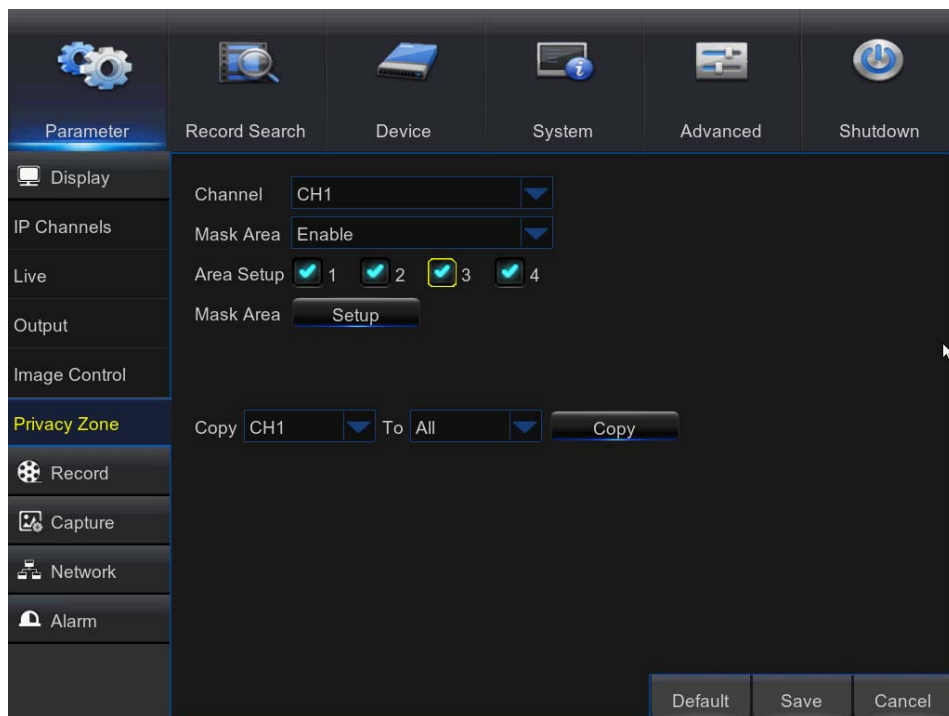

Select the **Channel** where you want to set privacy zone(s), then Enable **Mask Area**. Decide how many privacy areas you want to set and check the area(s) in **Area Setup**, and click **Setup** to open the channel in full screen mode and start marking the privacy zones.


Depending on the number of areas you have chosen in **Area Setup**, you will see areas covered with black rectangles on the channel view. When you have finished marking the areas, right-click to return to the Main Menu.

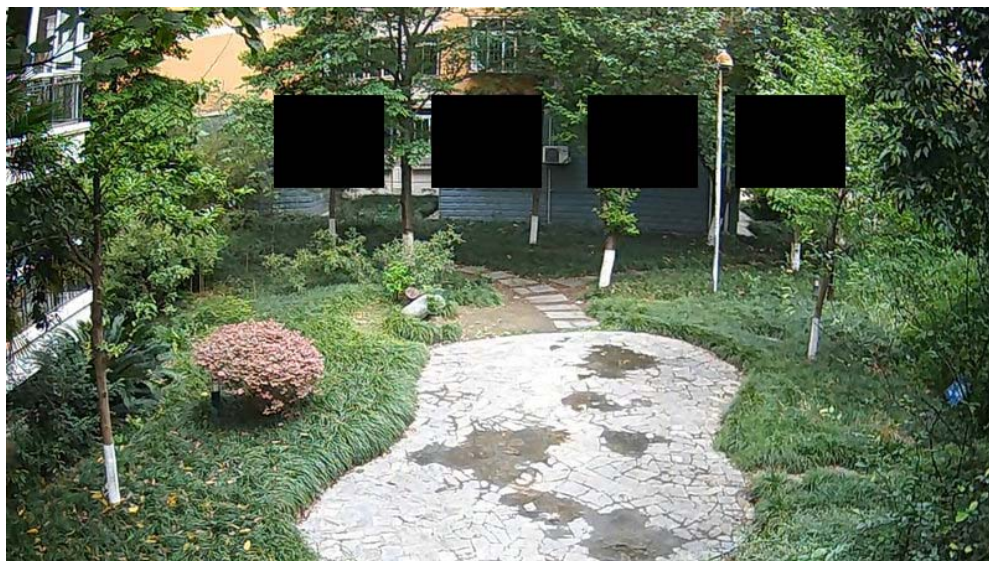

5.3 Record

5.3.1 Record

This menu allows you to configure the channel recording parameters.

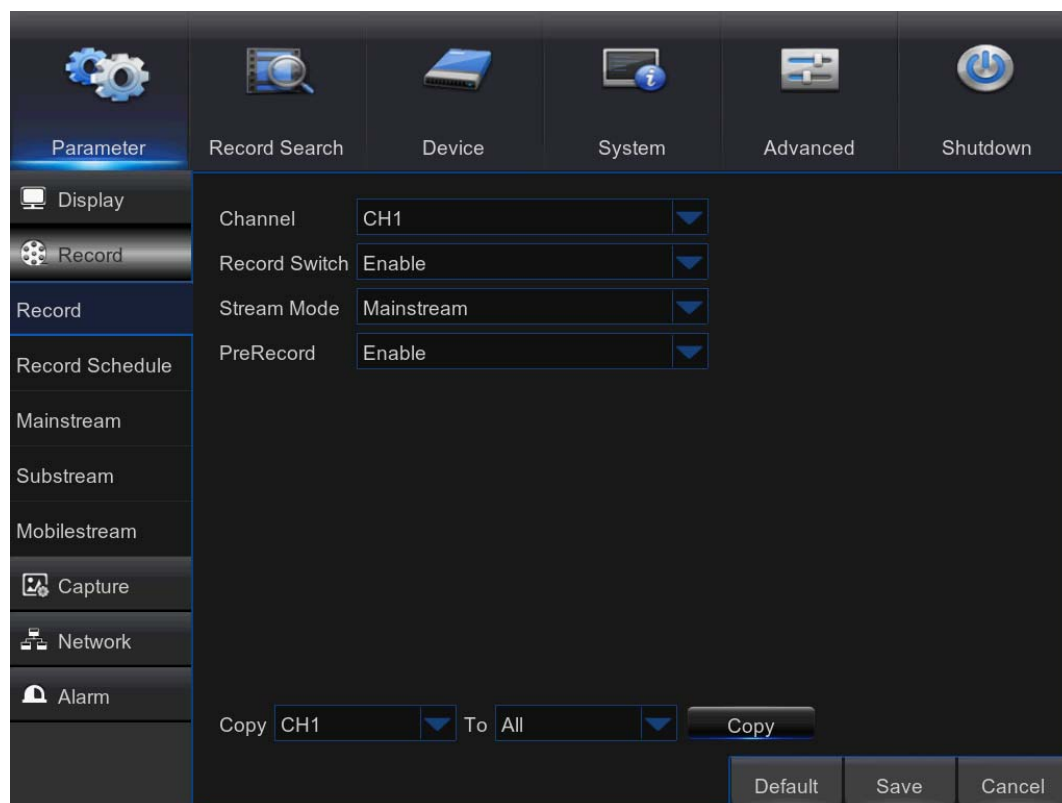

Channel: Select the channel to set its recording parameters.


Record Switch: Enable in order to allow the video to be recorded to the HDD.

Stream Mode: Choose the recording resolution. The available options are Mainstream and Substream.

PreRecord: If this option is enabled, the DVR starts recording a few seconds before an event occurs. Use this option if your primary recording type is motion based.

5.3.2 Record Schedule

This menu allows you to specify when the DVR records video and define the recording mode for each channel. The recording schedule lets you set up a schedule like, daily and hourly by normal (continuous) recording, motion recording, and alarm recording. To set the recording mode, click first on the mode radio button (Normal, Motion, or Alarm), then drag the cursor to mark the slots. The recording schedule is valid only for one channel. If you want to use the same recording schedule for other channels, use **Copy To** function.

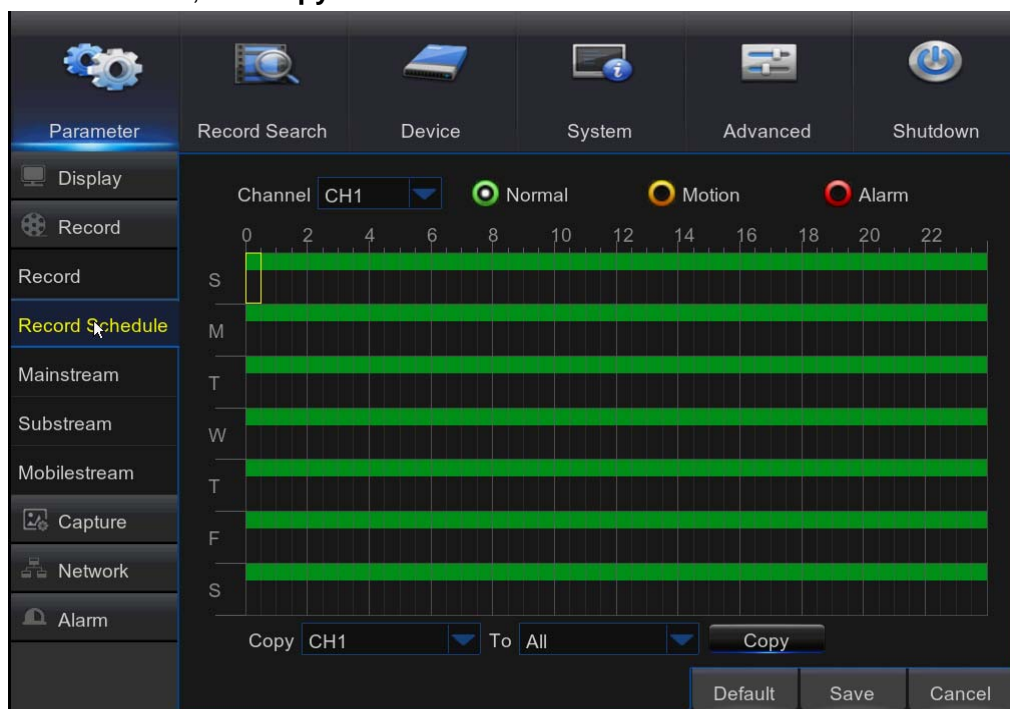

Channel: Select the channel to set its recording parameters.

Normal: When the time slot is marked green, this indicates the channel performs normal recording for that time slot.

Motion: When the time slot is marked yellow, this indicates the channel records only when a motion is detected during that time slot.


NOTE: To use the motion detection, you must enable and configure the motion settings for the channel in Alarm menu. Please see [5.6.1 Motion](#)

Alarm: When the time slot is marked red, this indicates the channel records only when the sensor is triggered during that time slot.

No Record: A time slot marked black means that there is no recording scheduled for the time slot.

5.3.3 Mainstream

This menu allows you to configure the recorded video parameters. All the modifications you apply to these settings will affect the recorded video saved into the HDD.

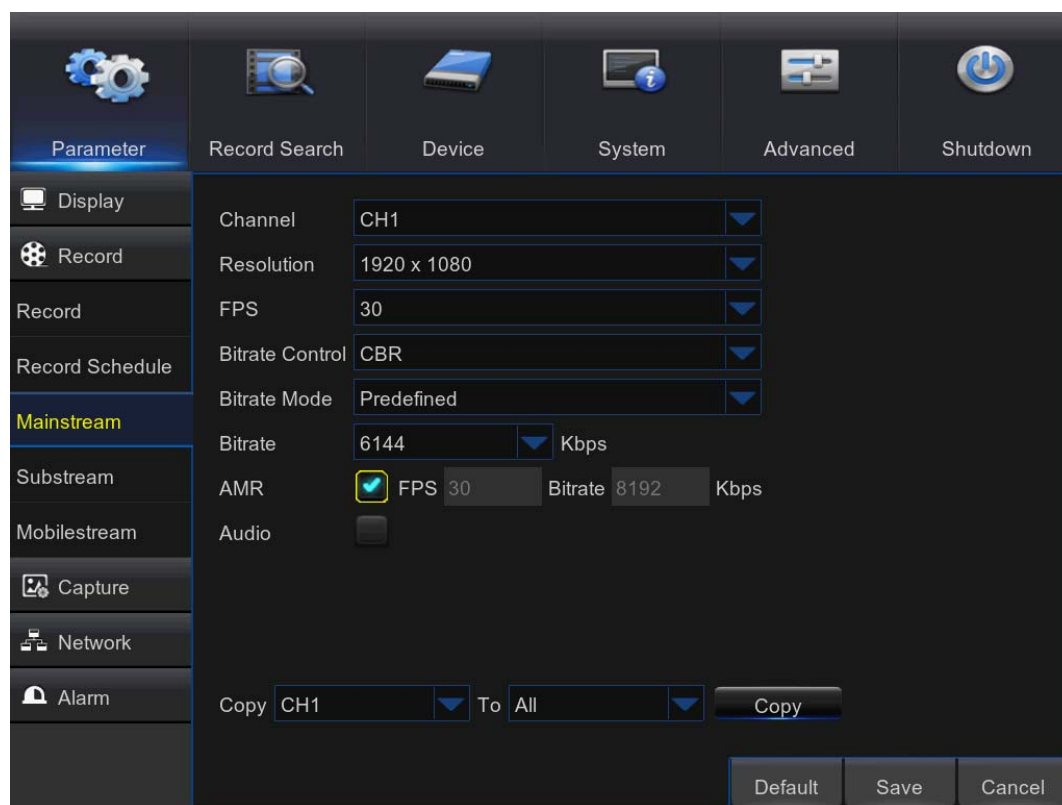

Channel: Select the channel to configure recording related information.

Resolution: This parameter defines, how large the recorded image will be.

FPS: This parameter defines the number of frames per second the DVR will record.

Bitrate Control: Select the bitrate level based on the complexity of the scene. For a simple scene, such as a gray wall is suitable constant bitrate (**CBR**). For more complex scene, such as a busy street is suitable variable bitrate (**VBR**).


Bitrate Mode: If you want to set the bitrate by yourself, then choose **User-defined** mode. If you want to select the predefined bitrate, choose **Predefined** mode.

Bitrate: This parameter corresponds to the speed of data transfer that the DVR will use to record video. Recordings that are encoded at higher bitrates, will be of better quality.

Audio: Select this option if you want to record audio along with video and have a microphone connected to the DVR or using a camera with audio capability.

5.3.3 Substream

This menu allows you to configure the settings of a particular channel if the channel is being viewed via remote access, for example Web Client.

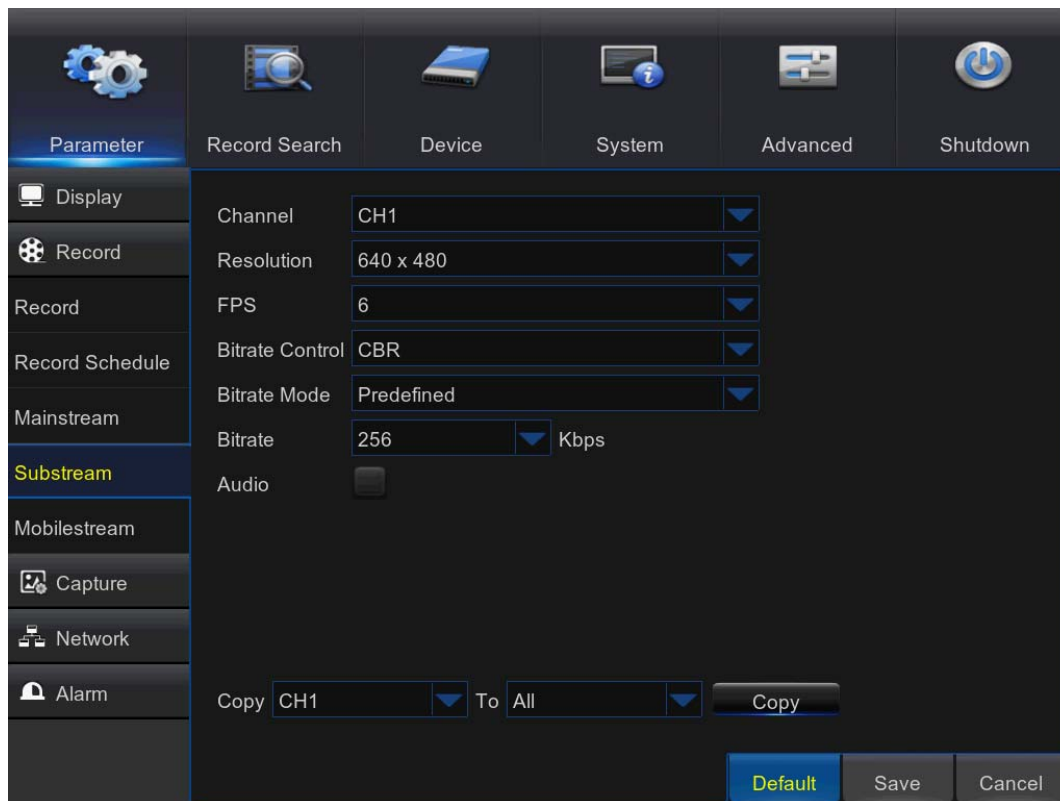

Channel: Choose the channel where the settings are applied.

Resolution: Set the resolution.

FPS: This parameter defines the number of frames per second at the remote session.

Bitrate Control: Select the bitrate level based on the complexity of the scene. For a simple scene, such as gray wall is suitable constant bitrate (CBR). For more complex scene, such as busy street is suitable variable bitrate (VBR).


Bitrate Mode: If you want to set the bitrate by yourself, then choose User-defined mode. If you want to select the predefined bitrate, choose Predefined mode.

Bitrate: Enter manually or choose from the drop-down menu the data throughput during the remote session.

Audio: Tick the box if you want to hear the live sound at the remote session. Make sure the camera with audio capability is properly connected to the selected channel.

5.3.4 Mobile stream

This menu allows you to configure the settings of a particular channel if the channel is being viewed via mobile devices.

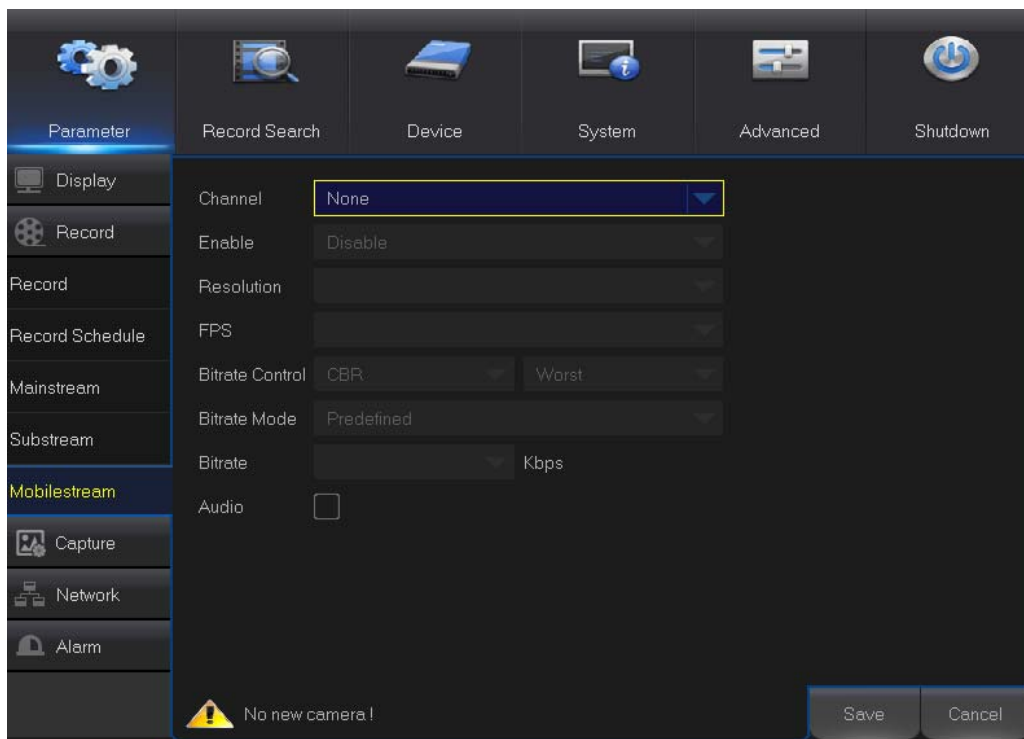

Channel: Choose the channel where the settings are applied.

Enable: Enable to allow to use mobile streaming on this channel

Resolution: Set the resolution.

FPS: This parameter defines the number of frames per second at the mobile session.

Bitrate Control: Select the bitrate level based on the complexity of the scene. For a simple scene, such as gray wall is suitable constant bitrate (CBR). For more complex scene, such as busy street is suitable variable bitrate (VBR).


Bitrate Mode: If you want to set the bitrate by yourself, then choose User-defined mode. If you want to select the predefined bitrate, choose Predefined mode.

Bitrate: Enter manually or choose from the drop-down menu the data throughput during the mobile session.

Audio: Tick the box if you want to hear the live sound at the mobile session. Make sure the camera with audio capability is properly connected to the selected channel.

5.4 Capture

This menu allows you to configure the snapshot capturing parameters.

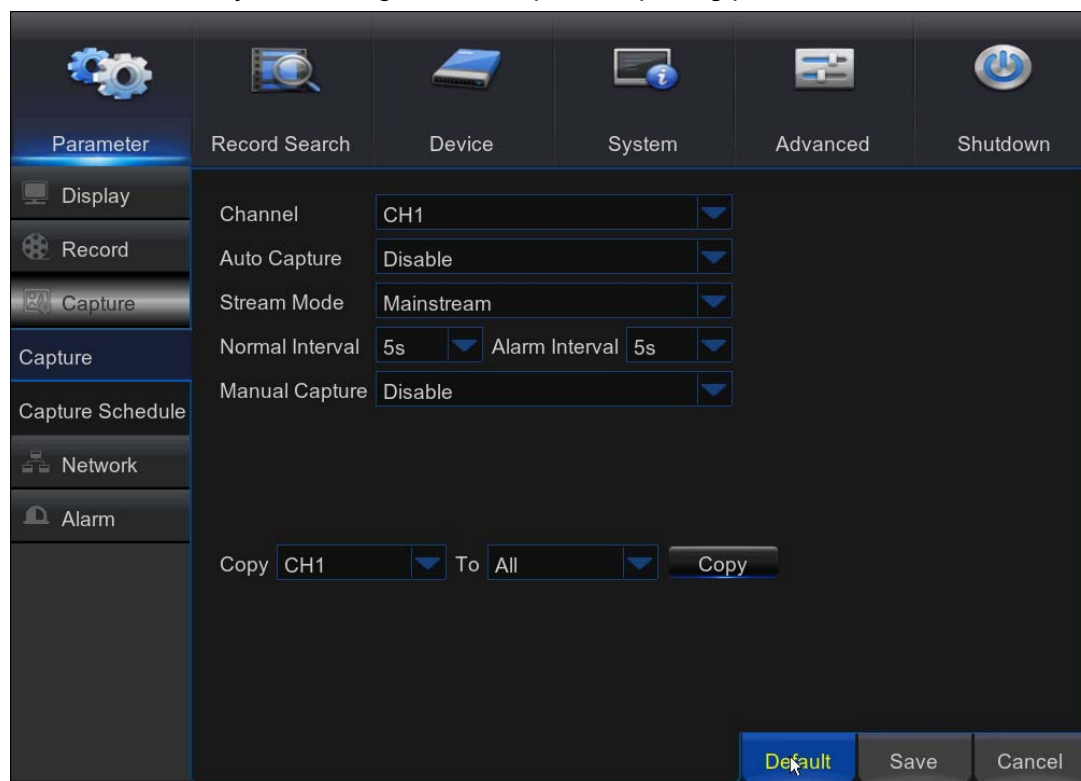

Channel: Select the channel to set its capture parameters.

Auto Capture: Enable or disable automatic capturing on the channel. When this feature is enabled, you can select the snapshot capturing interval.

Stream Mode: Select the image resolution.


NOTE: When the Auto Capture is enabled, you can select the image capturing interval.

Normal Interval: Snapshots are captured based on normal interval.

Alarm Interval: Snapshots are captured based on alarm interval only when a motion is detected or sensor is triggered.

Manual Capture: Enable or disable manual capturing on the channel.

Capture Schedule

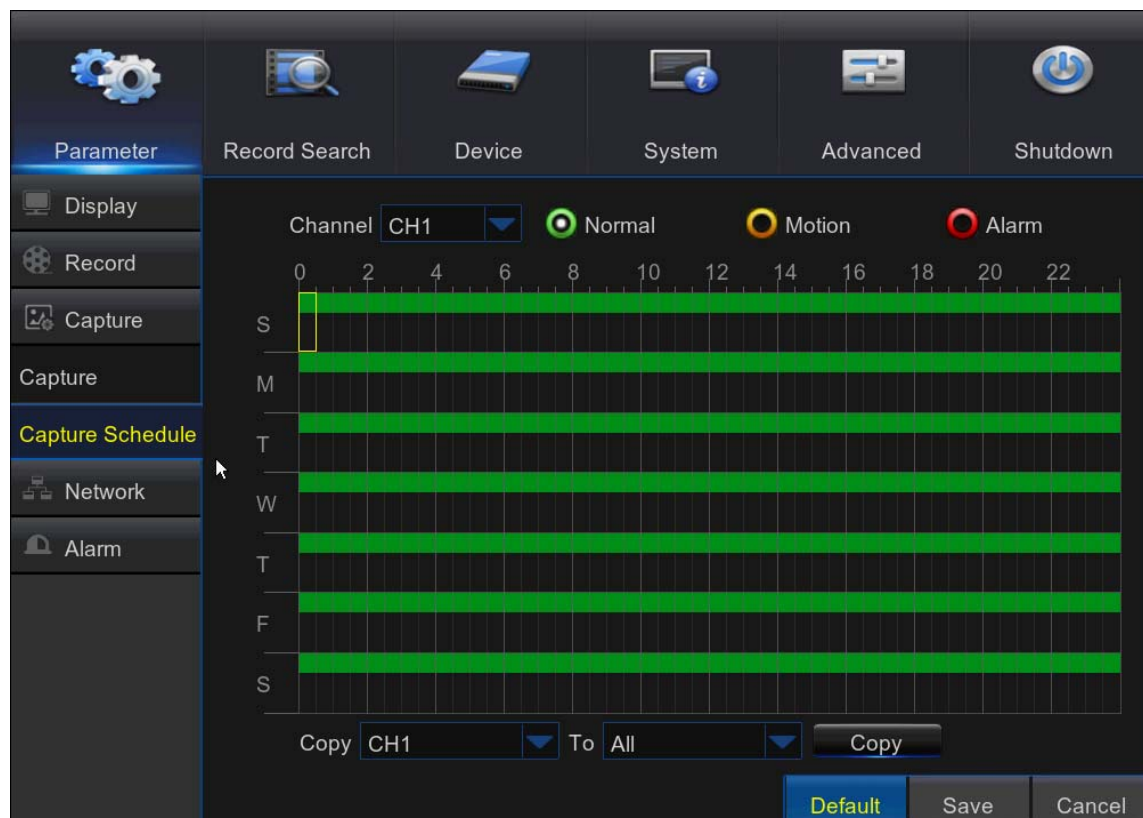

Channel: Select the channel to set its snapshot capturing schedule.

Normal: When the time slot is marked green, this indicates the channel is capturing snapshots based on the Normal Interval.

Motion: When the time slot is marked yellow, this indicates the channel is capturing snapshots based on Alarm Interval only when a motion is detected.

Motion: When the time slot is marked red, this indicates the channel is capturing snapshots based on Alarm Interval only when a sensor is triggered.

No Capturing: A time slot marked black means that there is no snapshot capturing scheduled for the time slot.

5.5 Network

This menu allows you to configure Network parameters, E-mail setup, DDNS, RTSP & FTP.

5.5.1 Network

This menu allows you to configure network parameters, such as PPPoE, DHCP, Static, and 3G. The most common types are DHCP or Static. Most probably your network type is DHCP, unless the network is manually addressed (usually called- Static). If you need an authentication user name and password to the Internet, then choose PPPoE. If you want to use mobile network connection, then choose 3G.

Parameter	Record Search	Device	System	Advanced	Shutdown
Display	<input type="radio"/> PPPoE <input checked="" type="radio"/> DHCP <input type="radio"/> Static <input type="radio"/> 3G				
Record	Client Port <input type="text" value="39999"/> HTTP Port <input type="text" value="38888"/>				
Capture	IP Address <input type="text" value="192.168.002.110"/>				
Network	Subnet Mask <input type="text" value="255.255.255.000"/>				
	Gateway <input type="text" value="192.168.002.001"/>				
	DNS1 <input type="text" value="221.005.088.088"/>				
	DNS2 <input type="text" value="008.008.008.008"/>				
Email					
Email Schedule					
DDNS					
RTSP					
FTP					
Alarm	UPNP <input type="text" value="Enable"/>				
<input type="button" value="Default"/> <input type="button" value="Save"/> <input type="button" value="Cancel"/>					

Network Type: Select the network type you are using.

PPPoE: This is an advanced protocol that allows the DVR to connect to the network more directly via DSL modem.

DHCP: This is the network type when a device on your network (usually a router) assigns automatically all the network parameters for your DVR.

Static: Requires all the network parameters to be filled in manually.

3G: Prior using the mobile network, you need to connect a 3G dongle to the DVR.

HTTP Port: This is the port that you will use to log in remotely to the DVR (e.g. using the Web Client). If the default port 80 is already taken by other applications, please change it.

Client Port: This is the port that the DVR will use to send information through. If the default port 9000 is already taken by other applications, please change it.

IP Address: The IP address identifies the DVR in the network. It consists of four groups of numbers between 0 to 255, separated by periods. For example, "192.168.001.100". You need to enter the IP address manually only if your network type is **Static**.

Subnet Mask: Subnet mask is a network parameter which defines a range of IP addresses that can be used in a network. If IP address is like a street where you live then subnet mask is like a neighborhood. The subnet address also consists of four groups of numbers, separated by periods. For example, "255.255.000.000". Alike IP address, you need to enter the subnet mask manually only if your network type is **Static**.

Gateway: This address allows the DVR to access the Internet. The format of the **Gateway** address is the same as the **IP Address**. For example, "192.168.001.001". Alike IP address, you need to enter the gateway address manually only if your network type is **Static**.

DNS1/DNS2: DNS1 is the primary DNS server and DNS2 is a backup DNS server. Usually should be enough just to enter the DNS1 server address.

UPNP: If you want to log in remotely to the DVR using Web Client, you need to complete the port forwarding. Enable this option if your router supports the UPnP. You need to enable UPnP both, on DVR and router. In this case, you do not need to configure manually port forwarding on your router. If your router does not support UPnP, make sure the port forwarding is completed manually

5.5.2 E-mail

This menu allows you to configure email settings. Please complete these settings if you want to receive the system notifications on your email when a motion is detected, HDD becomes full, HDD is in error state, or Video Loss occurs.

The screenshot shows a software interface for configuring email settings. At the top, there are six tabs: Parameter, Record Search, Device, System, Advanced, and Shutdown. The 'Parameter' tab is selected. On the left side of the 'Parameter' tab, there is a vertical list of sub-menus: Display, Record, Capture, Network, Email (highlighted in blue), Email Schedule, DDNS, RTSP, FTP, and Alarm. The main area of the interface contains the following settings:

- Email:** A dropdown menu set to 'Enable'.
- Encryption:** A dropdown menu set to 'Auto'.
- SMTP Port:** A text input field containing '00025'.
- SMTP Server:** A text input field.
- User Name:** A text input field.
- Password:** A text input field with a 'show' button to its right.
- Sender:** A text input field.
- Receiver1:** A text input field.
- Receiver2:** A text input field.
- Receiver3:** A text input field.
- Interval:** A dropdown menu set to '3 Min'.

At the bottom right of the main area is a 'Test Email' button. At the very bottom of the interface are three buttons: 'Default', 'Save', and 'Cancel'.

Email: Enable this feature.

Encryption: Enable if your email server requires the SSL or TLS verification. If you are not sure, set to be **Auto**.

SMTP Port: Enter the SMTP port of your email server.

SMTP Server: Enter the SMTP server address of your email.

User Name: Enter your email address.


Password: Enter the password of your email.

Receiver 1~3: Enter the email address where you want to receive the event notifications from the DVR.

Interval: Configure the length of the time interval between the notification emails from the DVR.

To make sure all settings are correct, click **Test Email**. The system sends an automated email message to your inbox. If you received the test email, it means the configuration parameters are correct.

5.5.3 E-mail Schedule

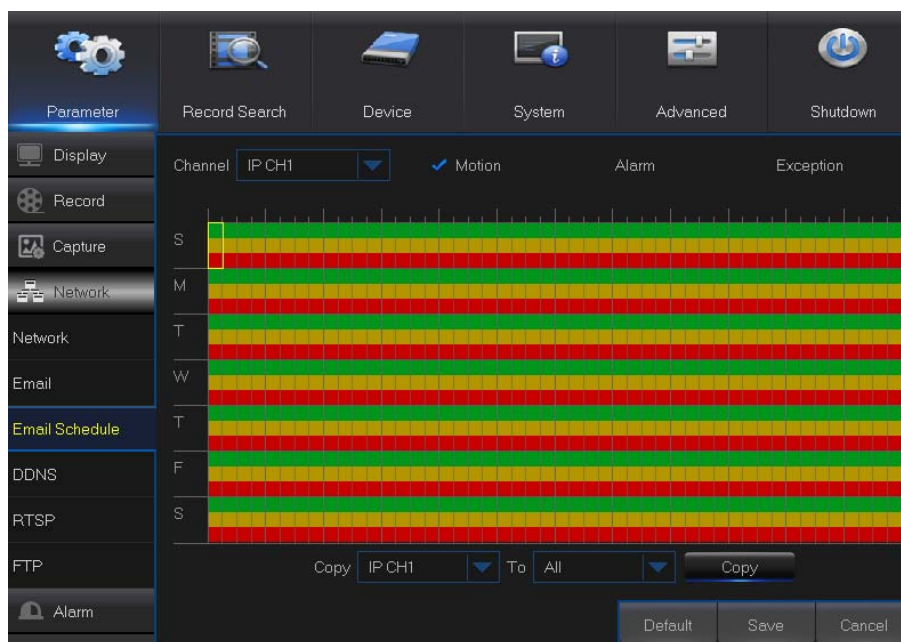

The color codes on email schedule have the following meanings:


Green: Slot for Motion.

Yellow: Slot for I/O Alarm.

Red: Slot for Exception (HDD full, HDD error, or Video Loss).

5.5.4 DDNS

This menu allows you to configure DDNS settings. The DDNS provides a static address to simplify remote connection to your DVR. To use the DDNS, you first need to open an account on the DDNS service provider's web page

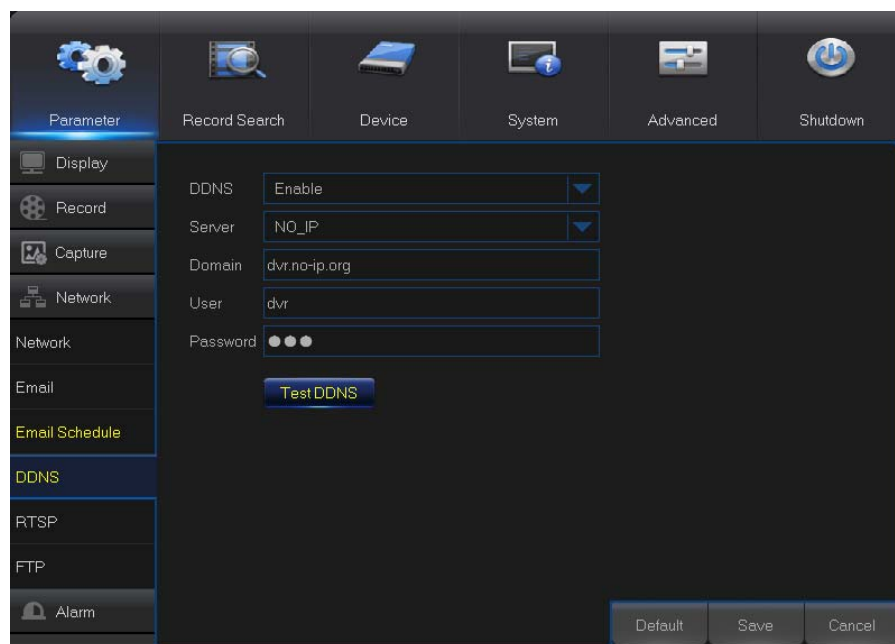

DDNS: Enable the DDNS service.

Server: Select the preferred DDNS server (DDNS_3322, DYNDNS, NO_IP, CHANGEIP, DNSEXIT).


Domain: Enter the domain name you created on the DDNS service provider's web page. This will be the address you type in the URL box when you want to connect remotely to the DVR via PC. For example: dvr.no-ip.org.

User/Password: Enter the user name and password you obtained when creating an account on the DDNS service provider's web page.

After all parameters are entered, click **Test DDNS** to test the DDNS settings.

5.5.5 RTSP

The DVR can be remotely viewed via RTSP protocol.

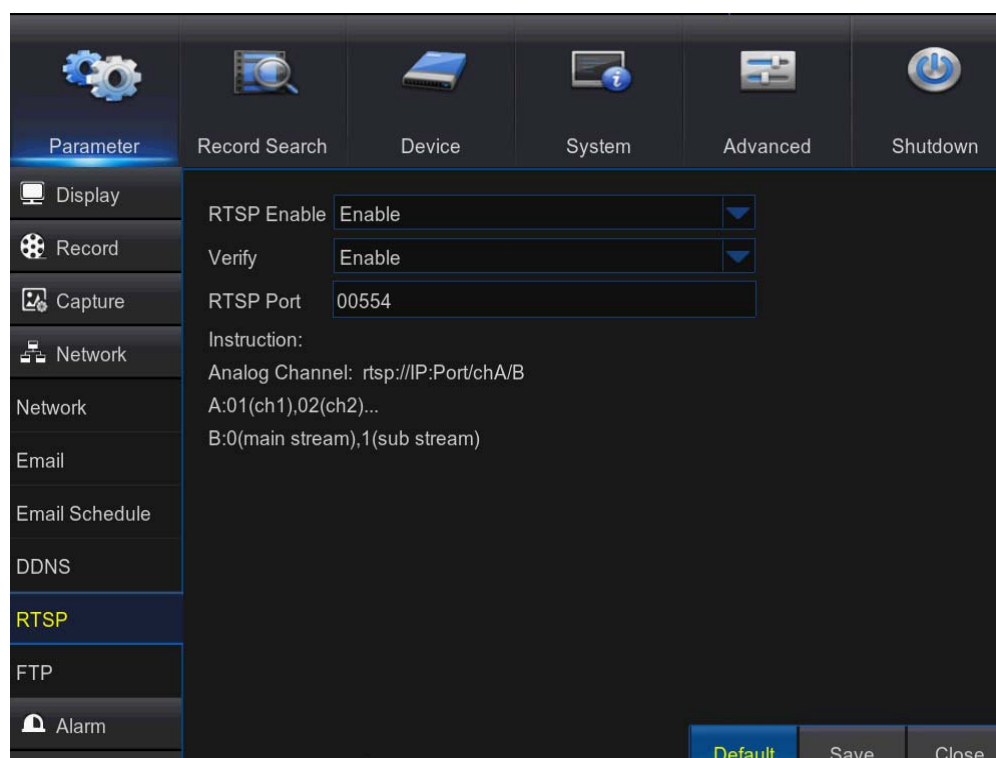

RTSP Enable: Enable/Disable

Verify: Enable/Disable


RTSP Port: Default is 554, if the default port 554 is already taken by other applications, please change it.

Analog Channel: rtsp://IP:Port/chA/B

A: 01(ch1), 02(ch2)....16(ch16)

B: 0(main stream), 1(sub stream)


For example, the DVR IP address is 192.168.1.120, and you want to view CH1 with mainstream, then the RTSP address will be: <rtsp://192.168.1.120:554/ch1/0>

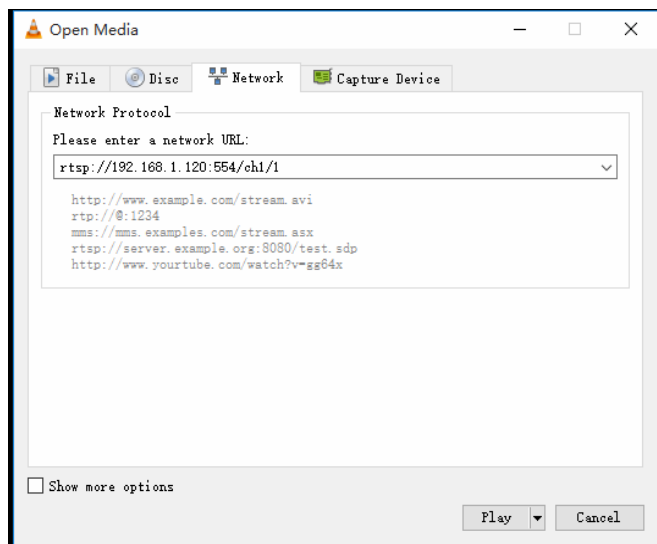

Note: RTSP user name and password is same with DVR user name, password and permissions. Follow the instruction to input IP and port to preview video.

5.5.6 FTP

This menu allows you to enable FTP function to view and load captured snapshots from DVR to your storage device over FTP.

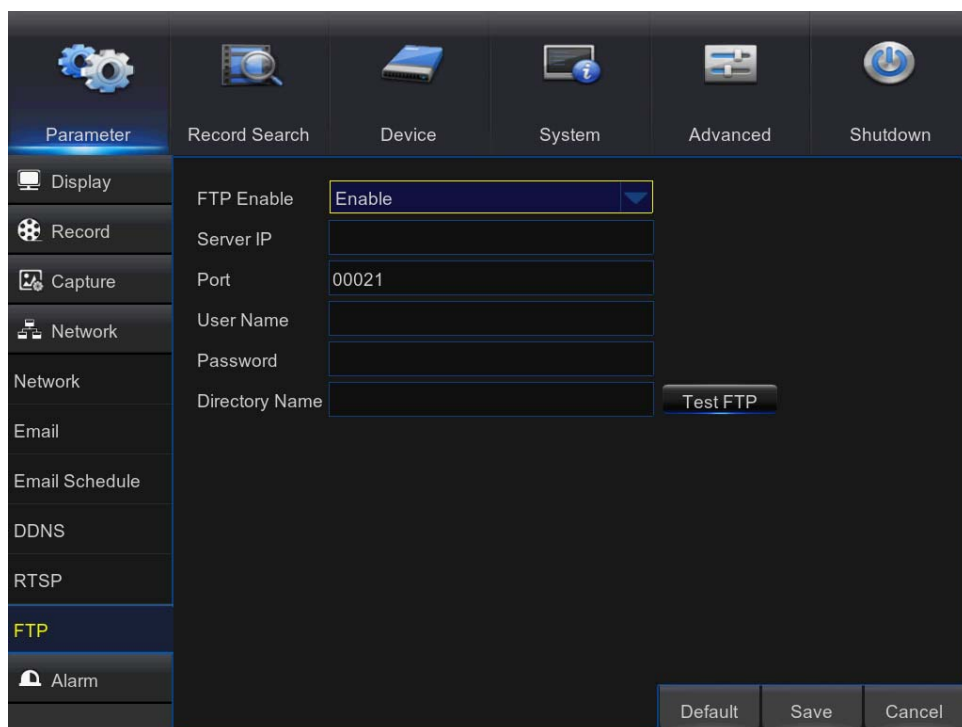

FTP Enable: Enable the feature in DVR.

Server IP: Enter your FTP server IP address or domain name.

Port: Enter the FTP port for file exchanges.

Name/ Password: Enter your FTP server user name and password.

Directory Name: Enter the default directory name for the FTP file exchanges.

Test FTP: Click to test the FTP settings.


5.6 Alarm

In these section, you can configure the Motion Detection, I/O Alarm & PTZ Linkage.

5.6.1 Motion

This menu allows you to configure motion parameters. The motion detection is pretty straight forward, the DVR simply compares one frame to another. A sufficient amount of difference is interpreted as motion. When the motion is detected, the system can be set to automatically initiate recording. In this menu you can select the channels where you want the motion detection recording to take place.

If you set the motion detection at a high sensitivity level ("8" is the most sensitive) then the frequency of false alarm events increases. If the sensitivity level is too low ("1" is the least sensitive), you might increase the risk that a significant motion event will not trigger the motion detection to record.

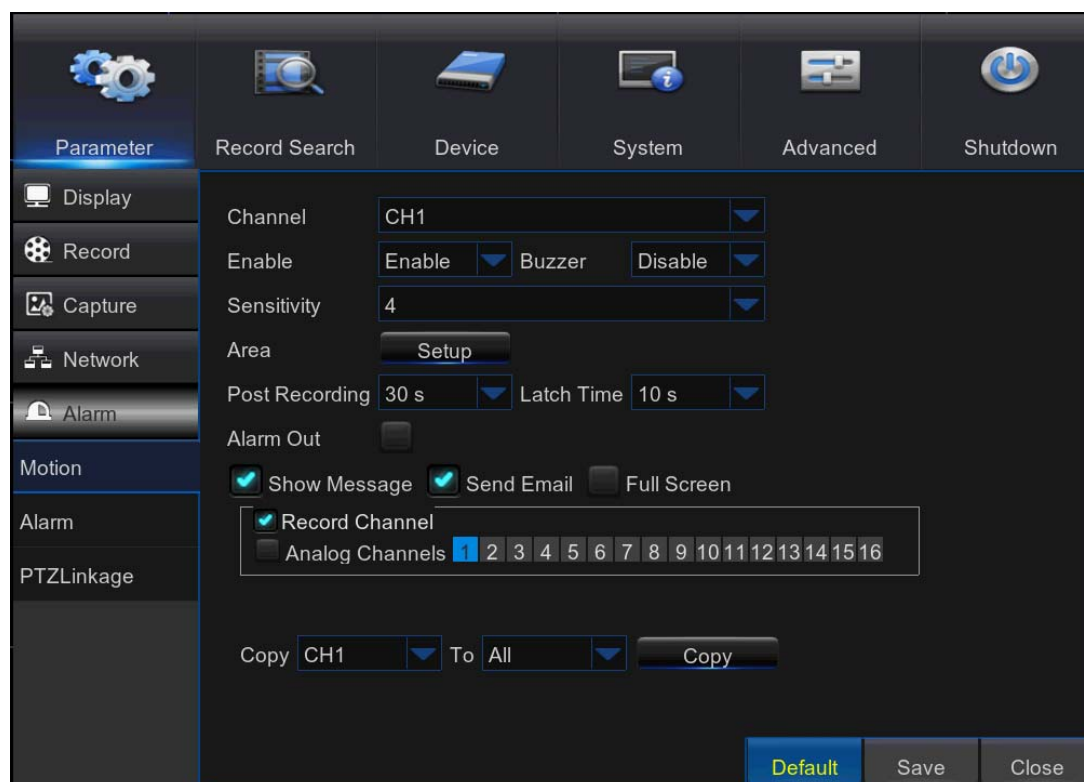

Channel: Select the channel you want to set the motion detection.


Enable: Enable or disable the function.

Buzzer: The DVR can use its internal buzzer to emit an alarm tone. You can set the buzzer duration in seconds when the motion is detected.

Sensitivity: Set the sensitivity level.

Area: To setup motion area, click **Setup**.

By default, the whole screen is marked for motion detection (red blocks). If you want to disable the motion detection on an area, you need to click the grid cursor and then drag the mouse to highlight the scope to unmark the area (transparent block). After setting is completed, right click the mouse button to return and click Save to make the area setup effective.

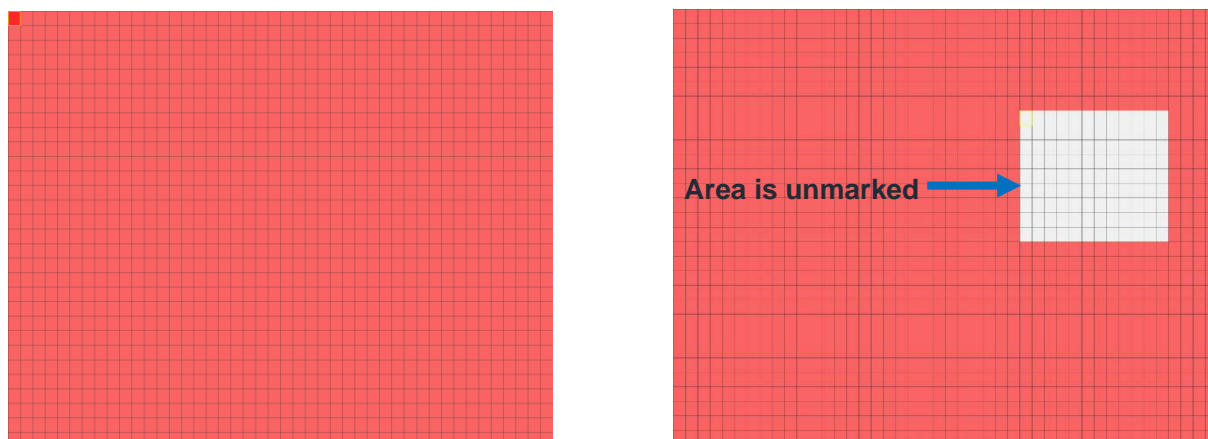

Motion Detection Area Setup

Post Recording: You can set how long after an event occurs that the DVR will continue to record. The recommended recording length is 30 seconds but it can be set higher up to 5 minutes.

Alarm Out: Optional function. If your DVR support to connect to external alarm device, you can set to emit an alarm tone.

Latch Time: To configure the external alarm time when motion is detected.

Show Message: Check the box to display “M” icon on the screen when the motion is detected.


Send Email: You can let the DVR to send you an auto-email when the motion is detected.

Full Screen: If this function is enabled and a motion is detected in a channel, you will see that channel in full screen.

Analog Channels/ IP Channels: Here you can select which channels you want to include to the motion detection. If the motion is detected, the recording will start immediately on those channels.

5.6.2 Alarm

This is an optional function. If the DVR you purchased doesn't support connect external sensor I/O alarm devices, you will not find this section in your DVR OSD menu.

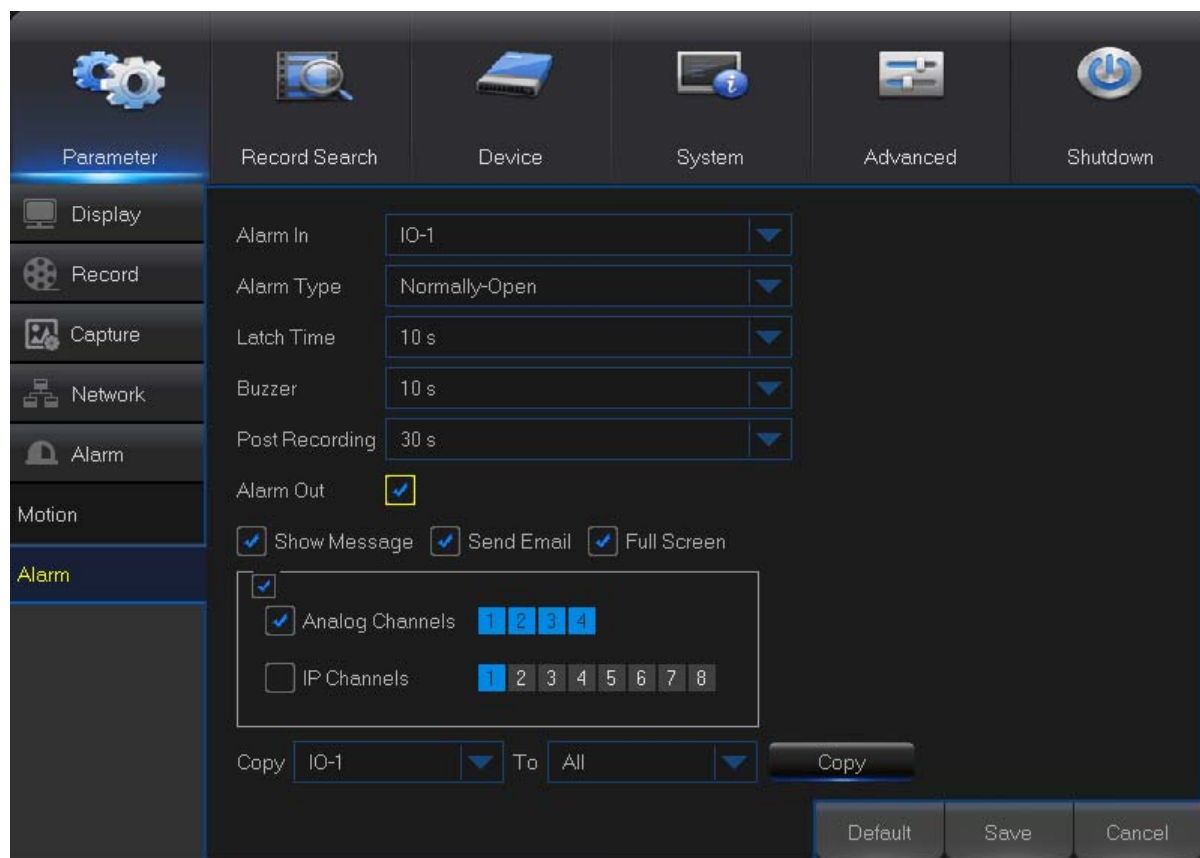

Alarm In: User may set four groups of alarm inputs

Alarm Type: There are 3 types for your choice: Normally-Open, Normally-Close, and OFF. Choose the one to match your sensor type, or Choose OFF to close the sensor trigger function.

Latch Time: you can set how long the buzzer will sound when external sensor is triggered (10s, 20s, 40s, and 60s).

Buzzer: The DVR can use its internal buzzer to emit an alarm tone. You can set the buzzer duration in seconds when a sensor is triggered.

Post Recording: You can set how long alarm record will last when alarm ends (30s, 1minutes, 2minutes, 5minutes).

Alarm out: Tick to enable external alarm device to emit an alarm tone when a sensor is triggered.

Show Message: Display the alarm messages on the screen when sensor is triggered.


Send Email: Set to send email to specified email when sensor is triggered.

Full Screen: When sensor is triggered, the corresponding channel will be switched to the full screen mode.

Analog Channels/ IP Channels: Select which channels you want to record when sensor is triggered.

5.6.3 PTZ Linkage

If you had connect the PTZ cameras, you can set the linkage between PTZ cameras and Motion Alarm and/or external I/O sensor alarm. With the linkage function, you can turn your PTZ cameras focus to the preset point when a motion or I/O alarm happens.

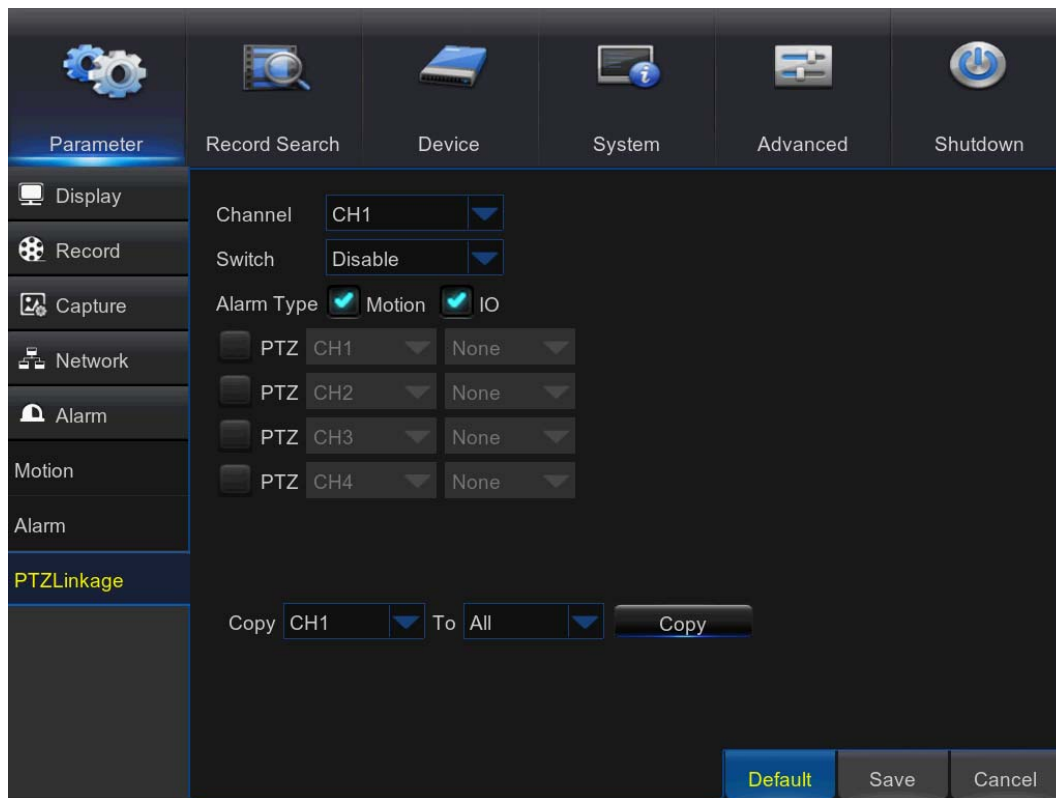

Channel: Select the channel to set.

Switch: Enable or disable the PTZ linkage function.


Alarm Type: Choose what kind of alarm will trigger the PTZ linkage function.

PTZ: Associates the PTZ camera with preset points. View preset point at [5.8.3.1 PTZ control](#)

5.7 Record Search& Backup

This section allows you to search and playback the recorded videos based on recording type, channel, date and time parameters. You can also view and backup events and captured images.

5.7.1 General

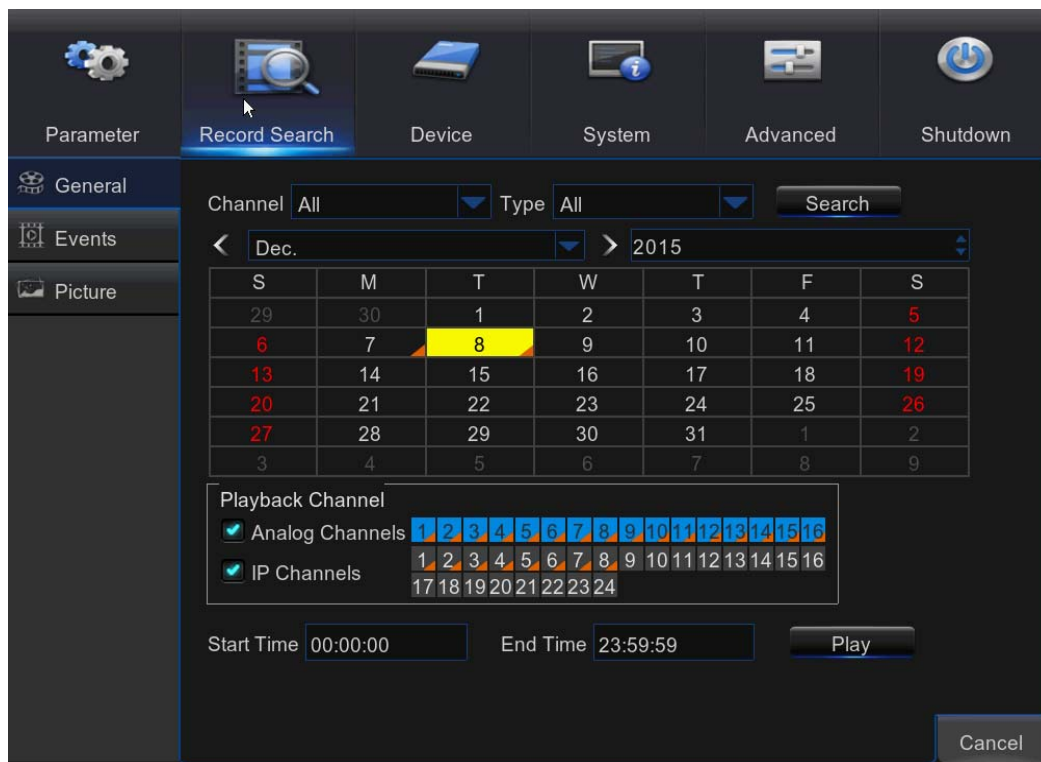

1) Select the channel & the recording type (**All / Normal / Alarm (including preset point& IO) / Motion / IO / Manual**).

2) Determine the recording date.

3) Click **Search**.

4) Select the recording from the table.

NOTE: Dates marked with orange triangles have video recordings.

5) Select the channels you want to playback.

6) Modify the start time and end time if necessary and then click **Play**.

Enter the playback interface, to view [5.7.4 Playback Video Recordings](#)

[illegible]


-

Note: Please make sure you have inserted your USB flash device to the DVR USB port before you want to make backup.

- 8) If you want to **Lock** the recoding files, tick the checkbox after the files. The locked files will be protected and unable to be overwritten if you had enable the HDD Overwrite function.

5.7.3 Picture


This section is used to view the captured pictures and make backup.

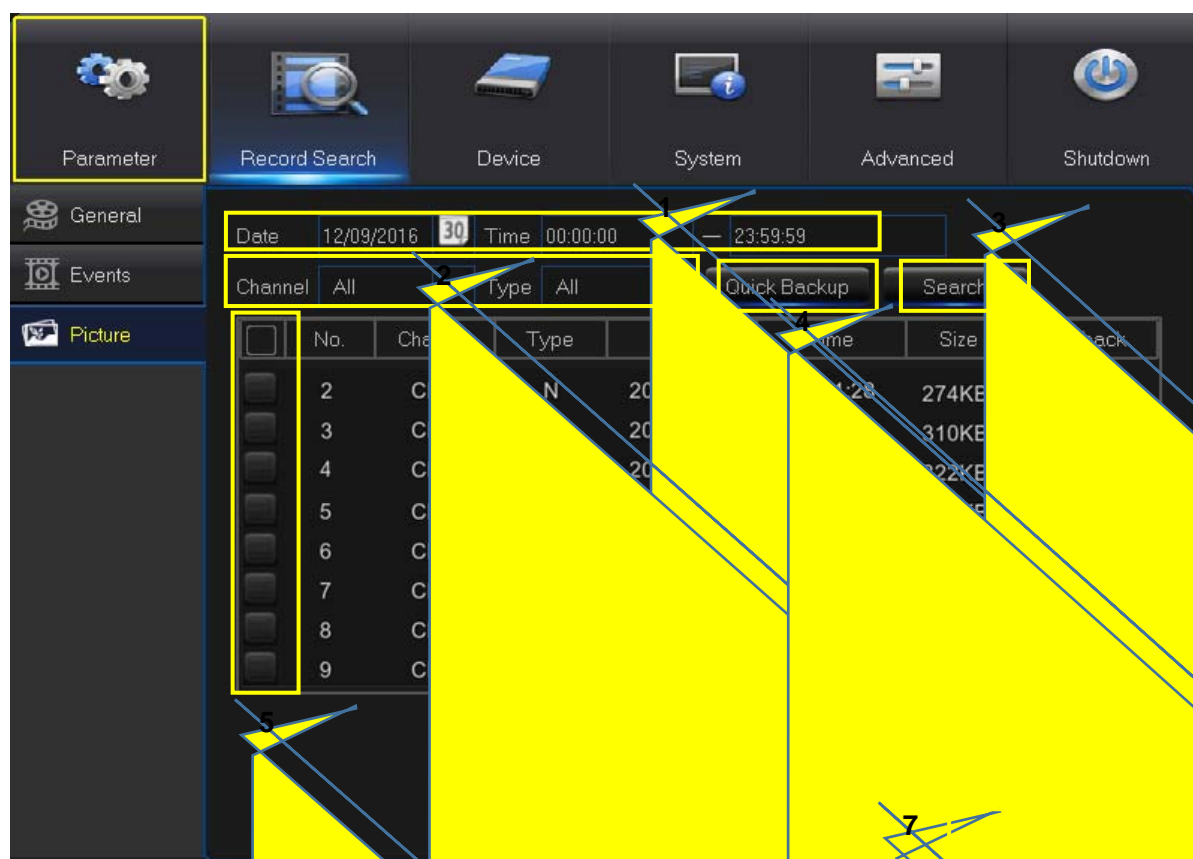

- 1) Select the record
- 2) Select the **Chan**
- 3) Click **Search**.
- 4) If you want to m
- 5) If you want to m
- 6) If you want to m
- 7) After selecting a

Note: Due to the sy

If you want to view a captured picture, please double click a picture from the list, the system view turn to picture play mode. Right click your mouse to exit the play mode.

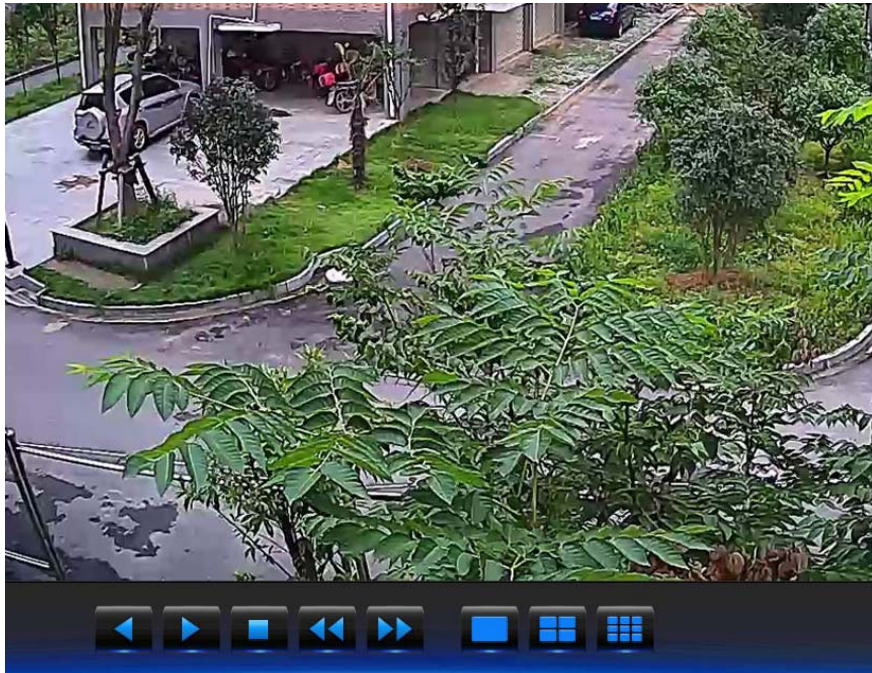

◀ Backward Play, click again to pause

▶ Forward Play, click again to pause

◀◀ Move to previous page

▶▶ Move to next page

■ Single picture display

■ Quad pictures display

■ Nine pictures display

5.7.4 Playback Video Recordings



- Recording Calendar:** Dates marked with orange triangles have recordings.
- Playback Type:** Select the playback type among **General**, **Events**, **Picture** & **Sub-periods**
- Channels:** Check the channels to playback.
- Playback Control Bar**



	Full Screen
	Fast Rewind: x2, x4, x8 and x16
	Slow Play: 1/2, 1/4 and 1/8 speed
	Play & Pause
	Pause, Play frame by frame
	Stop


	Fast Forward, x2, x4, x8 and x16
	Digital Zoom: Click to zoom in
	Trim Video: view 5.7.4.2 Trim Video
	 Volume Control: Slide the slider bar to increase or decrease volume. Click to mute audio.


- Time Bar:** The color indicates the video recording type:
 - Motion recording (**Yellow**)
 - Smart recording (**Dark Green**)
 - Normal recording (**Green**)
 - I/O sensor recording (**Blue**)
 - Alarm recording (**Red**)
- Time Frame:** Select Playback timeline. View [5.7.4.3 Time Frame](#)
- Smart Search:** Please see more in [5.7.4.1 Smart Search](#)
- Recording Type Indicator:** Motion, Smart, Normal, IO & Alarm.
- Recording Playback Screen:** Video recordings from selected channels.


5.7.4.1 Smart Search


Use this function to find motion of a specific area inside recording. It supports to search a single channel every time.

1. Select a channel to playback in full screen.
2. Click the smart search icon , the system will enlarge the channel into full screen and display the smart search quick toolbar. You can move the toolbar by dragging the  icon.

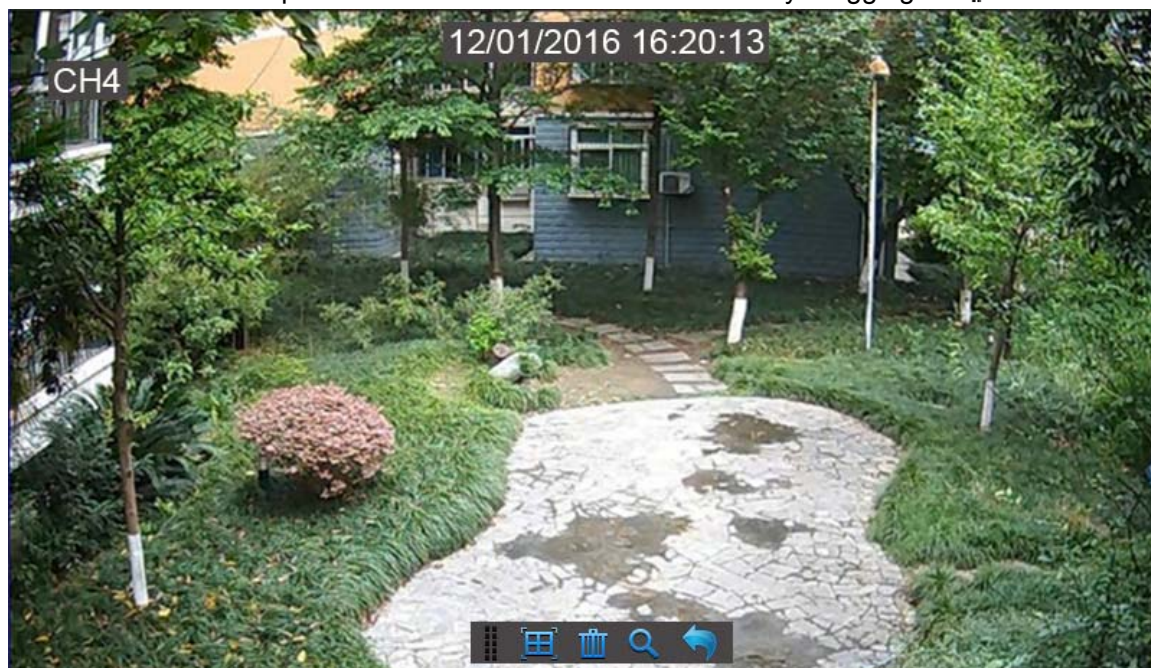


3. Use the cursor to mark the area on the channel where you want to find motion or click  to search motion all over the screen.

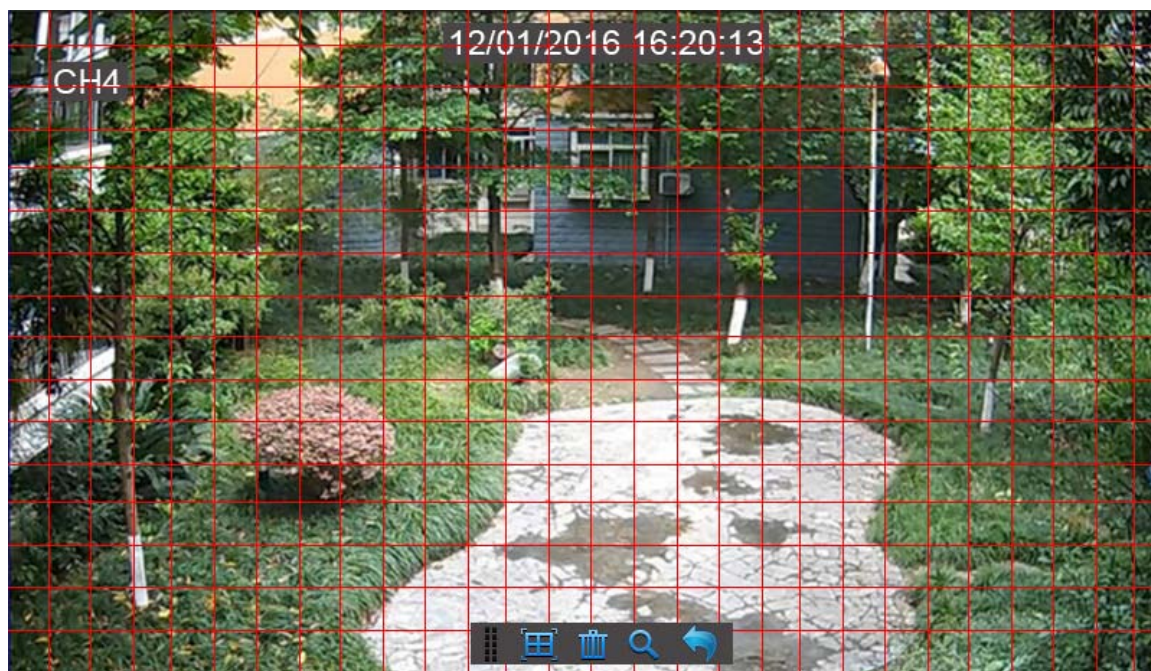

4. Click  to start search.
5. As a result of Smart Search, you will see the motion based recording(s) on the channel Time Bar marked with **Dark Green** lines.


5.7.4.2 Trim Video

Use this function if you need to backup just a certain section of the video recording.


- 1) Connect a USB flash drive to the DVR.
- 2) Double-click on the channel (to display in full screen during video playback) that you wish to backup.
- 3) Click on the Time Bar to mark the beginning of the video footage you wish to backup.
- 4) Click  to start selecting the footage.




- 5) Click on the Time Bar to mark the end of the video footage you wish to backup. The marked up area is now displayed within the red arrows.

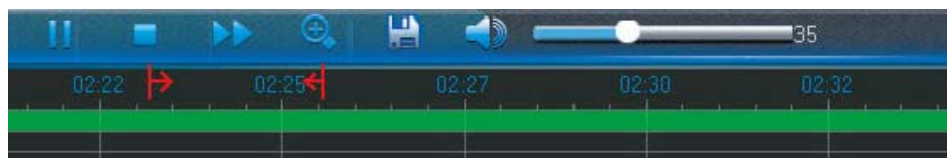

- 6) Click  to save the footage.

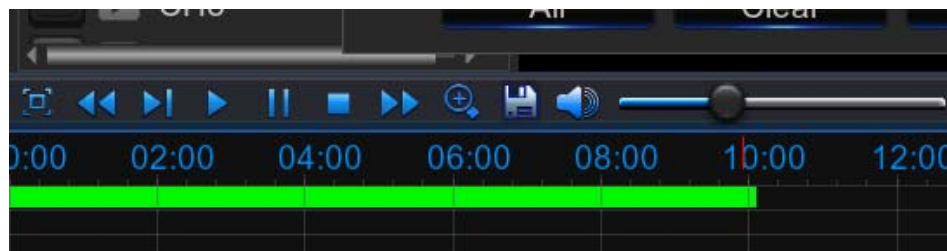

- 7) A video type selection message appears. Select the file format and click **Save**.

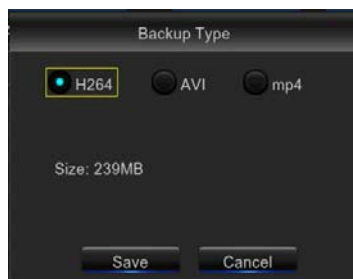


5.7.4.3 Time Frame

During video playback, the time bar is displayed in 24 Hours (00:00~24:00) by default.



You can shorten the time bar to be displayed in 2 Hours, 1 Hour or 30 Minutes in order to make an accurate position to the time bar.

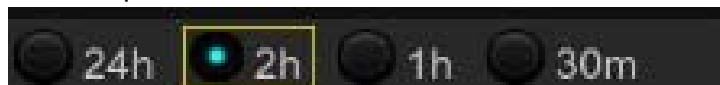


5.7.4.4 Sub-periods Playback

This function will allow you to divide a recording video into average separate segments and play together in the same screen.

- 1) In the video playback interface, choose **Sub-periods** from **Playback Type** section.
- 2) Select a channel you want to play.
- 3) Choose the Split Screens. If you have a 4 Channel DVR, the max. split screens will be 4. And 8 for 8 Channel DVR as well 16 for 16 Channel DVR.


For example, if the video you want to play is 60 minutes in length, and the split screen is 4, the video will be divided in to 4 segments, and each segment will be 15 minutes in length. All the 4 segments will be played in the same screen.

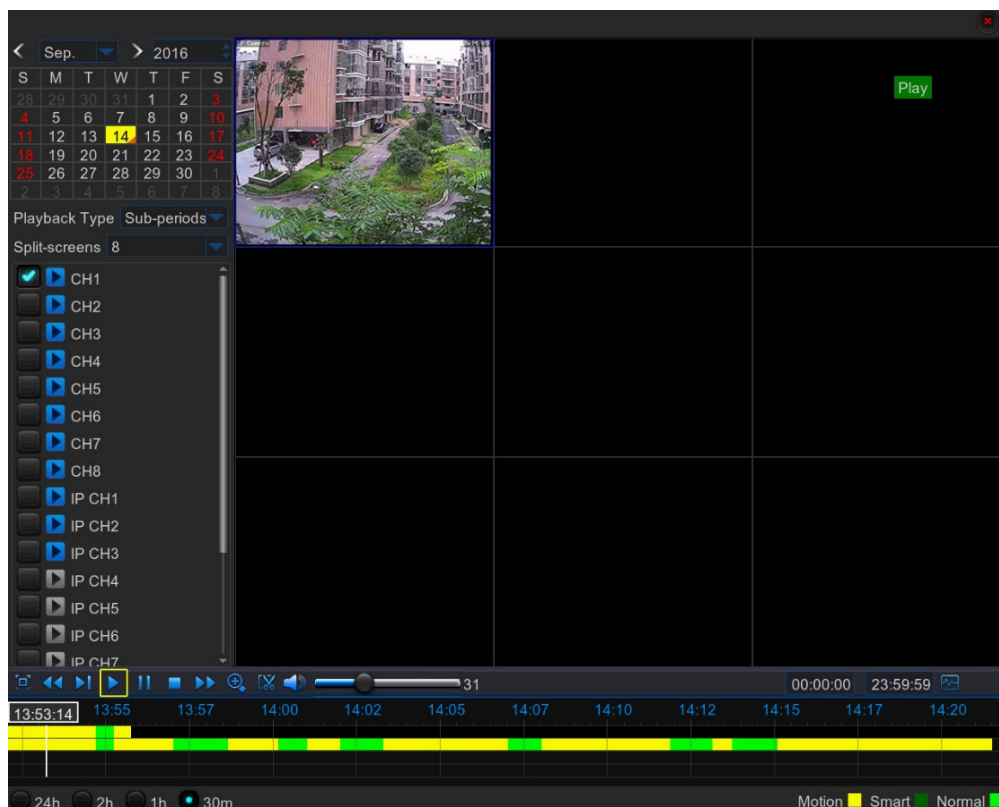


5.7.5 Play Backup Files

This section will help you to play the backup files.



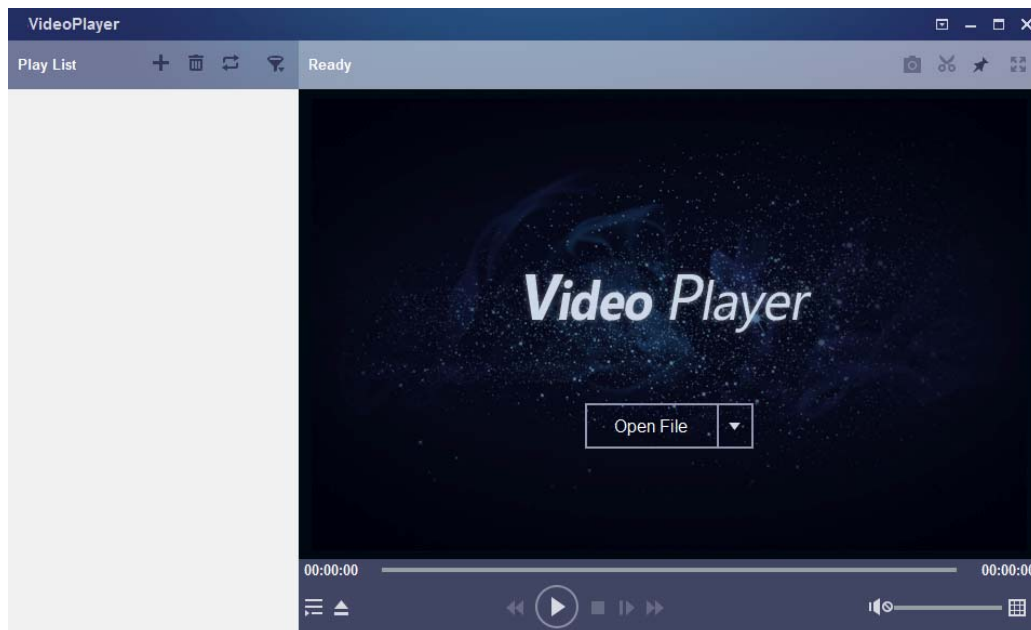



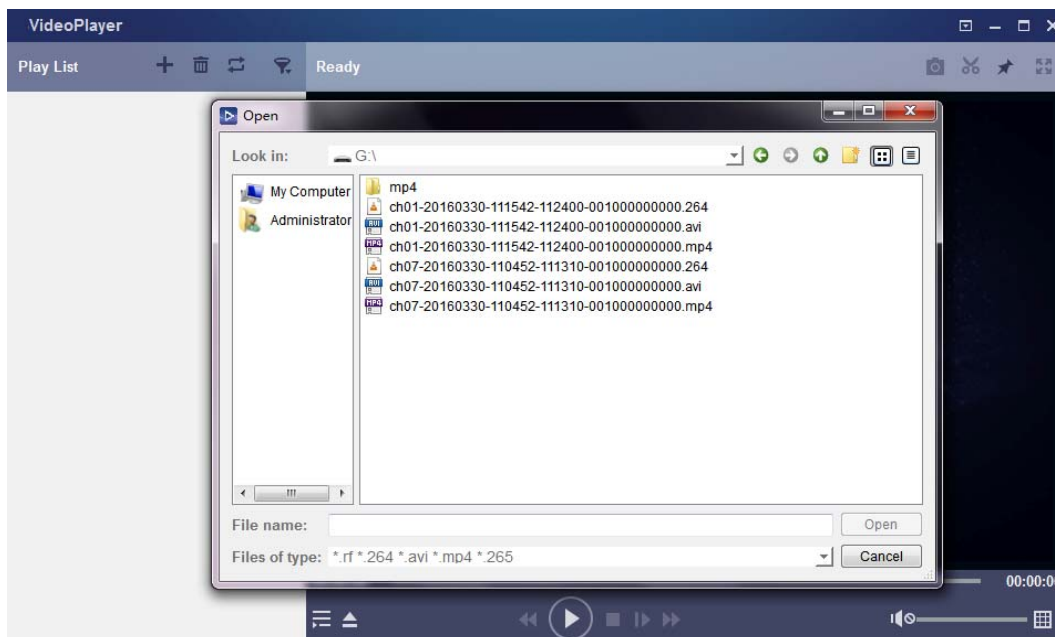















- 1) Install the Video_Player software in the CD and run.




- 2) Copy the backup files to your computer.
- 3) Click “+” or “Open File” button to add files. It supports to play rf, avi, mp4, 264 & 265 files.




Function Description:

-  Play: Click to play file
-  Pause: Click to pause.
-  Stop: Click to stop playback.
-  Frame Forward: step forward by frame
-  Slow forward: Click to play at 8x,4x,2x,1x,1/2,1/4,1/8,1/16 speed.
-  Fast forward: Click to play at 16x,8x,4x,2x,1x,1/2x,1/4x,1/8x speed
-  Open file/Open Directory
-  Expand/pack up the list.
-  Screenshot: Save path: C:\Users\Administrator\VideoPlayer\picture
-  Cut: Save path: C:\Users\Administrator\VideoPlayer\video
-  Full screen display
-  Never on top
-  Always on top
-  On top during playing
-  Adjust volume
-  Window Division
-  1/4/9/16 channels optional.
-  Add folder or file.
-  Playback mode, Single, Order, Repeat one, Repeat ALL are optional
-  Delete all files in the list.
-  Search File
-  Language/Settings

Basic Settings: Set on-top mode

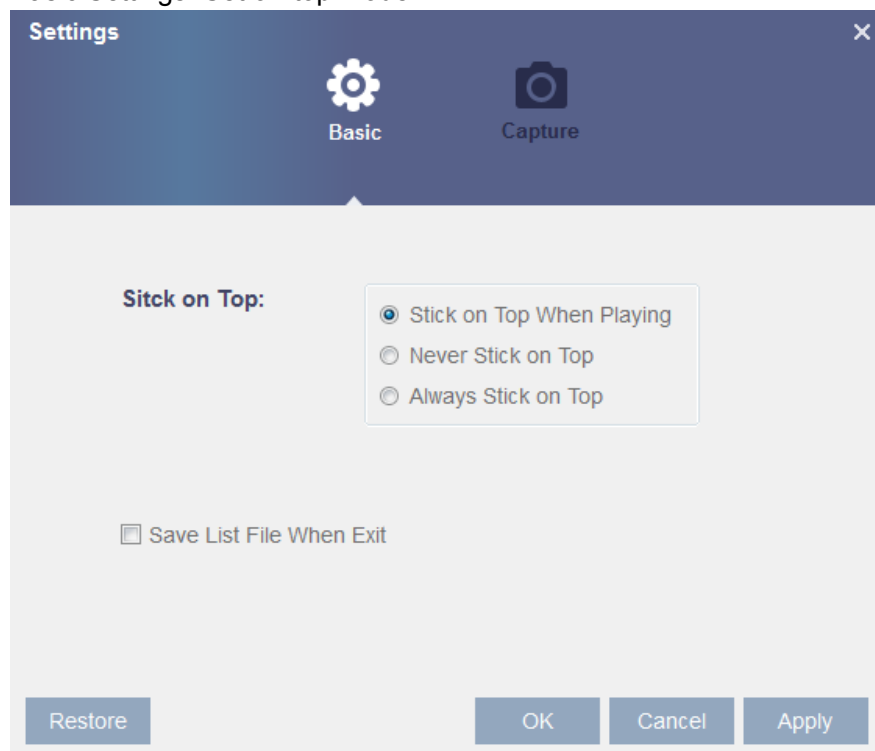

Capture Settings: Set the path to save images

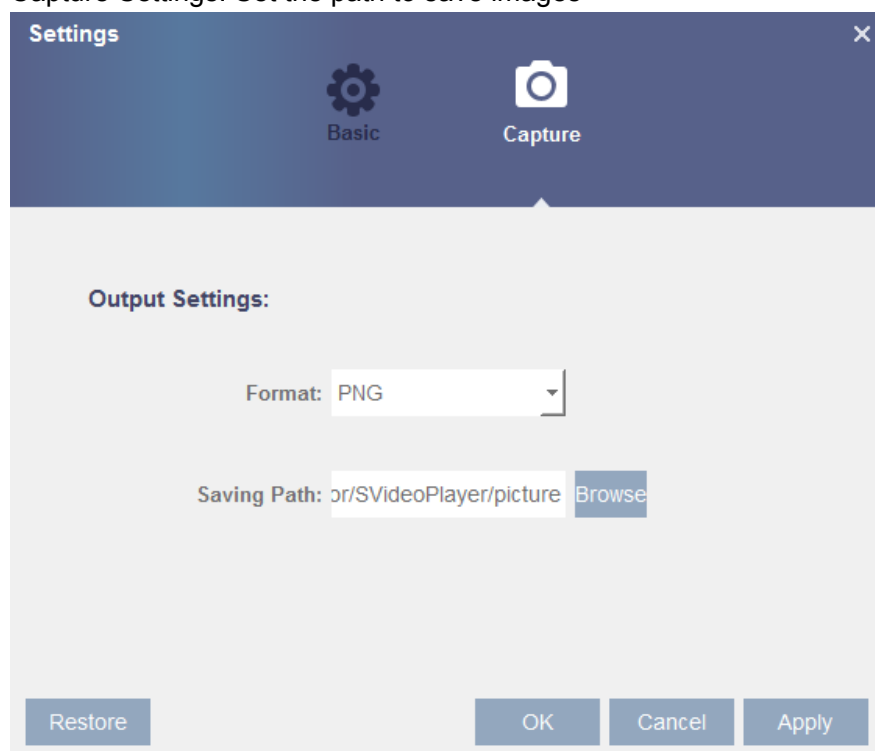


5.8 Device

In this section, you can configure the internal HDD, PTZ setup & Cloud storage.

5.8.1 HDD

This menu allows you to check & configure the internal HDD that the DVR uses for saving the recordings. You need to format the HDD only at the first startup and if you replace the HDD.

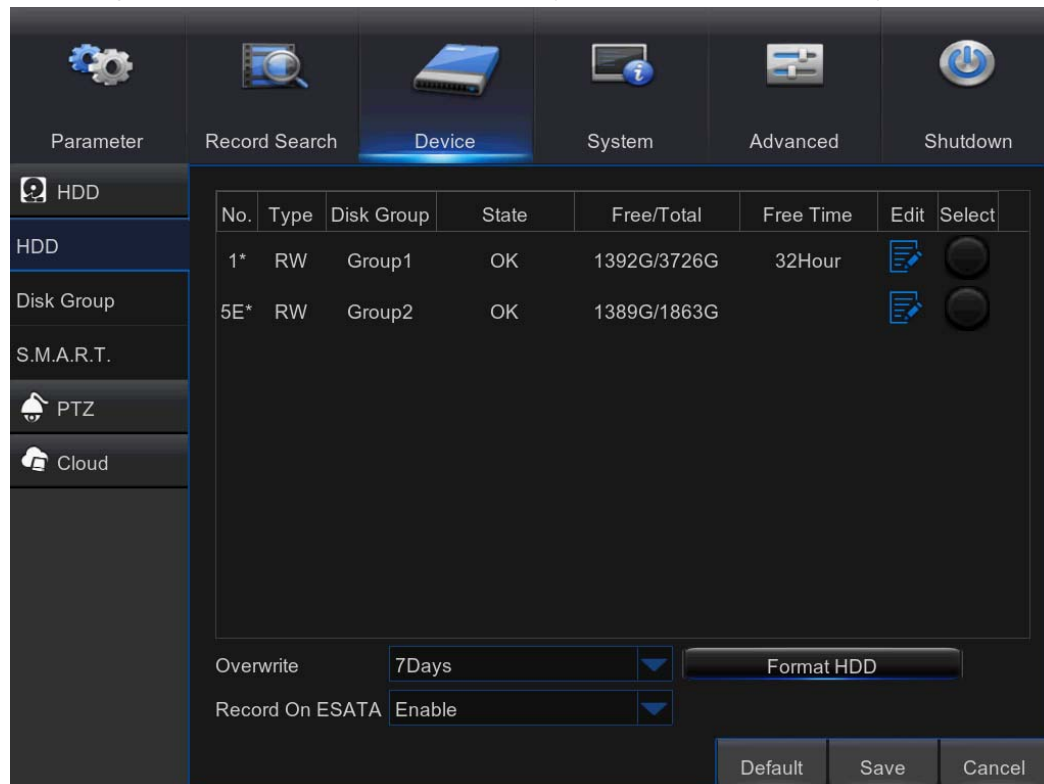

Format HDD: Select the HDD you want to format and then click **Format HDD**. To start formatting, you need to enter your user name and password and then click **OK** to confirm to continue formatting.


Overwrite: Use this option to overwrite the old recordings on the HDD when the HDD is full. For example, if you choose the option 7 days then only the last 7 days recordings are kept on the HDD. To prevent overwriting any old recordings, select **Disable**. If you have disabled this function, please check the HDD status regularly, to make sure the HDD is not full. Recording will be stopped if HDD is full.

Record on ESATA: This menu only displayed when your DVR is coming with an e-SATA port on the rear panel. It will allow to record the video to external e-SATA HDD to enhance your HDD capacity.

Note: If the eSATA recording function is enabled, eSATA backup function will be disabled.

5.8.2 S.M.A.R.T

This function will help to check the HDD health. Please note that due to the system limitation, your DVR may not have this function.

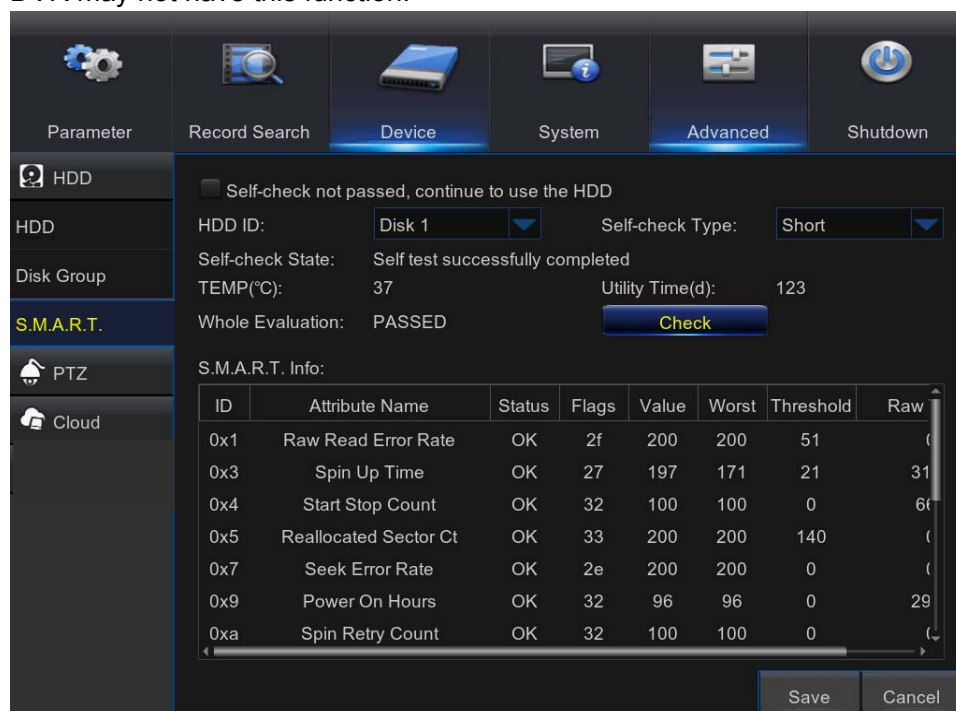


If you want to continue to use the HDD if S.M.A.R.T self-check find an exception, tick the item **"Self-check not passed, continue to use the HDD"**.

Select "HDD ID", select "Self-check Type", click **Check** to start the test. Self-check State will display the result.

Note: If an HDD S.M.A.R.T error is found, the HDD can be continued to use, but there will be a risk to lose video recording. It is recommended to replace by a new HDD.

5.8.3 PTZ Setup & Control

This menu allows you to configure the PTZ (Pan-Tilt-Zoom) settings for the dome camera.

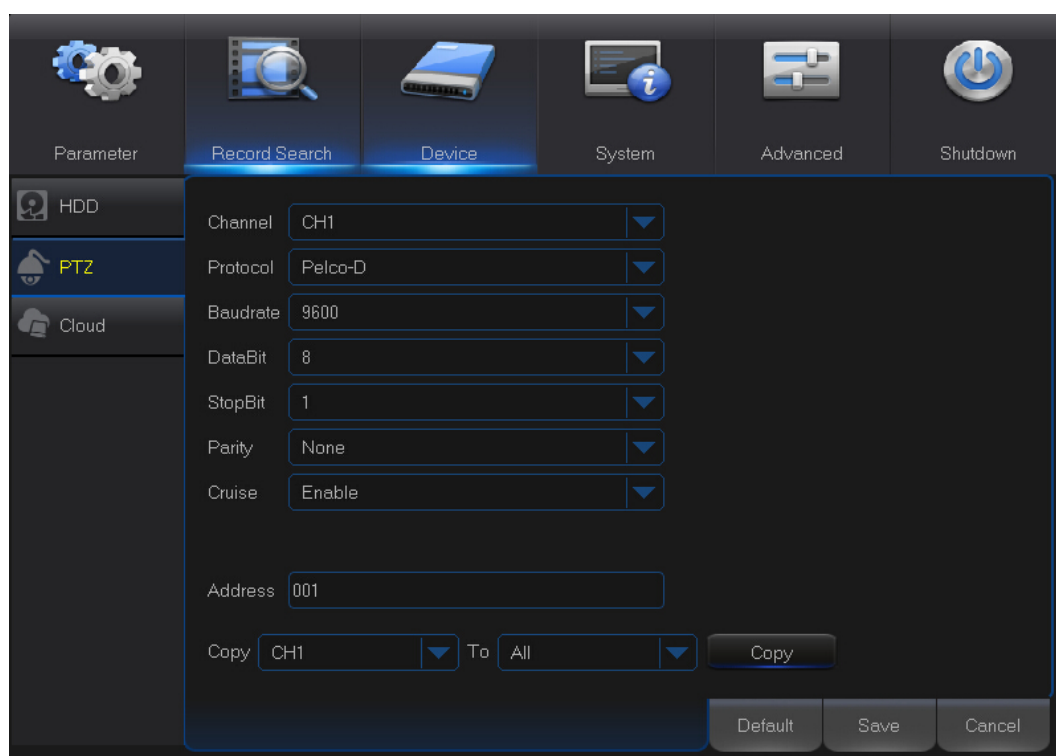

Channel: Choose a channel where is connected a dome camera.

Protocol: Choose the communication protocol between the PTZ capable camera and DVR. If your camera support UTC (Up the Coax) function, you can choose COAX1 or 2 to display your camera OSD menu or control the UTC PTZ function.

Baudrate: The speed of the information sent from the DVR to the PTZ-capable camera. Make sure it matches the compatibility level of your PTZ-capable camera.

DataBit / StopBit: The information between the DVR and PTZ-capable camera is sent in individual packages. The **DataBit** indicates the number of bits sent, while the **EndBit** indicates the end of the package and the beginning of the next (information) package. The available parameters for **DataBit** are: **8, 7, 6, 5**. the available parameters for the **StopBit** are **1** or **2**.


Parity: For error check. See the documentation of your PTZ-capable camera, to configure this setting.

Cruise: Enable to allow to use the Cruise mode. In order to use the Cruise mode, you need to set a number of preset points.

Address: Set the command address of the PTZ system. Please be noted that each PTZ-capable camera needs a unique address to function properly


5.8.3.1 PTZ control







After finishing the PTZ setup, you can use the PTZ function to control your PTZ camera.

- 1) Left click your mouse upon a channel on Live Viewing screen to open Camera Quick Toolbar, and click the PTZ control icon .

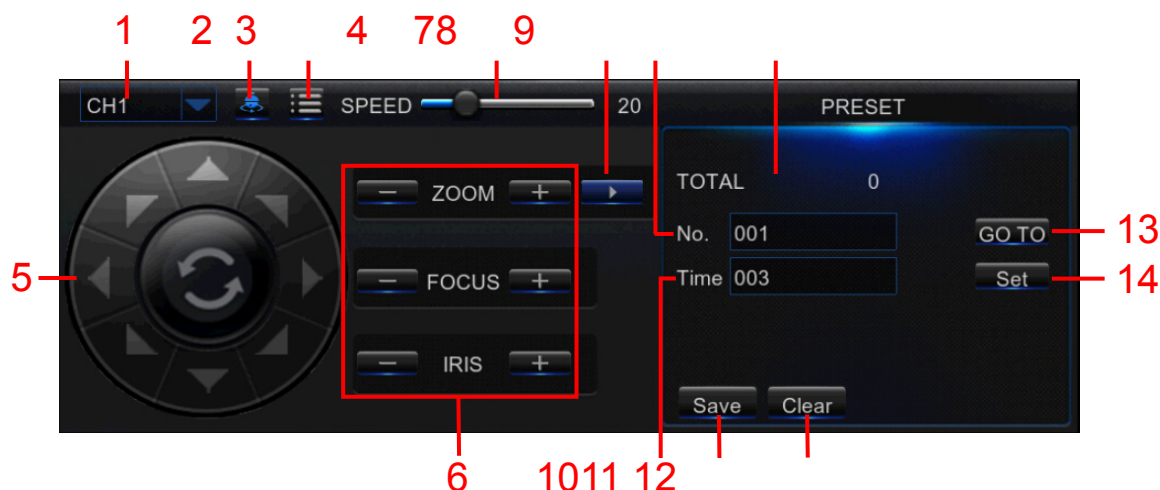

- 2) PTZ control panel will be displayed. Click  to active PRESET points setup page.



No.	Icon	Item	Description
1		Channel	Click to select the channel of the PTZ camera.
2		Cruise	Start / stop PTZ cruise by preset points. Make sure you had enable the Cruise function for this channel in 5.8.3 PTZ Setup
3		UTC Menu	If you have choose protocol for this channel as COAX1 or COAX2, the UTC menu button will be display. Click this icon to enter UTC OSD menu. Also used to confirm your selection in the UTC OSD menu.
4	Speed	Speed	Adjust the PTZ speed
5		Pointer Panel	A) Click the direction arrow to select the direction of the PTZ camera B) Click up/down/left/right arrow to move cursor in UTC OSD menu C) Click  to switch to auto pan mode
6	- ZOOM + - FOCUS + - IRIS +	Zoom Focus Iris	Click to zoom in/out. Click to adjust the focus Click to adjust the iris setting
7		PRESET	To display or hide the preset point panel
8	No.	No.	Number of preset point
9	Total	Total	Display the total number of preset points
10	Time	Time	Set the time how long the camera will stay in the preset point
11	Save	Save	Click to save the settings and preset points
12	Clear	Clear	Click to delete the selected preset point
13	GO_TO	Go to	Enter the number of a specific preset point, click this button to move your PTZ camera to the preset point
14	Set	Set	Click to set a specific preset point on a PTZ camera.

			You can add up to 255 preset points for the DVR. However, the actual preset quantity varies depending on the PTZ camera performance.
--	--	--	--

5.8.4 Cloud Storage

This menu allows you to see what is happening on your camera site anytime, anywhere through the Internet. Uploading the snapshots can be based on a time interval or a motion is detected.

The screenshot shows the 'Device' configuration menu. On the left, there is a sidebar with icons for 'Parameter', 'Record Search', 'Device' (selected), 'System', 'Advanced', and 'Shutdown'. Below these are icons for 'HDD', 'PTZ', and 'Cloud' (selected). The main area contains the following settings:

- Cloud Storage:** A dropdown menu set to 'Enable'.
- Cloud Type:** A dropdown menu set to 'DROPBOX'.
- Channel:** A section with two rows of checkboxes and numbers:
 - Analog Channels:** 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
 - IP Channels:** 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24
- Time trigger:** A dropdown menu set to '1 Min'.
- Motion Detection:** A dropdown menu set to 'Disable'.
- Driver Name:** A text field containing 'Device'.

At the bottom of the main area, there are three buttons: 'Activate Cloud', 'Advanced E-mail Setup', and 'Upgrade Cloud Storage'. At the very bottom right, there are three buttons: 'Default', 'Save', and 'Cancel'.

Cloud Storage: Enable to allow cloud settings

Cloud Type: Only Dropbox cloud storage is supported currently

Channel: Select the channels where you want to upload the snapshots to Dropbox


Time trigger: Set the image uploading interval. Set **OFF** if you want to use motion based uploading

Motion Detection: Enable if you want to upload snapshots to Dropbox when the camera detects a motion

Drive Name: Enter the cloud storage name for your DVR

Activate Cloud: Click to activate the function. An activation email will be sent to the Receiver email account

Advanced E-mail Setup: Click to configure your email settings

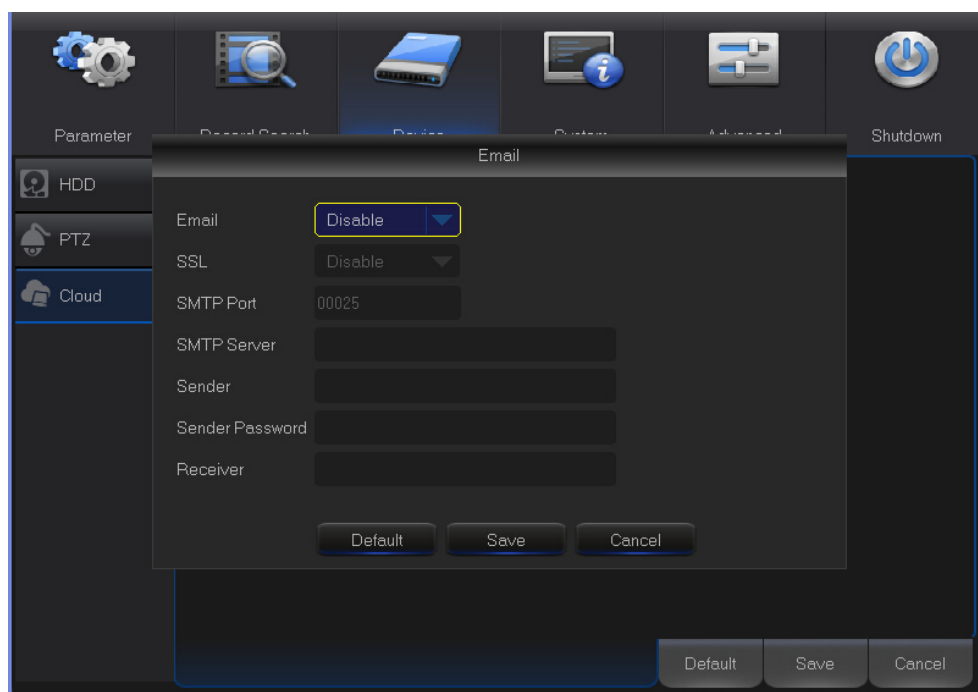

Upgrade Cloud Storage: Click to upgrade the current cloud storage service

Process to start uploading the snapshots

- 1) Enable **Cloud Storage** and configure Cloud settings for channel(s).
- 2) Configure advanced e-mail settings in **Advanced E-mail Setup**.
- 3) Click **Activate Cloud** and wait for the verification email.
- 4) Click **Activate Cloud in Dropbox** link on verification email.

NOTE: Make sure to check your email and follow the link to complete cloud storage activation within 3 minutes.


- 5) Enter your Dropbox account credentials.

Setting up the Cloud service is now complete. If you encountered any problems while activating the Cloud service, please repeat steps from 3 to 5.

5.9 System

You are able to configure general parameters of the system, such as date and time, OSD language, menu timeouts, DST, NTP, User Management, check system information & system log here.

5.9.1 General

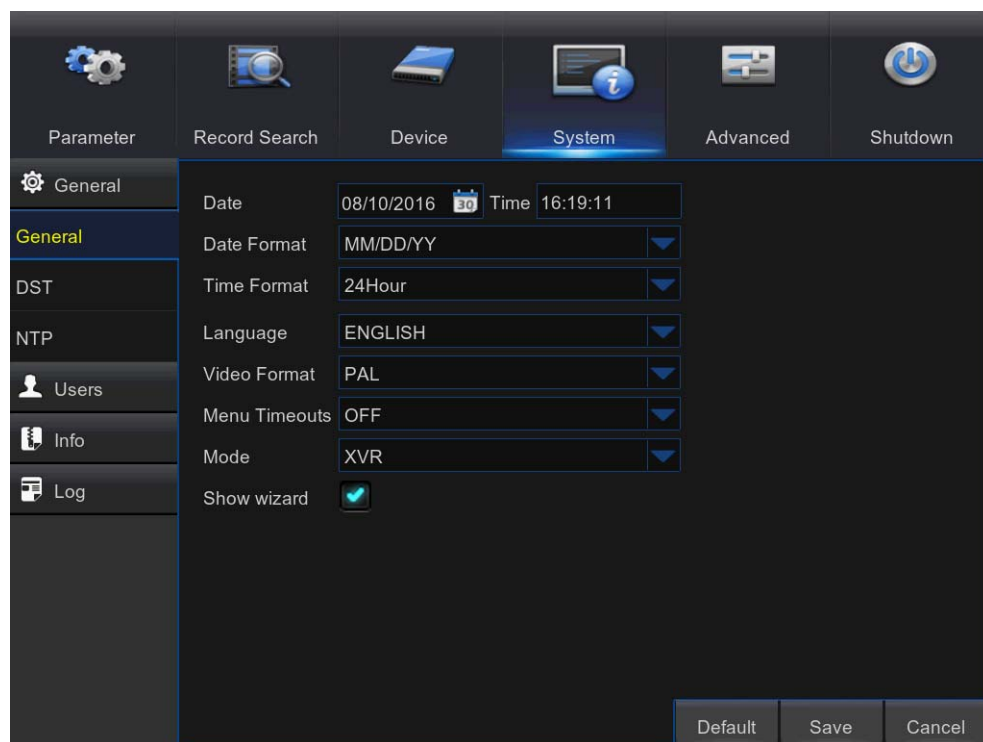

Date/Time: Enter the date and time manually.

NOTE: For date/time automation over the Internet, enable NTP.

Date Format: Set the date format here.

Time Format: Set the time format here.

Language: Choose the OSD language.

Video Format: Choose the video format between NTSC and PAL. If the DVR's picture is flickering or has only black screen, it may be that the video format is not correct.

Menu Timeouts: Set the time out the DVR will exit the menus when they are not in use.

Mode: XVR or DVR. XVR model will allow you to add IP Cameras to the DVR. DVR mode will focus on basic analog cameras.


Note: If Mode changed from XVR to DVR, all added IP cameras will be deleted.

Show Wizard: Check if you want the Startup Wizard to reappear each time you start up the DVR.

Note: After Mode switch to DVR, all IPC information will be hidden and automatically restored to factory settings.

5.9.2 DST

DST stands for Daylight Savings Time.

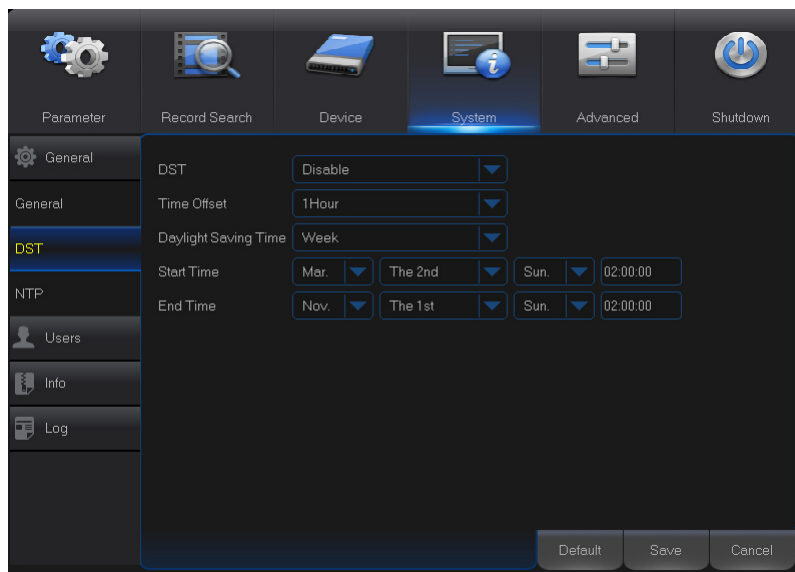

DST: Enable if Daylight Saving Time (DST) is observed in your region


Time Offset: Select the amount of time to offset for DST

Daylight Saving Time: Choose to set the daylight saving time in weeks or in days

Start Time/End Time: Set the start time and end time for daylight saving

5.9.3 NTP

NTP stands for Network Time Protocol. This feature allows you to synchronize the date and time automatically on the DVR over Internet. Therefore the DVR needs to be connected to the Internet.

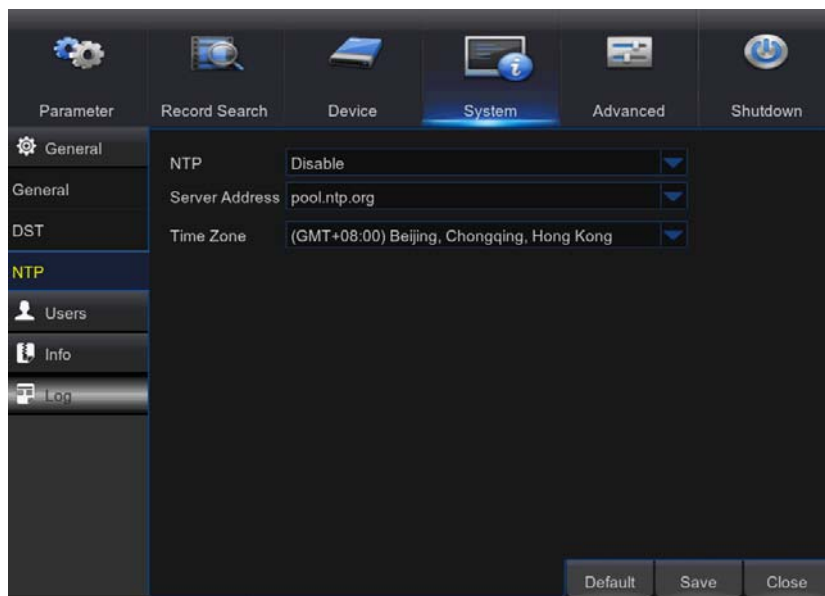

NTP: Enable if you want the DVR to update the date and time automatically.

Server Address: Select the NTP (Network Time Protocol) server.


Time Zone: Select the Time Zone in your location.

Update Time: Click here to update the system date and time immediately.

Note: When NTP function is enabled, system will update the system time at 00:07:50 every day, or every time when the system is started up.

5.9.4 Users

This menu allows you to configure the user login information.

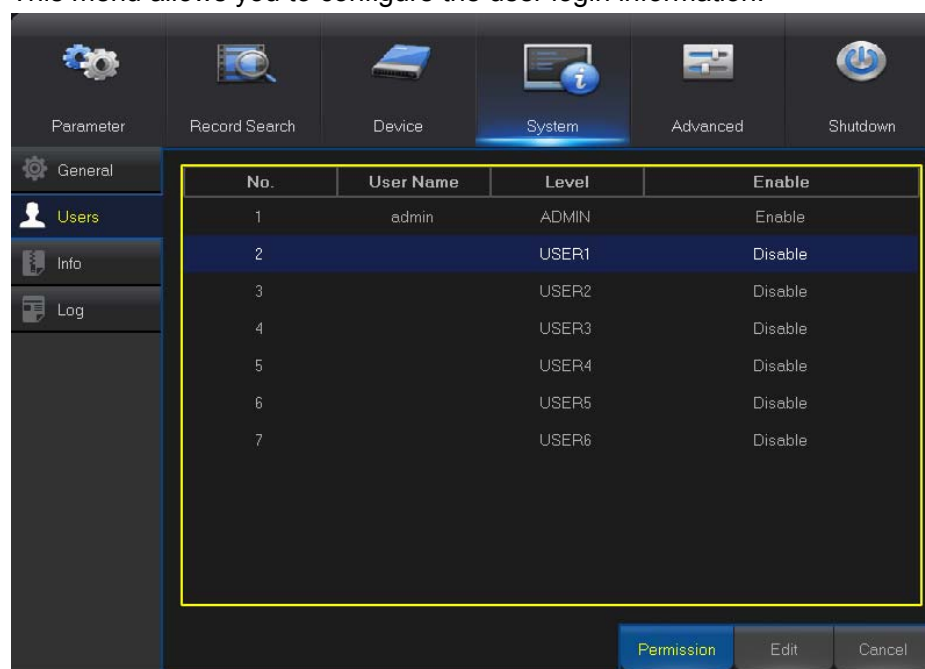


Edit: To enable/disable the user account, modify the user name and password, click on the user account you wish to edit, then click **Edit**.

The 'User Edit' dialog box contains the following fields and controls:

- User Name:** A text field with the value 'test1'.
- User Enable:** A dropdown menu currently set to 'Enable'.
- Password Enable:** A dropdown menu currently set to 'Enable'.
- Password:** A text field with masked characters (dots).
- Confirm:** A text field with masked characters (dots).
- Buttons:** 'Default', 'Save', and 'Cancel' at the bottom.

Permission: To modify user access permissions, click on the user account you wish to modify, then click **Permission**. The user in Admin level has all permissions to the system. After modify the permissions, click **Save** to save the modifications.

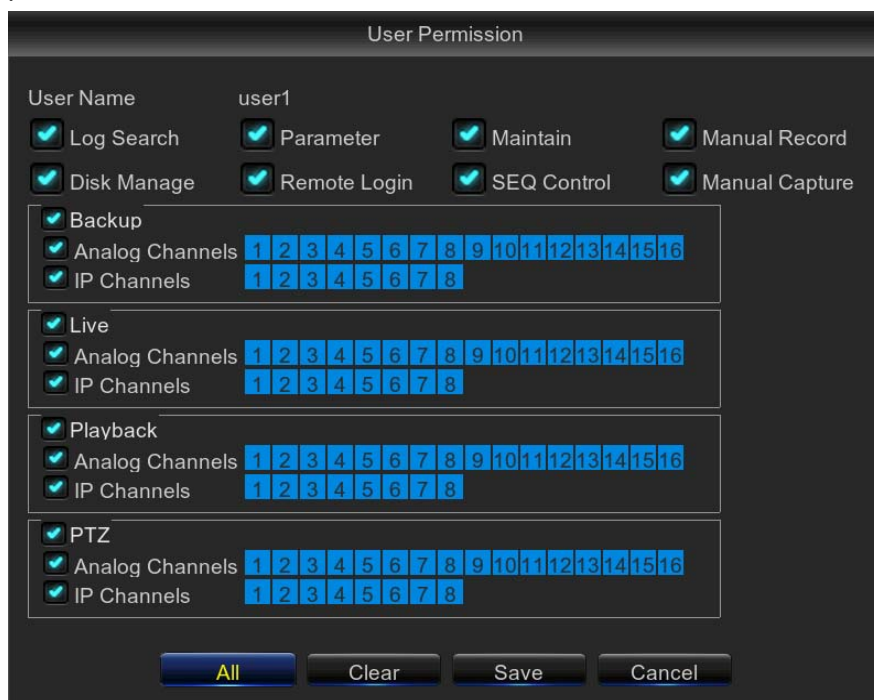

The 'User Permission' window shows settings for 'user1'. It includes checkboxes for various permissions: Log Search, Parameter, Maintain, Manual Record, Disk Manage, Remote Login, SEQ Control, Manual Capture, Backup, Live, Playback, and PTZ. Each of these categories has sub-options for Analog Channels (1-16) and IP Channels (1-8). At the bottom are buttons for 'All', 'Clear', 'Save', and 'Cancel'.

5.9.5 Info

This menu allows you to view the summary of the system, channel information & record information



The 'System' menu is selected, showing a summary of system information. The left sidebar lists options: General, Users, Info, Channel Info, Record Info, and Log. The main area displays the following details:

Device ID	000000
Device Name	1080P-HY16N
Device Type	HY-DVR
Hardware Version	DM-299
Software Version	V7.1.0-20160805
IE Client Version	V2.0.0.289
IP Address	192.168.1.144
MAC Address	00-11-22-22-DD-8A
HDD Volume	3726G
Video Format	NTSC

A QR code is displayed on the right side of the information panel. At the bottom right are 'Save' and 'Cancel' buttons.

Device Name: Enter the desired name for your DVR. The name can include both letters and numbers.

Device ID: Enter the desired ID for your DVR. The device ID is used to identify the DVR, and can only be composed of numbers, and cannot be the same with other IDs when multiple DVRs are connected in the same network.

MAC Address: Display the MAC address of the DVR. When multiple DVRs are connected to the same network, each DVR must have a unique MAC address to ensure that the DVR can connect to the network.


Note: If your DVR support P2P function, you will find a QR code in the info page. You can scan this QR cord with mobile app to remote access this DVR, view more on [Chapter 7 Remote Access via Mobiel Devices](#).

Channel Info: To view the information summary on the channels.

Record Info: To view the recording information summary by channel, record state, stream type, FPS, bitrate, and resolution.

5.9.6 Log

This menu allows you to view a list of events of system operation.

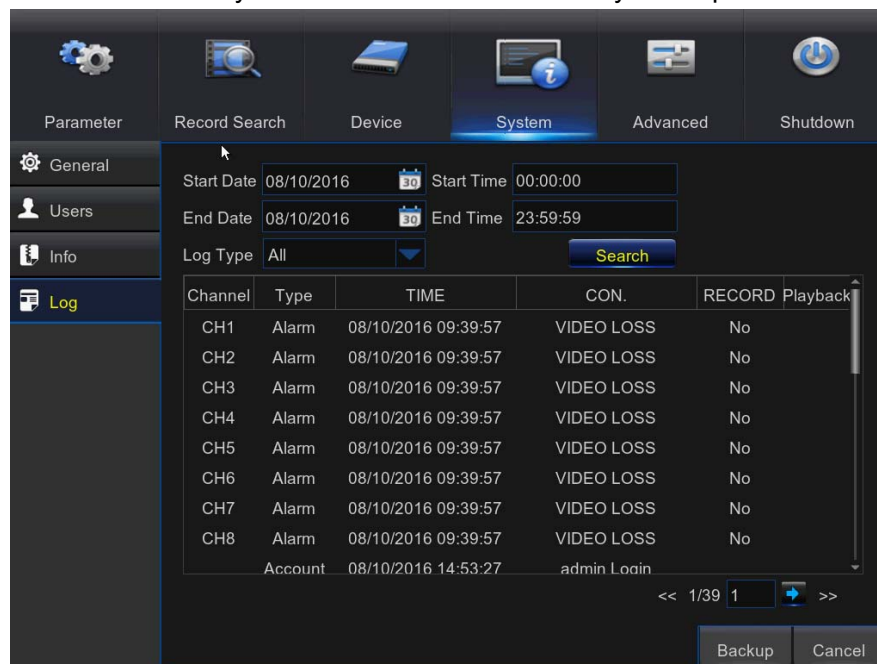

- To search for a log, enter the start time/end time to the respective fields and click **Search**.
- To display log details, double-click on the item.
- To backup a log entry, connect an external USB disk to the DVR, click on the log event and click

Backup.


Log Type: Select the log type.

Start Time/End Time: Specify the start and end date/time of the logs you want to review and/or save on an external USB storage device. Click **Search**. The logs will be listed on the table.

5.10 Advanced

This menu allows you to configure automatic system maintenance, load factory defaults, update the firmware settings, upgrade the IPC, etc.

5.10.1 Maintain

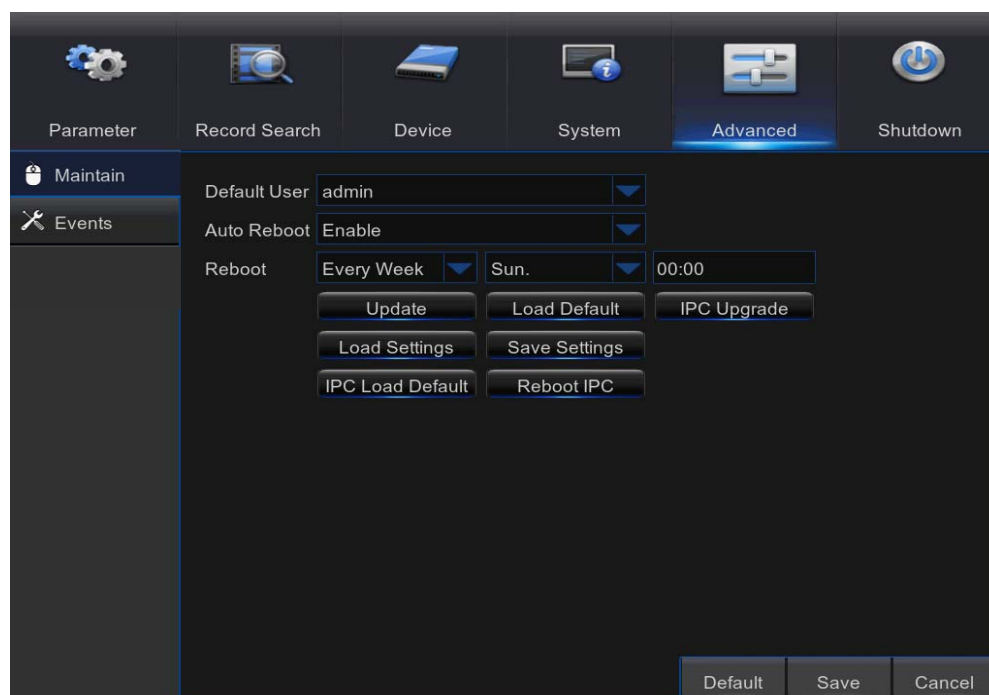

Default User: If you want to log in to the DVR automatically for live view after each startup, then only administrator user account can be set for auto login.

Auto Reboot: Set enable to reboot the DVR based on a schedule.

Reboot: Set the rebooting schedule based on day, week, or month.

Update: Click to load the update file and then upgrade the firmware. Please do NOT power off the DVR or remove the USB during the upgrading.

Load Settings: Select this option to import the setting that you have saved earlier, using the **Save Settings** function.

Load Default: Use this feature to restore the factory default settings of the DVR. It is recommended to load defaults for all options, after upgrading the firmware.

Save Settings: Select this option to save the DVR current settings, such as the video recording settings, network configurations, and etc. to the USB device.


IPC Load Default: Use this feature to restore the factory default settings of IP cameras.

Reboot IPC: To reboot IP cameras.

IPC Upgrade: To upgrade IP cameras firmware. Some IP cameras may not support this feature.

5.10.2 Events

This menu allows you to set the type of events that you want the DVR to inform you.

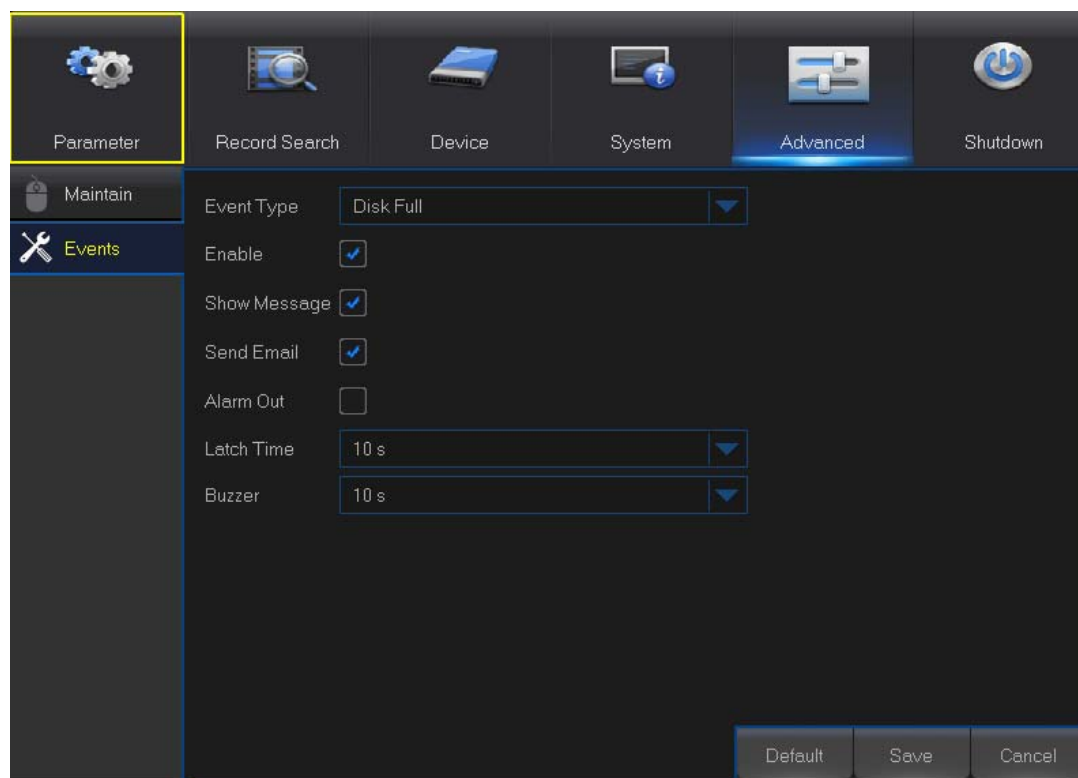

Event Type: Select the event type. Options are:

- **Disk Full:** When HDD is full.
- **Disk Error:** If HDD is not detected properly.
- **Video Loss:** If camera is not detected properly.

Enable: Check the box to enable the monitoring of the event.

Show Message: Check the box to display a message on the screen when Disk Full, Disk Error, or Video Loss event happens.

Send Email: Let the DVR to send you an auto-email when an event occurs.


Alarm Out: Click to enable the external alarm device to sound. This is an optional function.

Latch Time: Determine how long the external sensor alarm device to sound (10s, 20s, 40s, 60s).

Buzzer: Set the buzzer duration when the event occurs (Off/10s/20s/40s/60s). To disable buzzer, select **OFF**.

5.11 Shutdown

Manually turn off or reboot the DVR.

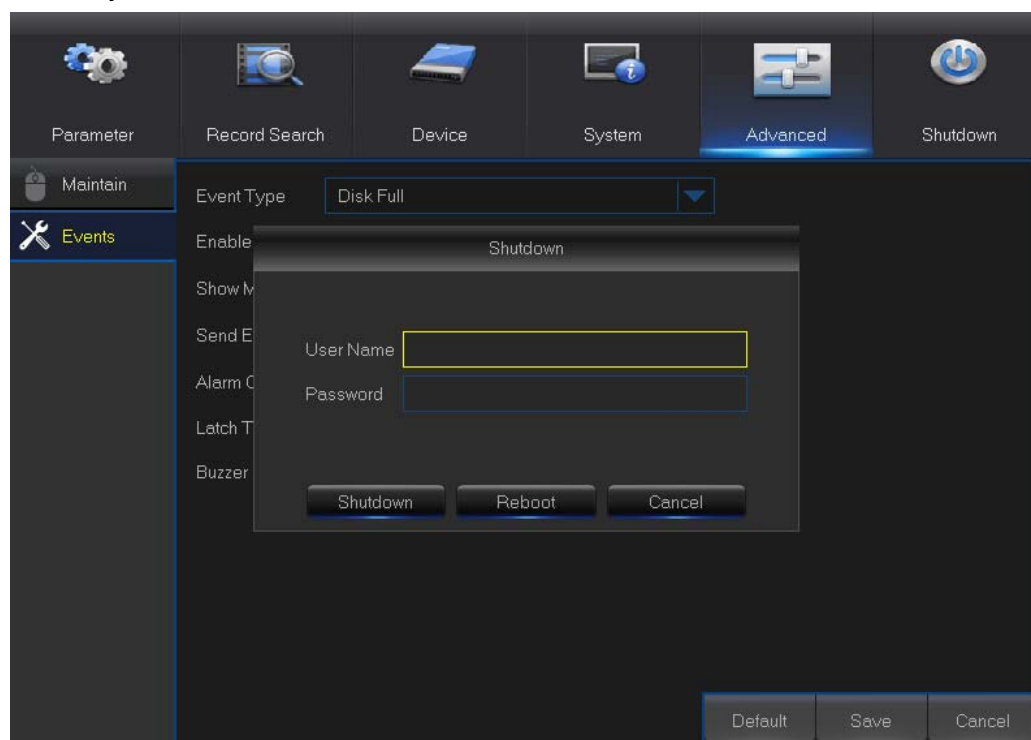

You will need to input your user name and password to complete the operation.

Chapter 6 Remote Access via Web Client

Use the Web Client to remotely access your DVR at any time via a PC. Before you access the Web Client, you need to ensure that the network settings of the DVR are configured properly. The most convenient and easiest way is if you have set the DVR a static IP address (please see “[5.5.1 Network](#)”). It means you only need to open the web browser on your PC and type in the static IP address you have set on the DVR. However, if the IP address of the DVR is assigned by a DHCP server (see “[5.5.1 Network](#)”), then it means that each time you reboot the DVR, the IP address changes. In this case, ask if your ISP can provide you a static IP address. If not, then configure the DDNS service. See the network settings in “[5.5.4 DDNS](#)”.

System Environment Requirements

The minimum requirements for hardware and OS required to run Web Client are given as below.


Item	Minimum	Recommended
CPU	Intel i3	Intel i7 or higher
RAM	4G or more	8G or more
Hard Drive	500G or more	1000G or more
Display RAM	2G or more	4G or more
Display Resolution	1280*1024	1920*1080
OS	Windows® Vista, Windows® 7 ,Windows® 8 Mac OS X® 10.9 and above	
DirectX	DirectX 11	
Direct3D	Acceleration Function	
Ethernet Adapter	10/100M Ethernet Adapter	
IE	Microsoft Internet Explorer (Ver. 11,10,9,8)	
Mozilla Firefox	43.0.4 or above	
Google Chrome	V44or below	
Mac Safari	5.1 or above	

6.1 Web Plugin Download and Installation


To access the Web Client, do the following:

For IE/Chrome/Firefox:


- 1) Launch the explorer on your PC and enter the DVR static IP address or DDNS domain name (Host Name) you have set on DVR in the URL box.

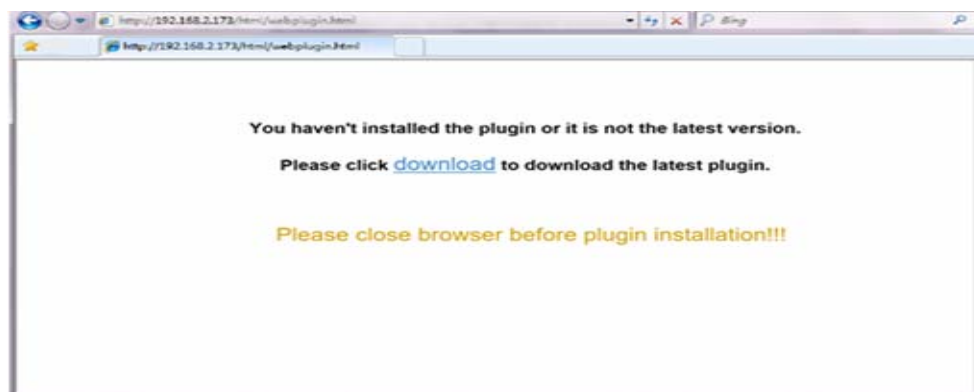

2) For the first time you run the web client, system will require to install the web client plugin. Click [download](#) to download the plugin and install to your computer.

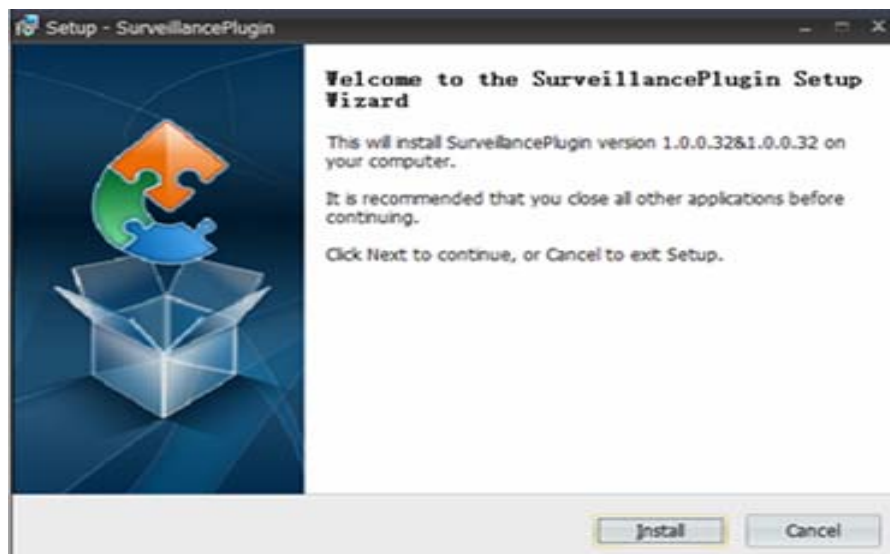


3) After installing the plug-in, close & launch again your browser and repeat step 1 to open the login page. Input your user name and password to login the web client.

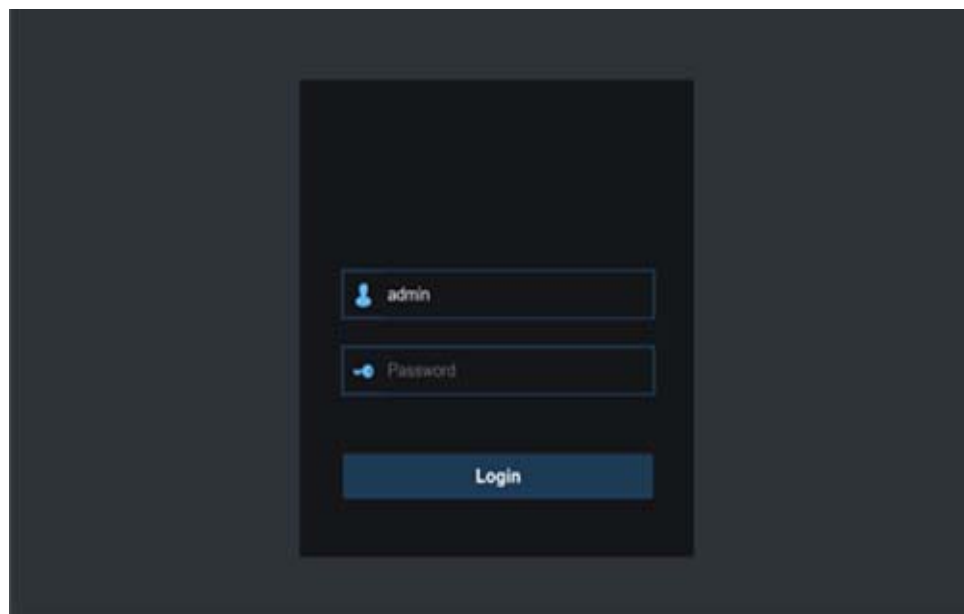

Note: If you use Google Chrome, please use Version V41 or below. If you use V42 to V44, you need to enable NPAPI plugins. Please enter <chrome://flags/#enable-npapi> on URL bar to find and enable NPAPI. It doesn't support V45 or above so far.

For Mac SAFARI:


1) Launch the Safari on your Mac, and enter the DVR static IP address or DDNS domain name (Host Name) you have set on DVR in the URL box.

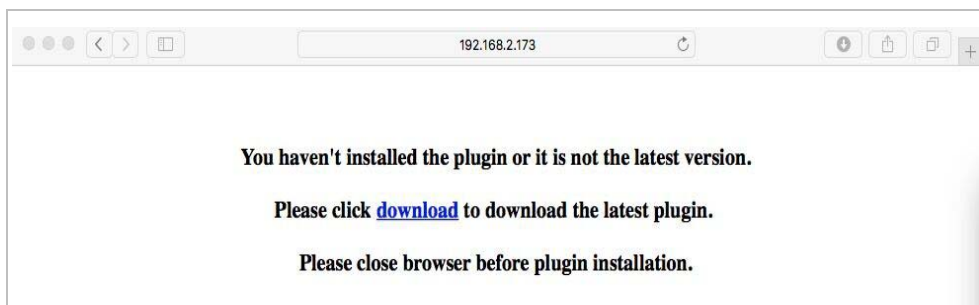

2) Download the plug-in "SurveillanceClient.dmg", locate the downloaded file and double click it.



3) Click on "Continue" -->"Install". Enter user name and password for Mac computer, Click on "Install Software" -->"Close" to finish installation.

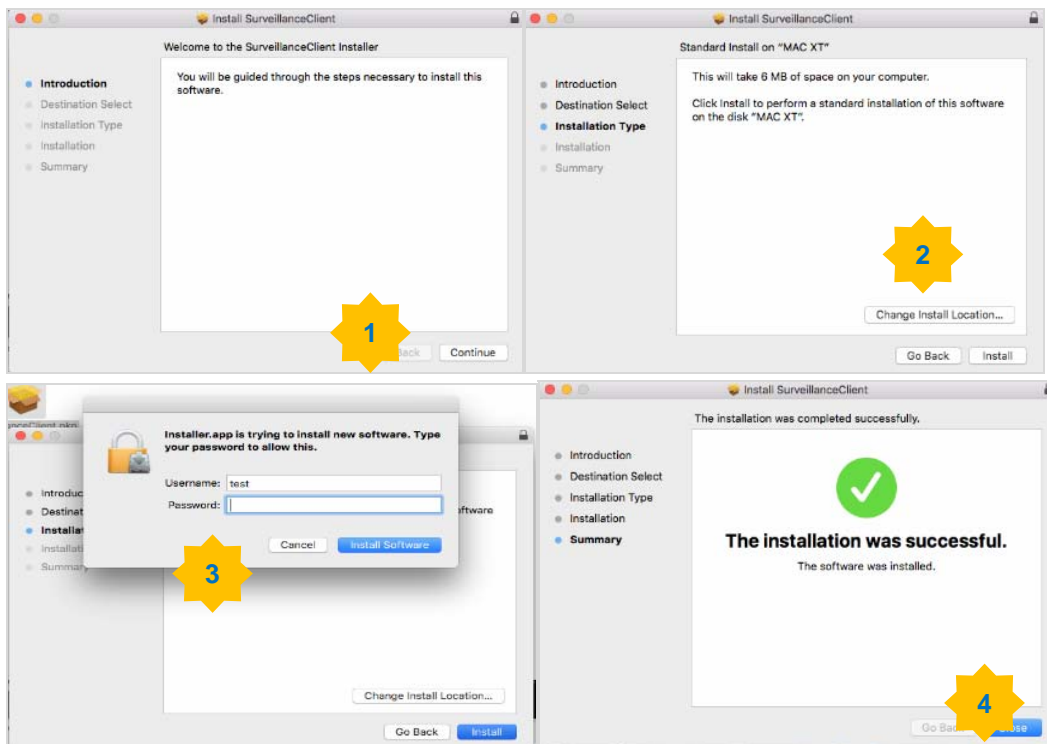


3) Close SAFARI repeat step 1 to open the Web Client login page.

6.2 Web Client Manager

The web client supports to full control the DVR with administrator account. Please make sure to protect your user name & password for preventing illegal login.

6.2.1 Live Interface

This is the first screen that opens after you have logged in to the Web Client. Here you can open or close live preview, record video to local computer manually, take snapshots of the screens, PTZ control, color adjustment, etc.

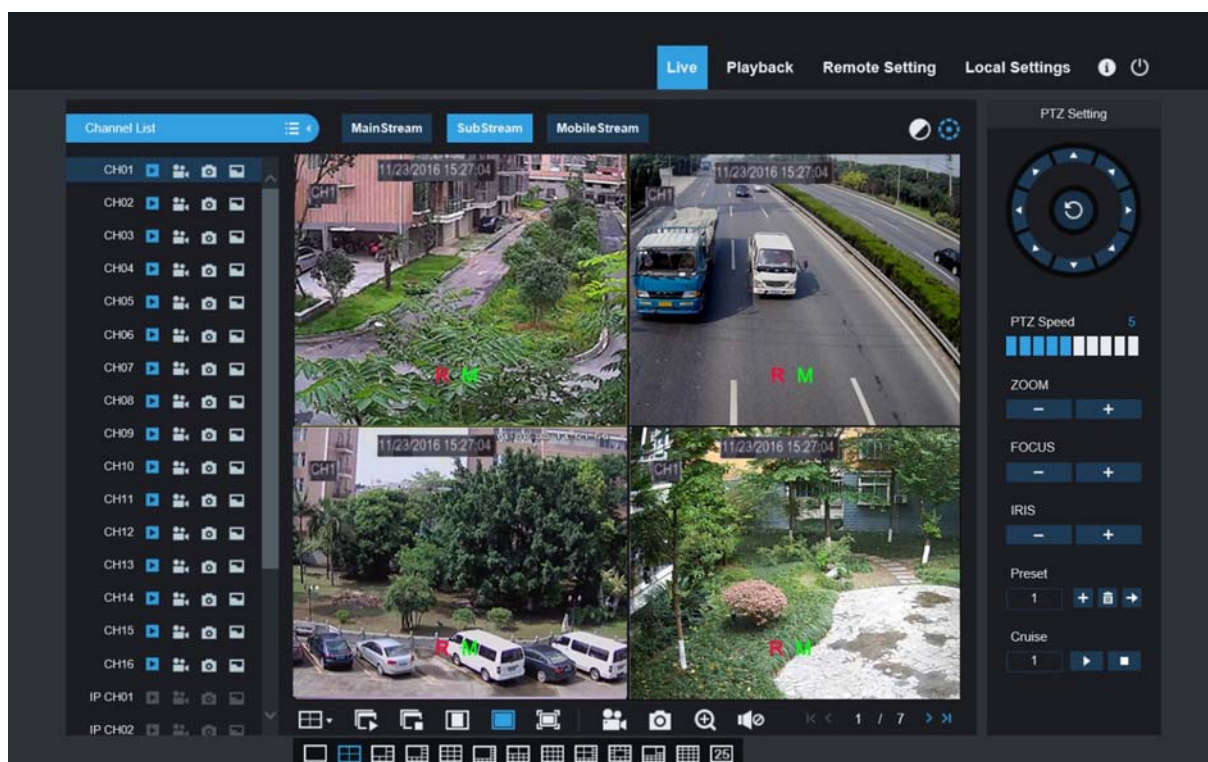

1. Buttons on a single live interface:



: Volume switch



: Record switch: the remote record switch of client. Record will be automatically saved to a specified position on PC after the function is enabled.



: Snapshot: Capture the selected live image and save it to a specified position on PC. The image is saved as *.bmp format.



: Digital ZOOM.



: Open the images on Live window.



: Close all the Live channels



: Switch display mode in channel window



: Open the images on Live window.



: Stretch.




: Original proportions.



: Click to maximize the current window to full screen. Right click to popup menu option and select Exit Full Screen.

2. Video Control

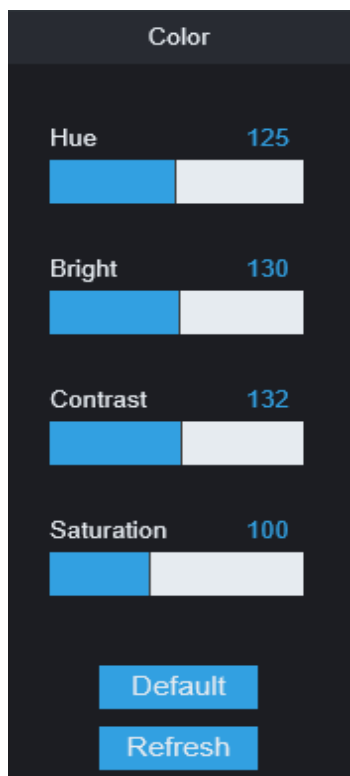

Hue: Adjust the chromaticity of video

Bright: Adjust the brightness of video


Contrast: Adjust the contrast of video

Saturation: Adjust the saturation of video


3. PTZ Control




: PTZ direction control and automatic scanning button

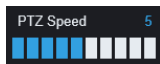

: PTZ movement speed adjustment

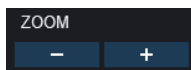

: Adjust the zoom +, -

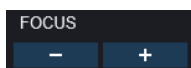


: Adjust FOCUS +, -



: Adjust the IRIS +, -




: Set, clear and jump points

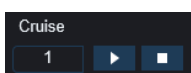

: Start cruising and stop cruising

6.3.2 Playback

You can search & play recorded files stored on the HDD inside the DVR, and save the result to the local directory on your PC.

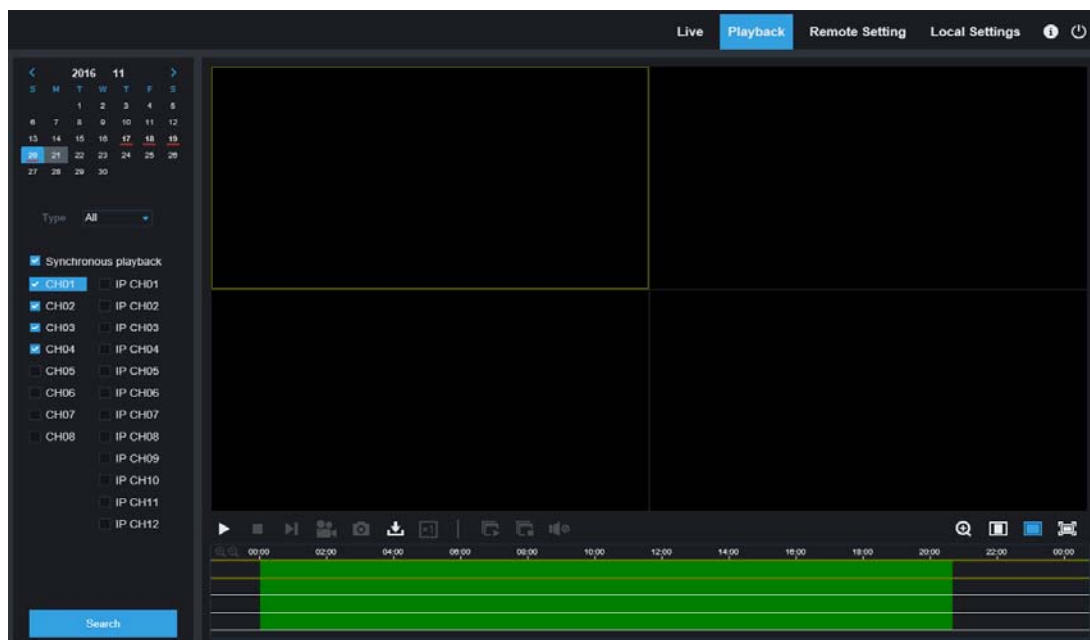


Click **Playback** to enter into Playback interface to remotely view the records in DVR HDD. It supports 1 to 4 channel record playback.

1. Record Search


Record playback procedure

Firstly, select the date you want to check and tick 1 to 4 channels. Any record files in current channel at current date will be displayed in the status bar of the interface.

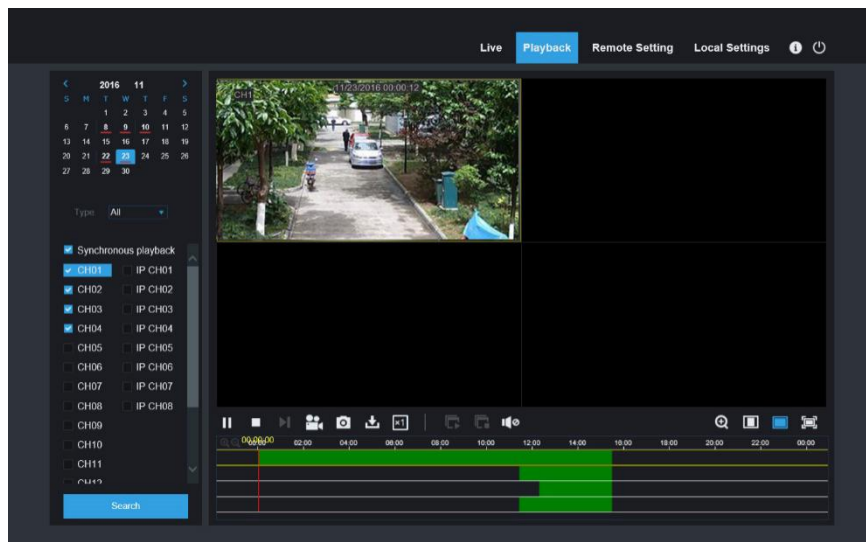




Secondly, select record type (Normal record, Alarm record and All) and channels, and then click

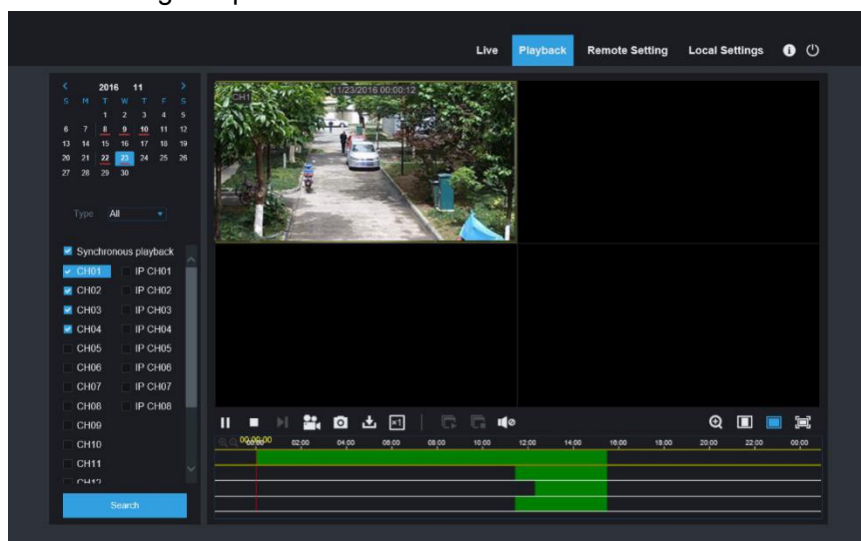

“**Search**”, and time axis panel will display specific time quantum. On the time axis, red part stands for alarm record, yellow stands for normal record and original part stands for no record during this period.




Before playback, choose to enable playback 4 channels synchronously. If you tick-select “**Synchronous playback**”, that means the selected channel will playback synchronously; otherwise, you could separately control the channels playback. Thirdly, start playback

Click  to start record playback. When mouse curse is moving on the time axis, the time point of current position will be displayed on the time axis screen. Click to locate the record. Click the icon  or  to zoom in/out the time bar display ratio.

Sub-stream playback

"Stream" select "SubStream", select the channel, click "Search"  , click "" play. 

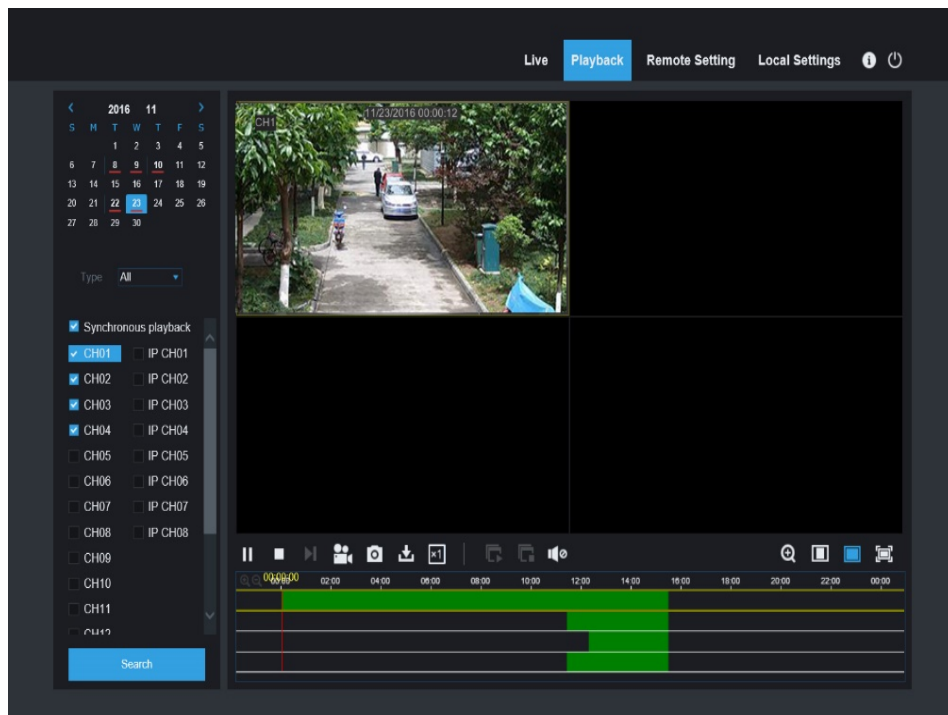


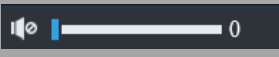














2. Playback Control

Playback control bar.




Detailed brief description is shown as below list


Key	Description	Key	Description
	Play		Enable the volume switch
	Pause		Volume adjustment bar
	Stop		Slow playing 1/2, 1/4, 1/8, Fast playing 1/2/4/8
	By frame		Digital ZOOM
	Record Clip		Original proportions
	Snap		Stretch
	Download		Full Screen
	Open all the playback channels		Stop playing all the playback

Record file clip




After opening playback, click  icon to clip the selected file; and click again to stop the clip function. Then playback clip is successfully done. Record clip file will be saved as *.264 format.

Snapshot function

Move the mouse cursor to the channel you want to capture, and click  icon to capture the live images remotely. After capturing the images successfully, a path prompt box will be popped up. The captured file will be saved as .bmp format.

Record file download



Click download icon “” on the control bar to display all the matched record file according to the search conditions of channels.

	<input type="checkbox"/>	Start Time	End Time	Status	File Size
1	<input type="checkbox"/>	2016-11-20 00:00:00	2016-11-20 00:00:49	Unable to Download	49.50M
2	<input type="checkbox"/>	2016-11-20 00:01:17	2016-11-20 00:01:17	Unable to Download	0.50M
3	<input type="checkbox"/>	2016-11-20 00:01:19	2016-11-20 00:01:25	Unable to Download	5.50M
4	<input type="checkbox"/>	2016-11-20 00:01:27	2016-11-20 00:01:30	Unable to Download	3.00M
5	<input type="checkbox"/>	2016-11-20 00:01:31	2016-11-20 00:01:32	Unable to Download	1.00M
6	<input type="checkbox"/>	2016-11-20 00:01:34	2016-11-20 00:01:36	Unable to Download	2.50M
7	<input type="checkbox"/>	2016-11-20 00:01:37	2016-11-20 00:01:38	Unable to Download	1.50M
8	<input type="checkbox"/>	2016-11-20 00:01:41	2016-11-20 00:03:30	Unable to Download	109.50M
9	<input type="checkbox"/>	2016-11-20 00:03:30	2016-11-20 00:07:43	Unable to Download	253.56M
10	<input type="checkbox"/>	2016-11-20 00:07:43	2016-11-20 00:11:56	Unable to Download	253.72M

10

1 / 32

Show from 1 to 10, total 314. Per page : 10

Start Download


Stop Download

Tick-select the record file you want to download and click [Start download] .System will download the record file in sequence and save to local PC. The downloading file will be displayed in percentage form. After downloading finishes, “Complete” will be displayed on the status bar.


Tip: The recorder supports HTTP, if there is network disconnection during the download, continue to download from the file point before disconnecting when the network recovers.

6.3.3 Remote Setting

Here you can remotely configure the settings of the DVR. Please see “[Chapter 5 DVR Menu](#)” for more information.

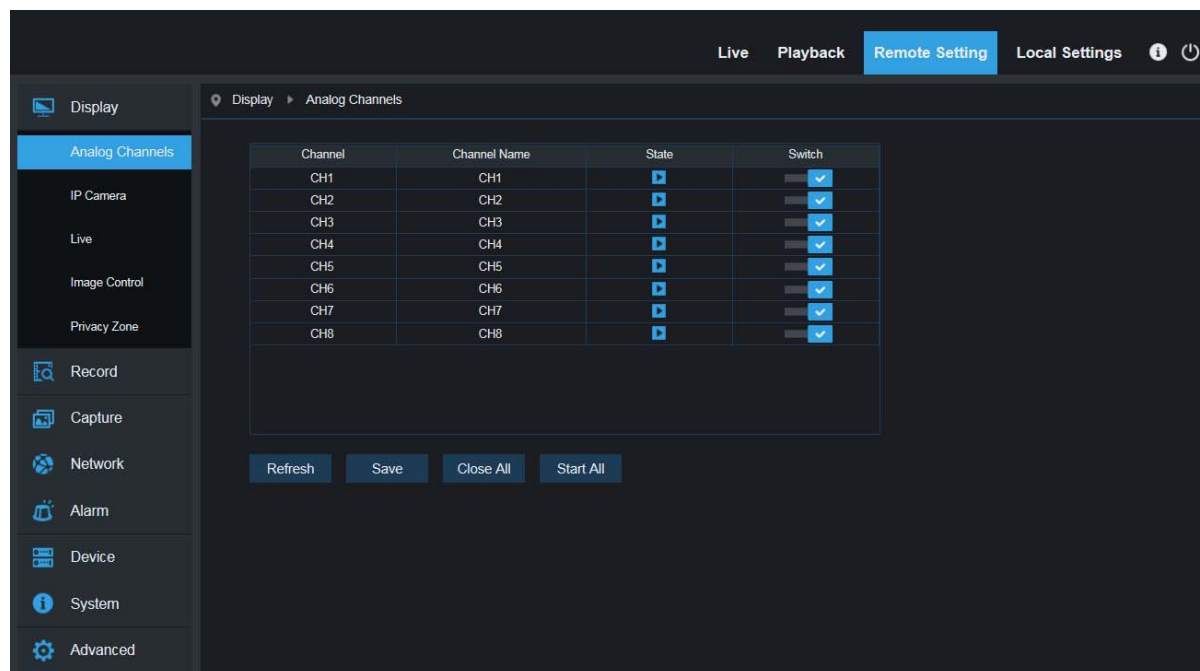

6.3.4 Local Setting

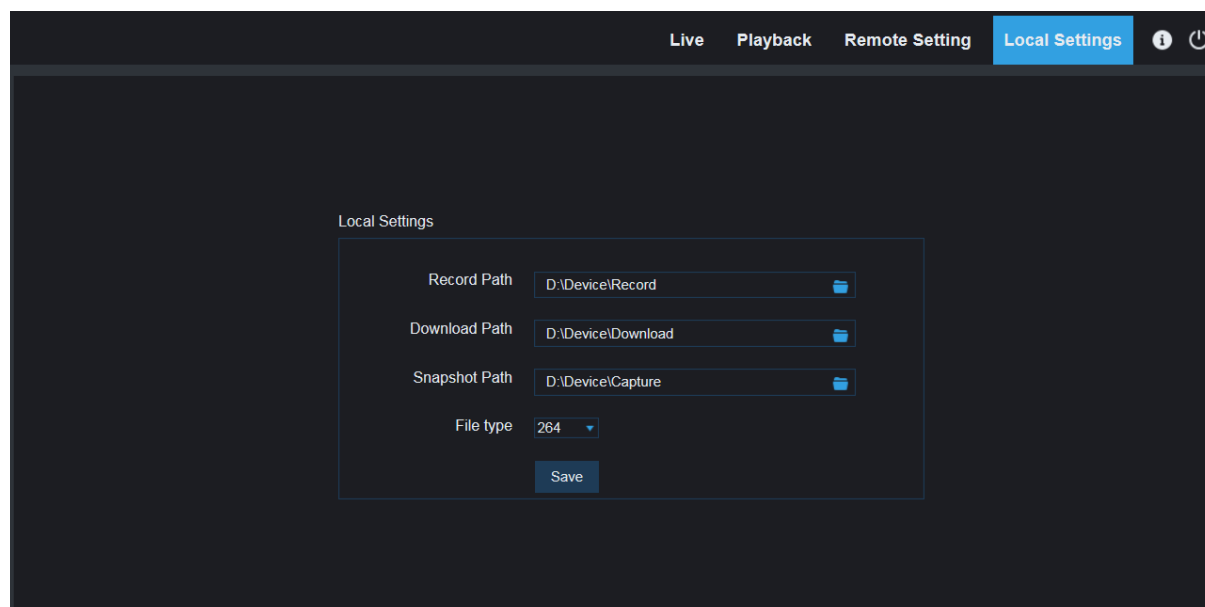

Record Path: Set the path to save manual recordings on your PC's local drive.

Download Path: Set the path on your PC's local drive where you want to download recordings from the DVR.

Snapshot Path: Set the path to save manual snapshots on your PC's local drive.

Save: Click Save to save the modifications.

File Type: Choose your preferred file type for manual recordings.

Interval: Determine the maximum length of manual recordings.

Chapter 7 Appendix

7.1 Troubleshooting

1. Q: What can I do if the system does not detect the HDD?
A: Check if the power supply system is properly connected and data cord and power cables are securely connected, and if something wrong with the HDD interface. Or you may check if your HDD is supported by referring to the specifications or descriptions.
2. Q: I have changed the password but forget the new password, how can I access the system?
A: If you forget system password, please consult with our technical personnel. We strongly suggest user to set password easy to be remembered and relatively safe. If you have safety requirement, please do not set very simply password, such as 000000.
3. Q: We see abnormal video signal or even no video signal by connecting the DVR and camera together. Power supply for both devices is OK. What is wrong?
A: Check network cable at DVR side to see if the cable is firmly connected and if it is worn out and needs to be replaced, or to check if NTSC or PAL is selected consistently.
4. Q: How to prevent DVR from being influenced by heat?
A: The DVR needs to dissipate heat while it is running. Please place the DVR in a place with good air circulation and away from heat sources to ensure stability and life of the DVR.
5. Q: The remote controller of DVR doesn't work while the monitor screen is OK and panel keys are functional. Why?
A: Operate again by aiming the remote controller at the IR receiver on front panel. If it still doesn't work, please check if the batteries in the remote controller are dying. If not, check if the remote controller is broken.
6. Q: I want to take out HDD from my PC and install it in DVR. Can it work?
A: All HDDs supported by the system can be used. But remember, once DVR runs, the data on your HDD will be lost.
7. Q: Can I playback while recording?
A: Yes. The system supports the function of playing while recording.
8. Q: Can I clear some records on HDD of DVR?
A: In consideration of the file security, you may not clear part of records. If you want to remove all the records, you can format HDD.
9. Q: Why can't I log in DVR client?
A: Please check if the network connection settings are correct and RJ-45 port is with good contact. And check if your account and password are correctly input.
10. Q: Why can't I find any records during playback?

A: Please check if the data line connection for HDD is OK and system time is properly adjusted. Try a few times and restart. If it still doesn't work, check if the HDD is broken.

11. Q: Why DVR cannot control PTZ?

A: Please check if:

- a) PTZ in the front side is malfunctioned.
 - b) Setting, connection and installation of PTZ decoder are not correct.
 - c) PTZ setting of DVR is not correct.
 - d) Protocol of PTZ decoder does not match that of DVR.
 - e) Address of PTZ decoder does not match that of DVR.
 - f) If many decoders are connected, the farthest side of AB line of PTZ decoder should be added 120Ω resistance to realize reflection suppression and impedance matching.
- Otherwise, PTZ control will be unstable.

12. Q: Why doesn't dynamic detection work?

A: Please check if the motion detection time and motion detection regional setting are correct and if the sensitivity is set too low.

13. Q: Why doesn't alarm work?

A: Please check if the alarm setting, alarm connection and alarm input signals are correct.

14. Q: Why does buzzer keep alarming?

A: Please check the alarm setting, check if motion detection function is enabled and object motion is detected all the time and if I/O alarm is set as Always Off. Besides, refer to corresponding HDD alarm setting.

15. Q: Why can't I stop recording by pressing "STOP" button or click "Stop Recording" in context menu?

A: Pressing Stop or Stop Recording can only stop manual record. If you want to stop Scheduled recording in certain time quantum, please change the setting to No Record. To stop Startup recording, please change record mode to scheduled recording or manual recording. Then you may stop recording by the prescribed methods. And another way of stopping recording is to set channel as off status in record setting.

7.2 Usage Maintenance

1. To shut down DVR, please firstly shut down the system and then turn off the power. Do not turn off the power directly or HDD data will be lost or damaged.
2. Please keep DVR away from heat sources or places.
3. Clean the internal dust regularly. Make sure the good ventilation of DVR so as to ensure the good heat dissipation.
4. Please do not hot plugging audio and video cables, or cables connected to ports like RS-232 or RS-485. Otherwise the ports will be damaged.
5. Please check the HDD cable and data cable regularly to see if they are ageing.
6. Please prevent the audio and video signals of DVR from being intervened by other electronic devices, and prevent the HDD from being damaged by static electricity and induced voltage. If

the network cable is frequently plugged, it is suggested to replace connecting line regularly, or the input signal may be unstable.

7. This is a class A product. It maybe bring wireless interference in life. Under this situation, it need user to make measures.

7.3 Accessories (For reference only)



☐ Remote Controller



☐ Power Adapter



☐ Warranty Card



☐ USB mouse



☐ CD

The material in this document is the intellectual property of our department .

No part of this manual may be reproduced, copied, translated, transmitted, or published in any form or by any means without our department prior written permission.

Our products are under continual improvement and we reserve the right to make changes without notice. But no guarantee is given as to the correctness of its contents.


We do not undertake any responsibility for the harms cause by using our product.

The model of the products in the user's manual only for recognition, but these names also perhaps are belong to other company's registered trademark or the copyright.

The product picture may differ from the actual product, only for your reference. The accessories will probably be different according to the different selling areas. For details of accessories, please refer to your local distributor.

Copyright reserved

Your local distributor



All contents of this document may change without prior notice
All rights are reserved.